# **GENERAL-PURPOSE THERMAL** LABEL/TAG PRINTER

Models:

**B-482-QP B-482-QQ** 

# **EXTERNAL EQUIPMENT INTERFACE SPECIFICATION**

First Edition: Second Edition: July 28, 1999 Third Edition:

June 25, 1999 October 26, 1999

**TOSHIBA TEC CORPORATION** 

		Page
1.	SCOPE	1
2.	GENERAL DESCRIPTION	1
3.	INTERFACE	2
3.	1 SERIAL INTERFACE	2
3.		
3.	3 NETWORK ITNERFACE	13
4.	KEY OPERATION FUNCTIONS	14
4.	1 SYSTEM MODE FUNCTIONS	14
4.		
4.	3 DOWNLOAD MODE SETTING FUNCTION	18
5.	TRANSMISSION SEQUENCE	19
6.	INTERFACE COMMANDS	23
6.	1 OUTLINE OF COMMANDS	23
6.	2 LIST OF COMMANDS	24
6.	3 LABEL SIZE SET COMMAND	25
6.	4 POSITION FINE ADJUST COMMAND	30
6.	5 PRINT DENSITY FINE ADJUST COMMAND	36
6.		
6.		
6.		
6.		
	10 BIT MAP FONT FORMAT COMMAND	
	11 OUTLINE FONT FORMAT COMMAND	
	12 BAR CODE FORMAT COMMAND	
	13 BIT MAP FONT DATA COMMAND 14 OUTLINE FONT DATA COMMAND	
	15 BAR CODE DATA COMMAND	
	16 ISSUE COMMAND	
	17 FEED COMMAND	
-	18 EJECT COMMAND	
	19 FORWARD/REVERSE FEED COMMAND	
	20 STORAGE AREA ALLOCATE COMMAND	
	21 MEMORY CARD FORMAT COMMAND	
6.	22 2-BYTE WRITABLE CHARACTER CODE RANGE COMMAND	153
6.	23 BIT MAP WRITABLE CHARACTER COMMAND	154
	24 GRAPHIC COMMAND	
	25 SAVE START COMMAND	
	26 SAVE TERMINATE COMMAND	
6.	27 SAVED DATA CALL COMMAND	176

# TABLE OF CONTENTS

### Page

6	6.28 HEAD BROKEN DOTS CHECK COMMAND	177
6	6.29 MESSAGE DISPLAY COMMAND	178
6	6.30 RESET COMMAND	180
6	6.31 STATUS REQUEST COMMAND	181
6	6.32 VERSION INFORMATION ACQUIRE COMMAND	182
6	6.33 ATA CARD INFORMATION ACQUIRE COMMAND	183
6	6.34 ATA CARD WRITABLE CHARACTER INFORMATION ACQUIRE COMMAND	185
6	6.35 IP ADDRESS SET COMMAND	186
7	CONTROL CODE SELECTION	187
••		107
8.		188
9.	STATUS RESPONSE	192
•		
10.	. LCD MESSAGES AND LED INDICATIONS	. 197
11.	. LCD MESSAGES IN DIFFERENT LANGUAGES	200
12.	. CHARACTER CODE TABLE	203
13	BAR CODE TABLE	218
	DRAWING OF BAR CODE DATA	004
14.	. DRAWING OF BAR CODE DATA	231
15.	. AUTOMATIC ADDING OF START/STOP CODE	252

# 1. SCOPE

This specification applies to the external equipment interface for use with the Model B-482-QQ/B-482-QP general purpose thermal label/tag printers.

# 2. GENERAL DESCRIPTION

The external equipment interface connects the host computer with a printer through a serial interface (RS-232C), parallel interface (Centronics), or a network for making various settings and printing labels.

This specification describes how to use the external equipment interface.

The model configuration and the differences between the B-482-QQ and the B-482-QP are described below.

			B-482-TS10-QQ	B-482-TS12-QP	
	Flas	h ROM	2 MB × 2 = 4 MB		
Memory		Whole	8 MB × 2 = 16 MB		
	DRAM	Image buffer of whole DRAM	5 N	ЛВ	
	Sta	Indard	RS-232C		
Interface	Standard		Centronics		
	0	ntion	TCP/IP		
Option		PCMCIA			
PCMCIA board			Opt	ion	
Rotary cutter			Option		
Swing cutter			Option		
Strip module			Opt	ion	
Ribbon save module			Option Standard		
Expansion I/O interface board			Opt	ion	
Rewinder			Opt	ion	

# 3. INTERFACE

# 3.1 SERIAL INTERFACE

(1)	Туре	:	Conforming to R	S-232C
(2)	Mode of Communication	:	Full duplex	
(3)	Transmission Speed	:	2400 BPS 4800 BPS 9600 BPS 19200 BPS 38400 BPS	
(4)	Synchronization Method	:	Start-stop synchi	ronization
(5)	Start Bit	:	1 bit	
(6)	Stop Bit	:	1 bit 2 bits	
(7)	Data Length	:	7 bits 8 bits	
(8)	Parity	:	None Even Odd	
(9)	Error Detection	:	Parity Error Framing Error Overrun Error	Vertical parity error check This error occurs if no stop bit is found in the frame specified starting with the start bit. This error occurs if the next data is input before the data input to the UART from the host is read by the printer CPU.
(10)	Protocol	:	No-procedure me	
(11)	Data Input Code	:	ASCII code European charac Graphics 8 bit co	cter set 8 bit code ode
(12)	Receive Buffer	:	10K bytes	

- (13) Transmission Control : XON/XOFF (DC1/DC3) Protocol READY/BUSY (DTR) Protocol XON/XOFF (DC1/DC3) Protocol + READY/BUSY (DTR) Protocol RTS Protocol
  - ① XON/XOFF (DC1/DC3) Protocol
    - When initialized after power on, this printer becomes ready to receive data and sends an XON code (11H). (Transmission or non-transmission of the XON code is selectable by means of the parameter setting.)
    - The printer sends an XOFF code (13H) when the blank positions in the receive buffer become 800 bytes or less.
    - The printer sends an XON code (11H) when the blank positions in the receive buffer are 2K bytes or more.
    - When there are no blank positions in the receive buffer, the printer discards data received exceeding the receive buffer capacity, without storing it in the buffer. (After detecting the XOFF code, the host computer must stop transmission before the printer receive buffer becomes full.)
    - The printer sends an XOFF code (13H) when the power is off. (Transmission or nontransmission of the XOFF code is selectable by means of the parameter setting.)
    - The DTR signal is always "High" (READY).
    - The RTS signal is always "High".

#### 2 READY/BUSY (DTR) Protocol

- When initialized after power on, this printer becomes ready to receive data and turns the DTR signal to "High" level (READY).
- The printer turns the DTR signal to "Low" level (BUSY) when the blank positions in the receive buffer are 800 bytes or less.
- The printer turns the DTR signal to "High" level (READY) when the blank positions in the receive buffer are 2K bytes or more.
- When there are no blank positions in the receive buffer, the printer discards data received exceeding the receive buffer capacity, without storing it in the buffer. (After detecting the BUSY signal, the host computer must stop transmission before the printer receive buffer becomes full.)
- The RTS signal is always "High".

- ③ XON/XOFF (DC1/DC3) Protocol + READY/BUSY (DTR) Protocol
  - When initialized after power on, this printer becomes ready to receive data and turns the DTR signal to "High" level (READY). It also sends an XON code (11H).
  - When the blank positions in the receive buffer are 800 bytes or less, the printer turns the DTR signal to "Low" level (BUSY) and sends an XOFF code (13H).
  - When the blank positions in the receive buffer are 2K bytes or more, the printer turns the DTR signal to "High" level (READY) and sends an XON code (11H).
  - When there are no blank positions in the receive buffer, the printer discards received exceeding the receive buffer capacity, without storing it in the buffer. (After detecting the XOFF code or BUSY signal, the host computer must stop transmission before the printer receive buffer becomes full.)
  - The printer sends an XOFF code (13H) when the power is off.
  - The RTS signal is always "High".
- ④ RTS Protocol
  - When initialized after power on, this printer turns the RTS signal to "High" (READY).
  - The printer turns the RTS signal to "Low" level (BUSY) when the blank positions in the receive buffer are 800 bytes or less.
  - The printer turns the RTS signal to "High" level (READY) when the blank positions in the receive buffer are 2K bytes or more.
  - When there are no blank positions in the receive buffer, the printer discards data received exceeding the receive buffer capacity, without storing it in the buffer. (After detecting the BUSY signal, the host computer must stop transmission before the printer receive buffer becomes full.)
  - The DTR signal is always "High" (READY).

# (14) Input/Output Signals


	50	
	FG	
	TD	
	RD	
	RTS	
Printer	CTS	Host CPU
	DSR	
	SG	
	DTR	

# (15) Connector Pin Assignment and Signal Description

Pin No.	Signal Name	Function	Signal Direction
1	FG	Ground line for circuit protection	
2	RD	<ul> <li>Line for data which the printer receives from the host.</li> <li>Logic 1 is a Low level, while logic 0 is a High level.</li> <li>It is in the Low (Mark) state when no transmission is in progress.</li> </ul>	← Host
3	TD	<ul> <li>Line for data which the printer sends to the host.</li> <li>Logic 1 is a Low level, while logic 0 is a High level.</li> <li>It is in the Low (Mark) state when no transmission is in progress.</li> </ul>	Printer $\rightarrow$
4	CTS	<ul> <li>It is an input signal indicating whether or not the data transmission to the host is possible. However, this printer does not detect this signal.</li> </ul>	
5	RTS	<ul> <li>Output signal to the host.</li> <li>For the RTS protocol:</li> <li>It indicates the ready state for the received data.</li> <li>It is at "Low" when the receive buffer is nearly full, and at "High" when nearly empty.</li> <li>For protocol other than the RTS protocol:</li> <li>After the power is turned on, it is always at "High" level.</li> </ul>	Printer →
6	DTR	<ul> <li>Output signal to the host.</li> <li>Output signal to the host.</li> <li>For the READY/BUSY (DTR) protocol or XON/XOFF (DC1/DC3) protocol + READY/BUSY (DTR) protocol:</li> <li>It indicates the ready state for the received data.</li> <li>It is at "Low" level when the receive buffer is near full, and at "High" level when near empty.</li> <li>For the XON/XOFF (DC1/DC3) protocol or RTS protocol:</li> <li>After the power is turned on, it is always at "High".</li> </ul>	Printer →
7	SG	<ul> <li>Ground line for all data and control signals.</li> </ul>	
20	DSR	<ul> <li>Input signal from the host.</li> <li>For the READ/BUSY (DTR) protocol or XON/XOFF (DC1/DC3) protocol + READY/BUSY (DTR) protocol:</li> <li>For the printer to receive data, it must be at "High" level.</li> </ul>	← Host


### (16) Interface Circuit

• Input Circuit

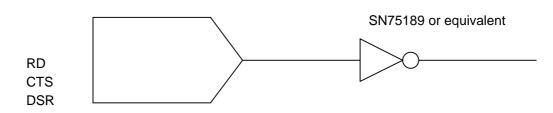

• Output Circuit

SN75188 or equivalent

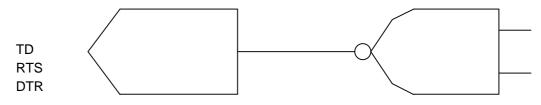


• Signal Levels

Input Voltage	H +3 ~ +15V L3 ~ -15V
Output Voltage	H +6 ~ +13V L6 ~ -13V

## 3.2 PARALLEL INTERFACE

(1)	Туре	:	Centronics
(2)	Mode	:	Conforms to IEEE1284 compatible mode
(3)	Data Input Method	:	Parallel 8 bits (DATA1 ~ 8)
(4)	Control Signals	:	ACK, BUSY, SELECT, DATA • STB, FAULT, PE, INIT, AUTOFD, SELECTIN (Not used)
(5)	Data Input Code	:	ASCII code European character set 8 bit code Graphics 8 bit code
(6)	Receive Buffer	:	10K bytes

(7) Input/Output Circuit Configuration and Input/Output Conditions :

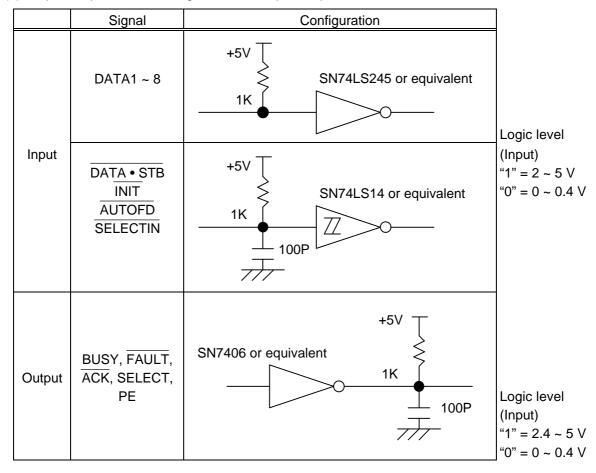


 (8) Connector
 : Printer Amp. Japan 552742-1 or equivalent DDK 57RE-40360-73B or equivalent

 Cable Amp. Japan 552470-1 or equivalent DDK 57E-30360 or equivalent

# (9) Connector Pin Diagram:


Pin No.	Signal Name	Pin No.	Signal Name
1	DATA • STB	19	TWISTED PAIR GND (PIN1)
2	DATA 1	20	TWISTED PAIR GND (PIN2)
3	DATA 2	21	TWISTED PAIR GND (PIN3)
4	DATA 3	22	TWISTED PAIR GND (PIN4)
5	DATA 4	23	TWISTED PAIR GND (PIN5)
6	DATA 5	24	TWISTED PAIR GND (PIN6)
7	DATA 6	25	TWISTED PAIR GND (PIN7)
8	DATA 7	26	TWISTED PAIR GND (PIN8)
9	DATA 8	27	TWISTED PAIR GND (PIN9)
10	ACK	28	TWISTED PAIR GND (PIN10)
11	BUSY	29	TWISTED PAIR GND (PIN11)
12	PE	30	TWISTED PAIR GND (PIN31)
13	SELECT	31	INIT
14	AUTOFD (Not used)	32	FAULT
15	NC	33	0V
16	0V	34	NC
17	CHASSIS GND	35	NC
18	+5V	36	SELECTIN (Not used)

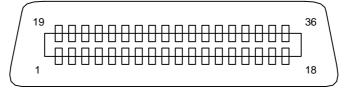

- (10) Input/Output Signals :
  - ① DATA 1 ~ 8 (Printer  $\leftarrow$  Host)
    - Input data signals for the 1st to 8th bits.
    - Logic 1 is "High" level.
    - Min. data pulse width of 2.5 µsec.
  - ②  $\overline{\text{DATA} \cdot \text{STB}}$  (Printer  $\leftarrow$  Host)
    - Synchronizing signal for reading the above data.
    - Normally at "High" level. The data is read at the rise of the Low level pulse.
    - Minimum data pulse width of 0.5 µsec.
  - ③ BUSY (Printer  $\rightarrow$  Host)
    - This signal indicates that the printer is in a BUSY state.
    - When initialized after power on, the printer becomes ready to receive data and turns the signal to "Low" level.
    - The signal turns to "High" level (in a BUSY state) when data is set from the host (at the fall of the DATA STB signal).
    - The signal turns to "Low" level when the printer reads the data.
    - When the blank positions in the receive buffer are 512 bytes or less, the printer keep the signal at "High" level (in a BUSY state) for 10 seconds when data is set from the host, to extend the data read interval.
    - When there are no blank positions in the receive buffer, the printer stops reading data. Then, it keeps the signal at "High" level (in a BUSY state) until there are blank positions in the receive buffer when data is set from the host.
    - The signal is kept at "High" level (in a BUSY state) until the current state (one of the following states) is reset.
      - PAUSE state caused by the [PAUSE] key
      - Paper End state
      - Ribbon End state
      - Head Open state
      - Printer Error state
      - Initialization in progress upon receipt of the INIT signal
  - ④  $\overline{\mathsf{ACK}}$  (Printer  $\rightarrow$  Host)
    - This signal indicates that the printer has read the data set by the host and is ready to receive the next data.
    - One of 2 types of timing for ACK can be selected.
    - One is normally at "High". The ACK signal should be sent to match the fall of the BUSY signal and the end of the LOW level of the ACK signal for about 0.7 µsec. The host should usually set data to the default after the ACK signal is turned from "Low" to "High", or after the fall of the BUSY signal.
    - The other is normally at "High". It is at "Low" for about 5 µsec. after the fall of the BUSY signal. The host should usually set data after the ACK signal is turned from "Low" to "High".

- $\bigcirc$  **INIT** (Printer ← Host)
  - Reset request signal from the host.
  - Normally at "High" level. A low on this input causes the printer to be initialized in the same manner as when the power is turned on.
  - When the INIT signal is input during printing, the printer finish printing one tag label in printing and then cancels the next processing and is initialized in the same manner as when the power is turned on.
  - Minimum pulse width of 0.5 µsec.
- $\bigcirc$  SELECT (Printer  $\rightarrow$  Host)
  - This is an output signal which indicates whether the printer is in PAUSE state or placed online. The printer can receive data while placed on-line.
  - The signal is at "Low" level while the printer is in a PAUSE state.
  - The signal is kept at "Low" level (in a PAUSE state) until the current state (one of the following states) is reset.
    - PAUSE state caused by the [PAUSE] key
    - Paper End state
    - Ribbon End state
    - Head Open state
    - Printer Error state
    - Initialization in progress upon power on or receipt of the INIT signal
- ⑦  $\overline{\mathsf{FAULT}}$  (Printer → Host)
  - Output signal indicating that the printer is in a FAULT state.
  - At "Low" level while the printer is in a FAULT state.
  - The signal is kept at "Low" level (in a FAULT state) until the current state (one of the following states) is reset.
    - PAUSE state caused by the [PAUSE] key
    - Paper End state
    - Ribbon End state
    - Head Open state
    - Printer Error state
    - Initialization in progress upon power on or receipt of the INIT signal
- $\otimes$  PE (Printer  $\rightarrow$  Host)
  - Output signal indicating a Label End or Ribbon End state.
  - At "High" level when a Label End or Ribbon End state occurs.
  - Turns to "Low" level when the Label End or Ribbon End state is reset.
- 9 +5 V
  - This is not a signal but a +5 V power supply voltage.
  - The maximum current of 500 mA can be taken out.
- (1)  $\overline{\text{SELECTIN}}$  (Printer  $\leftarrow$  Host)
  - Not used
- ⊕ **AUTOFD** (Printer ← Host)
  - Not used

- (11) Timing Chart
  - When receiving normal data:
     One of two types of timing for BUSY-ACK can be selected.
    - (1) Timing 1 (Default)

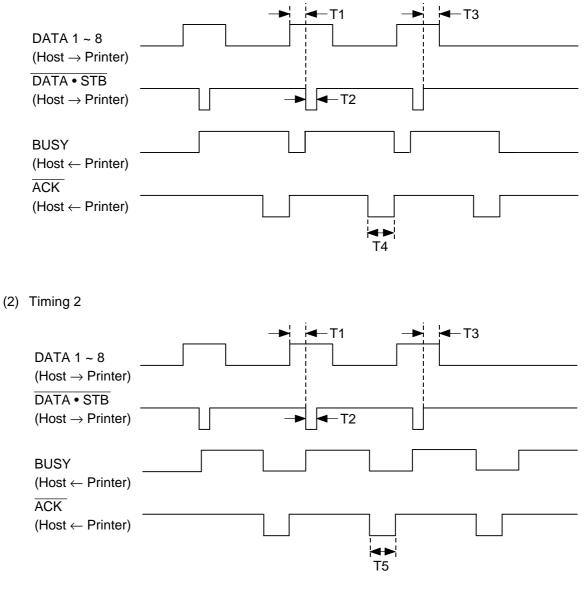


T1 = Min. 1  $\mu$ sec. T2 = Min. 0.5  $\mu$ sec.

T3 = Min. 1 µsec.

T4 = Min. 0.7 µsec.

T5 = Min. 5  $\mu$ sec.


- ② Receiving data when the blank positions in the receive buffer are 512 bytes or less:
  - When the blank positions in the receive buffer are 512 bytes or less, the printer continues to be in a BUSY state (BUSY signal at "High" level) for 10 seconds to extend the data read interval when data is set from the host and reads the data 10 seconds later.
  - If the blank positions are 513 bytes or more while waiting for reading data, the printer will receive the data with the normal data receive timing.
  - When there are no blank positions in the receive buffer, the printer stops reading data. Then, it continues to be in a BUSY state (BUSY signal at "High" level) until there are blank positions in the receive buffer when data is set from the host.

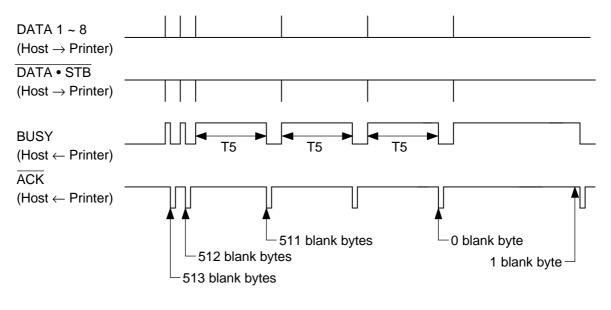


T5 = 10 sec.

# 3.3 NETWORK INTERFACE

(1) Connection Diagram

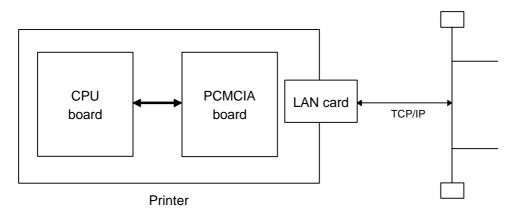

There are two slots (slot 1 and slot 2) for the PC card on the PCMCIA board. The LAN card should be inserted in slot 2. If it is inserted in slot 1, it will not function.

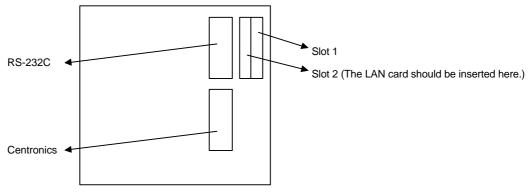

Backside of printer

LAN PC Card manufactured by 3COM. (2) Applicable LAN Card: TCP/IP (3) Protocol: (4) Items for Settings: Host IP address (Initial value: 192.168.10.10) Printer IP address (Initial value: 192.168.10.20) Subnet mask (Initial value: 0xfffff00) Gateway IP address (Initial value: 0.0.0.0) (5) Printer Daemon: This printer starts up as a LPR server. (6) HTTP Server: This printer can be used for the Internet as an HTTP server to browse a home page for following information. TOP menu - Status (Idling/Error) Remaining length of ribbon Head up/down state Label sensor state - Temperature sensor state Maintenance counter

\* For details, refer to the Network Specification (TAA-1183).

# 4. KEY OPERATION FUNCTIONS

## 4.1 SYSTEM MODE FUNCTIONS

The system mode has the following functions for the printer self-test and setting various parameters. (For details, refer to Key Operation Specification.)

- (1) Self-test
  - Maintenance counter, printing various parameters
  - Automatic self-test
  - Head broken dots check

#### (2) Setting various parameters

<ul> <li>Feed fine adjustment</li> </ul>	(± 50.0 mm)
<ul> <li>Cut position fine adjustment</li> </ul>	(± 50.0 mm)
(or strip position fine adjustment)	
<ul> <li>Back feed fine adjustment</li> </ul>	(± 9.5 mm)

- X-coordinate fine adjustment (± 99.5 mm)
- Print density fine adjustment (Thermal transfer/Direct thermal print modes) (± 10)

Type of character code	(PC-850, PC-852, PC-857, PC-8)
Selection of 0 font	(without slash mark [0], with slash mark [0])

Type of control code

- Automatic selection
- Manual selection (ESC, LF, NUL method)
- Manual selection ( {, |, } method)
- Any set code

(Transmissive ribbon, non-transmissive ribbon)

- Strip status selection
   (Selected/Not selected)
- Stacker use setting (Used/Not selected)
- Reflective sensor manual threshold fine adjustment (0.0 V to 4.0 V)
- Transmissive sensor manual threshold fine adjustment (0.0 V to 4.0 V)
- Ribbon motor drive voltage fine adjustment (Rewind) (-15 to 0)
- Ribbon motor drive voltage fine adjustment (Back tension) (-15 to 0)
- RS-232C communication speed: (2400 bps/4800 bps/9600 bps/19200 bps/38400 bps)
- RS-232C data length (7 bits/8 bits)
- RS-232C stop bit length
   (1 bit/2 bits)
- RS-232C parity

Type of ribbon

(NONE/ODD/EVEN)

RS-232C transmission control	<ul> <li>XON/XOFF protocol: (No XON output when the power is on, no XOFF output when the power is off)</li> <li>READY/BUSY protocol: (No XON output when the power is on, no XOFF output when the power is off)</li> <li>XON/XOFF + READY/BUSY protocol (XON output when the power is on, XOFF output when the power is on, XOFF output when the power is off)</li> <li>XON/XOFF protocol (XON output when the power is on, XOFF output when the power is off)</li> <li>RTS protocol (No XON output when the power is on, no XOFF output when the power is off)</li> </ul>
<ul> <li>Language for LCD messages</li> </ul>	(English, German, French, Dutch, Spanish, Japanese, Italian)
<ul> <li>Forward feed standby in cut issue mode</li> </ul>	(Not performed/Performed)
<ul> <li>Head up operation in cut issue mode</li> </ul>	(Not performed/Performed)
<ul> <li>Ribbon saving system</li> </ul>	(Not used/Used)
<ul> <li>[FEED] key function</li> </ul>	(Feeds a label/Prints data of image buffer)
<ul> <li>Transmissive sensor manual threshold fine</li> </ul>	adjustment setting (0.0 to 4.0 V)
<ul> <li>Kanji code selection</li> </ul>	(For Windows codes/for original codes)
<ul> <li>Euro code (new currency symbol) setting</li> </ul>	(20H to FFH)
<ul> <li>Automatic head broken dots check</li> </ul>	(Not performed/Performed)
<ul> <li>Centronics ACK/BUSY timing setting</li> </ul>	(TYPE 1/TYPE 2)
<ul> <li>Web printer function setting</li> </ul>	(Not available/Available)
(3) Test print	
(4) Sensor display/adjustment	
<ul> <li>Thermal head temperature sensor display</li> </ul>	
Open-air temperature sensor display	
<ul> <li>Heat sink sensor display</li> </ul>	
<ul> <li>Reflective sensor display/adjustment</li> </ul>	
<ul> <li>Transmissive sensor display/adjustment</li> </ul>	
<ul> <li>Reflective sensor adjustment value setting</li> </ul>	(without paper)
<ul> <li>Transmissive sensor adjustment value setti</li> </ul>	ng (without paper)
(5) RAM clear	
Maintenance counter clear	
Parameter clear	
(6) IP address setting	

#### (7) Initial values after RAM clear

① Initial values after maintenance counter clear

Parameter	Initial Value
Label distance covered	0 km
Printed distance	0 km
Cut count	0
Head up/down count	0
Ribbon motor drive time	0 hour
Head up solenoid drive time	0 hour
RS-232C hard error count	0
System error count	0
Momentary power interruption count	0

### ② Initial values after parameter clear

Parameter	Initial Value
Feed fine adjustment (PC)	0 mm
Cut position (or strip position) fine adjustment (PC)	0 mm
Back feed fine adjustment (PC)	0 mm
Print density fine adjustment	0
(Thermal transfer print mode) (PC)	
Print density fine adjustment	0
(Direct thermal print mode) (PC)	
Ribbon motor drive voltage fine adjustment (Rewind)	0
(PC)	
Ribbon motor drive voltage fine adjustment	0
(Back tension) (PC)	
Feed fine adjustment (Key)	0 mm
Cut position (or strip position) fine adjustment (Key)	0 mm
Back feed fine adjustment (Key)	0 mm
Print density fine adjustment	0
(Thermal transfer print mode) (Key)	
Print density fine adjustment	0
(Direct thermal print mode) (Key)	
Ribbon motor drive voltage fine adjustment (Rewind)	0
(Кеу)	
Ribbon motor drive voltage fine adjustment	0
(Back tension) (Key)	
X-coordinate fine adjustment (Key)	0 mm
Transmissive sensor manual threshold fine	0.7 V
adjustment value	
Reflective sensor manual threshold fine adjustment	1.0 V
value	
Type of character code	PC-850
Font of 0	"0" without slash mark
Type of control code	Automatic selection
Type of ribbon	Transmissive
Strip status selection	1
Communication speed	9600 bps

Data length	QP type	8 bits		
	QQ type	7 bits		
Stop bit length		1 bit		
Parity	QP type	NONE		
	QQ type	EVEN		
Transmission control	QP type	XON/XOFF + READY/BUSY		
		(DTR) protocol:		
		(XON output when the power		
		is on, XOFF output when the		
		power is off)		
	QQ type	READY/BUSY (DTR)		
		protocol		
Language for LCD messages	QP type	English		
	QQ type	English		
Forward feed standby in cut issue		Not performed		
Head up operation in cut issue mo	ode	Not performed		
Ribbon saving system		Not used		
Automatic head broken dots chec	k	Not performed		
Stacker use selection		OFF		
[FEED] key function		1-label feed		
Status response		Yes		
Label pitch		76.2 mm		
Effective print length		74.2 mm		
Effective print width		104.0 mm		
Print type		Thermal transfer print mode		
Type of sensor		Transmissive sensor		
Feed speed		5"/sec.		
Issue mode		Batch (without cutting)		
PC save automatic call		With TYPE 1		
Kanji code	Kanji code			
Euro code		B0H		
Centronics ACK/BUSY timing setting		TYPE 1:		
		The ACK signal is sent to		
		match the fall of the BUSY		
		signal and the end of the		
		LOW level of the ACK		
		signal.		
Web printer function		Not available		

• The total label distance covered, sensor adjustment values (system mode <4>), IP address setting and data of the flash memory card are not cleared by RAM clear.

## 4.2 ON-LINE MODE FUNCTIONS

The on-line mode provides the following functions for issuing labels and setting the threshold. (For details, refer to Key Operation Specification.)

- (1) Issuing labels (by external equipment interface commands)
- (2) Paper feed (by the [FEED] key)
- (3) Pause (Halts issuing labels by the [PAUSE] key)
- (4) Restart (Reissues labels by the [RESTART] key after halting issuing labels or after the occurrence of an error.)
- (5) Reset (Enters an usual initial state which is obtained after the power is turned on, using the [RESTART] key.)
- (6) Error indication
- (7) Threshold setting
- (8) Various parameter settings (Parameters including feed fine adjustment and print density fine adjustment are programmed.)

### 4.3 DOWNLOAD MODE SETTING FUNCTION

When the power is turned on by pressing the [FEED], [PAUSE], and [RESTART] keys at the same time, the printer enters the download mode. Therefore, the usual operations cannot be performed.


# 5. TRANSMISSION SEQUENCE

This section describes the outline of the transmission sequence.

### 5.1 INITIALIZATION


Writable characters, logo, and PC interface commands must be stored before the label issue operation.

(1) Storing writable characters and logo

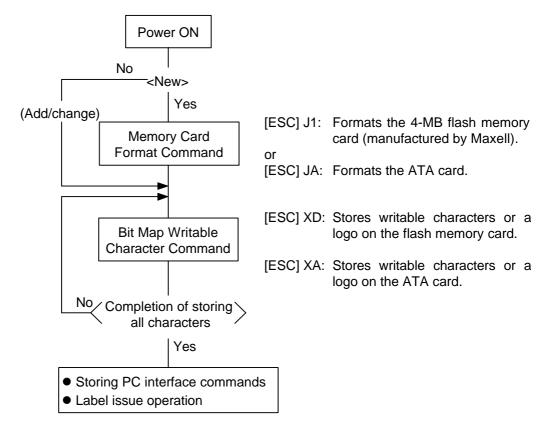

- **NOTES:** (1) The storage of PC commands is only performed if it is required.
  - (2) When the flash memory card is used, and the Memory Card Format Command is not sent before storing already stored writable characters or logos, memory will be taken up with every such storing.
  - (3) When the flash memory card is used, and another operation (storing PC interface commands or label issue operation) is performed after storing writable characters or logos, the image buffer will be cleared automatically.
  - (4) If another storing operation does not take place after storing writable characters or logos, the printer automatically enters the on-line mode (label issue operation) after about 10 seconds. In this case, when the flash memory card is used, the image buffer will be cleared automatically.

(2) Storing PC interface commands

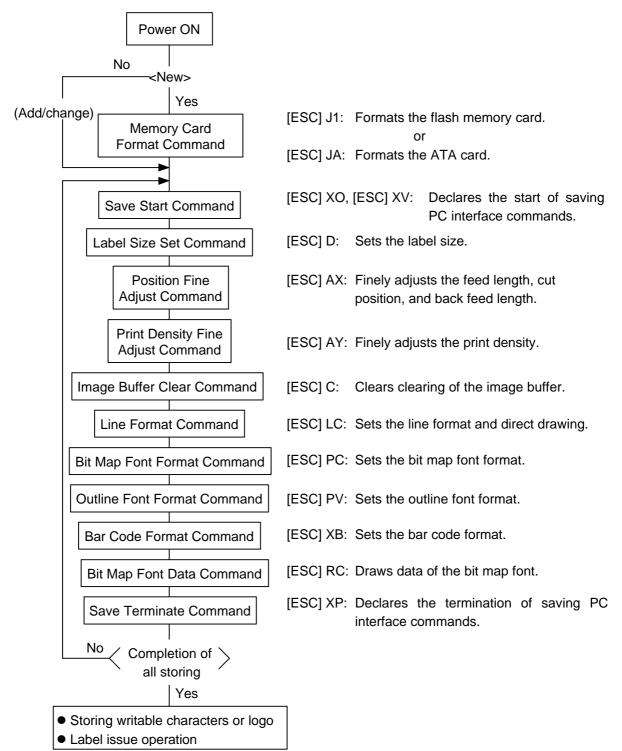


- **NOTES:** (1) The storage of PC commands is only performed if it is required.
  - (2) When the flash memory card is used, and the Memory Card Format Command is not sent before storing already stored PC interface commands, memory will be taken up with every such storing.
  - (3) When the flash memory card is used, and another operation (storing writable characters or logos, label issue operation) is performed after storing PC interface commands, the image buffer will be cleared automatically.
  - (4) Select commands to be stored as the occasion demands.
  - (5) If another storing operation does not take place after storing PC interface commands, the printer enters the on-line mode (label issue operation) after about 10 seconds. In this case, when the flash memory card is used, the image buffer will be cleared automatically.

## 5.2 LABEL ISSUE OPERATION


An example of the label issue operation is described below.

(1) Where the Save Data Call Command is not used:

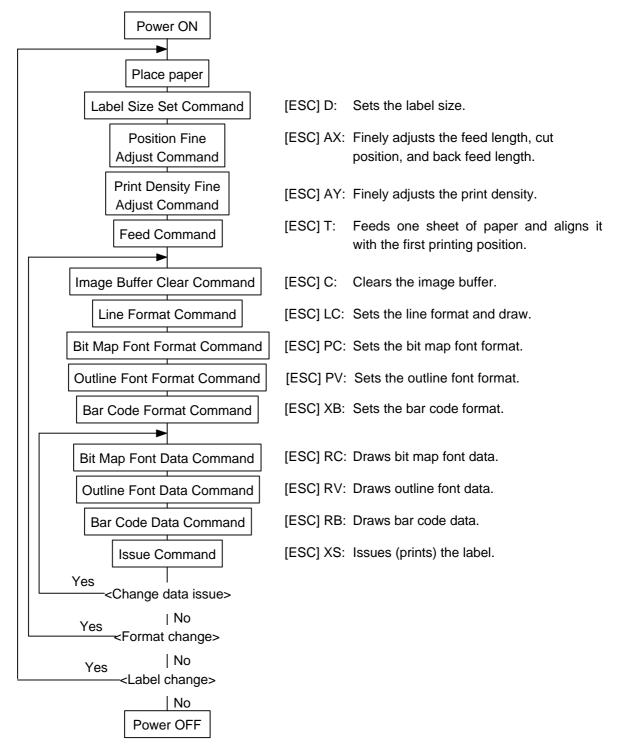

- **NOTES:** (1) When placing new paper, the Label Size Set Command and Feed Command must always be sent. When using the same paper after the power is turned off and then on, the Label Size Set Command and Feed Command may be omitted.
  - (2) After the power is turned off and then on, the Bit Map Font, Outline Font, and Bar Code Format Commands should be sent as occasion demands because they are not protected in memory.

(2) Where the Save Data Call Command is used:

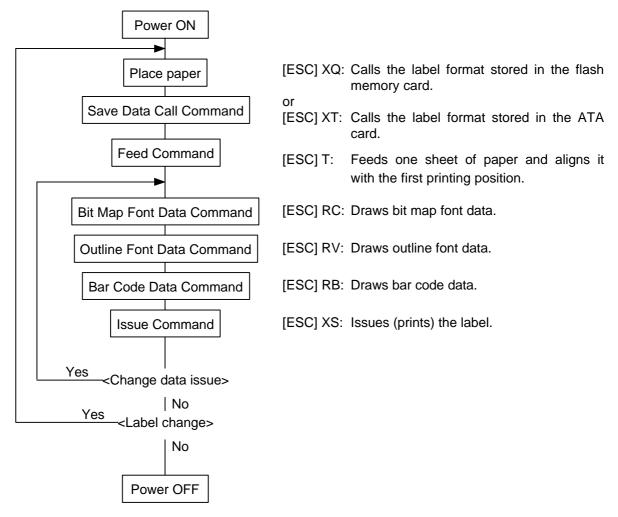


- **NOTES:** (1) When placing new paper, the Feed Command must always be sent. When using the same paper after the power is turned off and then on, the Feed Command may be omitted.
  - (2) If the option for "automatic call at power on" for the Save Data Call Command has previously been selected, the Save Data Call Command may be omitted after the power is turned off and then on.

# 6. INTERFACE COMMANDS

### 6.1 OUTLINE OF COMMANDS

(1) Format of Interface command

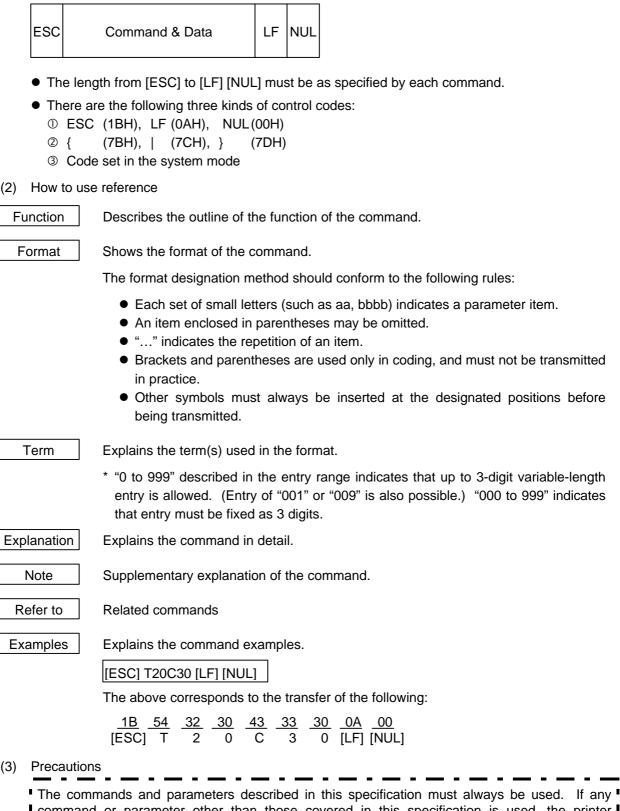

command or parameters described in this specification must always be used. If any command or parameter other than those covered in this specification is used, the printer operation will not be guaranteed. The commands must be used in on-line mode. If any command is transmitted in system mode, the printer will not operate. However, only the Reset Command can be used.


# 6.2 LIST OF COMMANDS


(1)	Commands related to setting Label Size Set Command	[ESC] D25
(2)	Commands related to fine adjustment	
( )	Position Fine Adjust Command	[ESC] AX
	Print Density Fine Adjust Command	[ESC] AY
	Ribbon Motor Drive Voltage Fine Adjust Command	[ESC] RM
	•	
(3)	Commands related to clear	
	Image Buffer Clear Command	[ESC] C
	Clear Area Command	[ESC] XR
(4)	Commands related to drawing format setting	
	Line Format Command	[ESC] LC 41
	Bit Map Font Format Command	[ESC] PC
	Outline Font Format Command	[ESC] PV
	Bar Code Format Command	[ESC] XB75
(5)	Commands related to print data	
(3)		
	Bit Map Font Data Command Outline Font Data Command	[ESC] RC 108
	Bar Code Data Command	[ESC] RV 111 [ESC] RB 114
	Bar Coue Data Command	[ESC] RD
(6)	Commands related to issue and feed	
	Issue Command	[ESC] XS 127
	Feed Command	[ESC] T 141
	Eject Command	[ESC] IB 147
	Forward/Reverse Feed Command	[ESC] U1, [ESC] U2 148
(7)	Commands related to writable characters	
( )	Storage Area Allocate Command	[ESC] XF
	Memory Card Format Command (for flash memory card)	[ESC] J1
	Memory Card Format Command (for ATA card)	[ESC] JA
	2-byte Writable Character Code Range Command	[ESC] XE
	Bit Map Writable Character Command (for flash memory card)	[ESC] XD
	Bit Map Writable Character Command (for ATA card)	[ESC] XA
(0)		
(8)	Commands related to graphics	1500100
	Graphic Command	[ESC] SG 165
(9)	Commands related to PC command saving	
	Memory Card Format Command (for flash memory card)	[ESC] J1 152
	Memory Card Format Command (for ATA card)	[ESC] JA 152
	Save Start Command (for flash memory card)	[ESC] XO 173
	Save Start Command (for ATA card)	[ESC] XV 173
	Save Terminate Command	[ESC] XP 175
	Saved Data Call Command (for flash memory card)	[ESC] XQ 176
	Saved Data Call Command (for ATA card)	[ESC] XT 176
(10)	Commands related to check	
()	Head Broken Dots Check Command	[ESC] HD 177
(11)	Commands related to display	
	Message Display Command	[ESC] XJ 178
(12)	Commands related to control	
	Reset Command	[ESC] WR 180
(13)	Commands related to status	
(13)		IESCI W/S 191
	Status Request Command Version Information Acquire Command	[ESC] WS 181 [ESC] WV 182
	ATA Card Information Acquire Command	[ESC] WV
	ATA Card miorination Acquire Command ATA Card Writable Character Information Acquire Command	[ESC] WG 185
(14)	Commands related to TCP/IP setting	
	IP Address Set Command	[ESC] IP 186

# 6.3 LABEL SIZE SET COMMAND

B LABEL SIZ	ZE SET COMMAND	[ESC] D					
Function	Sets the size of a label or tag.						
Format	[ESC] Daaaa, bbbb, cccc (, dddd) [LF] [NUL]						
Term	aaaa : Pitch length of the label or tag 4 and 5 digits (in 0.1 mm units) 4 digits: Max. 9999 (999.9 mm) 5 digits: Max. 27300 (2730.0 mm)						
	bbbb : Effective print width Fixed as 4 digits (in 0.1 mm units)						
	cccc : Effective print length 4 and 5 digits (in 0.1 mm units) 4 digits: Max. 9999 (999.9 mm) 5 digits: Max. 27260 (2726.0 mm)						
	dddd : Backing paper width (Omissible. If omitted, it is set to the initia Fixed as 4 digits (in 0.1 mm units)	l value (head width).)					
Explanation							

[In the case of label]

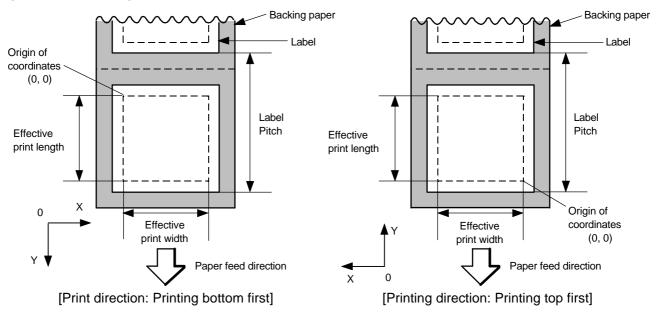

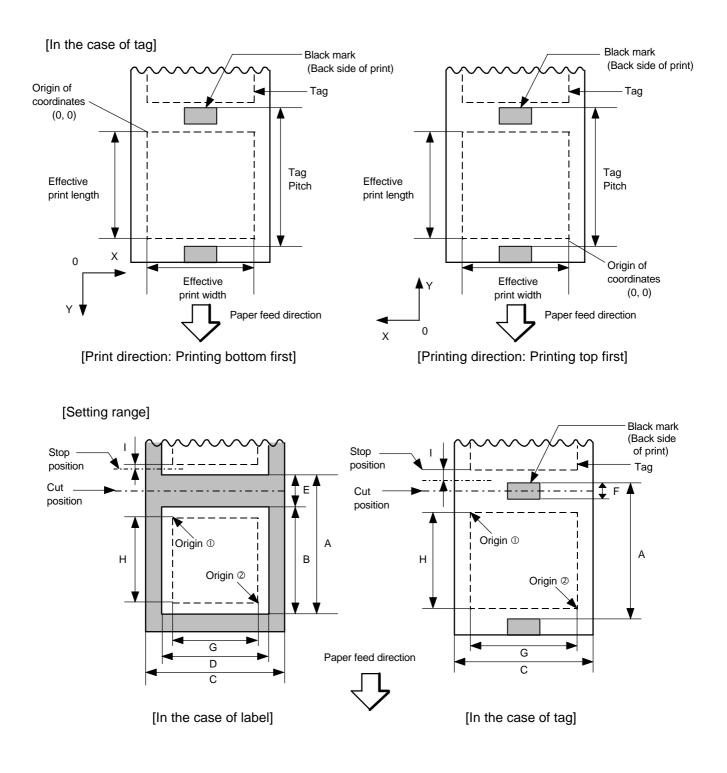

[mm]

Model			B-482-QQ/QP				
Item			<b>_</b> .	Strip	Cut		
		Method	Batch		Rotary		Swing
					Head-up operation	Head-up operation	cutter
					not performed	performed	
Thermal head dot der	nsity		12 dots/mm				
Thermal head width	1				104.0		
A: Label pitch		Min.	10.0	25.4	3": 94.0	3": 38.0	38.0
Tag pitch					4": 98.0	4": 38.0	
	Label				5": 102.0	5": 38.0	
					8": 113.0	8": 38.0	
		Max.	2730.0				
					3": 30.0		
		Min.	10.0	-	4": 3	0.0	25.4
	Tag				5": 3	5": 30.0	
					8": 3	8.0	
		Max.	2730.0	-		2730.0	
B: Label length					3": 81.0 <sup>(*1)</sup>	3": 25.0	25.0 (*5)
		Min.	8.0	23.4	4": 85.0 <sup>(*2)</sup>	4": 25.0	
					5": 89.0 <sup>(*3)</sup>	5": 25.0	
					8": 100.0 <sup>(*4)</sup>	8": 25.0	
Max.			2728.0 2724.0				
C: Backing paper widt	width Min.			50.8			
Tag width		Max.			112.0		
D: Label width		Min.			47.8		
		Max.			109.0		
E: Label-to-label gap		Min.	in. 2.0 6.0				
		Max.			20.0		
F: Black mark length		Min.			2.0		
		Max.			10.0		
G: Effective print width	ו	Min.			10.0		
		Max.			104.0		
H: Effective print					3": 79.0	3": 23.0	
length		Min.	6.0	21.4	4": 83.0	4": 23.0	23.0
	Label				5": 87.0	5": 23.0	
					8": 98.0	8": 23.0	
		Max.			2726.0		
					3": 28.0		
	Tag	Min.	8.0	-	4": 28.0         2           5": 28.0         2           8": 36.0         2		23.4
		Max.	2726.0	6.0 - 2726.0			
I: Slow up interval					1.0		
Max. effective print length for on-the-				1361.0			
fly issuing							

(\*1): When a cut issue is performed at 3"/sec by using the rotary cutter, label length B should be as follows:

Label length  $B \ge 91.0 \text{ mm} - \left(\frac{\text{Label-to-label gap}}{2}\right)$ 

(\*2): When a cut issue is performed at 4"/sec by using the rotary cutter, label length B should be as follows:

Label length B  $\ge$  95.0 mm -  $\left(\frac{\text{Label-to-label gas}}{2}\right)$ 

(\*3): When a cut issue is performed at 5"/sec by using the rotary cutter, label length B should be as follows:

Label length B  $\geq$  99.0 mm -  $\left(\frac{\text{Label-to-label gap}}{2}\right)$ 

(\*4): When a cut issue is performed at 8"/sec by using the rotary cutter, label length B should be as follows:

Label length B  $\ge$  110.0 mm -  $\left(\frac{\text{Label-to-label gap}}{2}\right)$ 


(\*5): When a cut issue is performed by using the swing cutter, label length B should be as follows:

Label length B  $\geq$  35.0 mm -  $\left(\frac{\text{Label-to-label gap}}{2}\right)$ 

Notes

- (1) Before changing the label size or type of sensor, the Label Size Set Command must first be transmitted.
- The Label Size Set Command is protected in memory (even if the power is turned (2) off).
- (3) After sending the Label Size Set Command, one sheet of paper must be fed by the Feed Command ([ESC] T) and must be aligned with the first printing position prior to printing.
- (4) The origin of drawing coordinates, print stop position (head position at stop), and cut position are determined according to the parameters of the Label Size Set Command as shown in the figure on the preceding page. For the print stop position in strip issue mode, refer to the section of the Position Fine Adjust Command. The effective print area is centered on the label/tag.
- Printing cannot be performed in the slow up (1 mm) and slow down (1 mm) areas. (5) Consequently, [A : label/tag pitch] - [H: effective print length]  $\ge 2$  mm must be assumed.
- The origin of drawing coordinates, print stop position (head position at stop), and (6) cut position are adjustable by the Fine Adjust Commands and according to the fine adjustment settings in System mode.
- The tag rotation designation of the Issue Command ([ESC] XS) causes the origin (7) of drawing coordinates to be origin ① in the case of "printing bottom first" and to be origin 2 in the case of "printing top first", as shown in the figure.
- The parameters must be as shown in the figure and table. Any value or paper (8) outside the range results in a failure of printing or an error.

- (9) Where an effective print length within "max. effective print length for on-the-fly" is specified, labels even each with different data can be printed continuously without stopping every label because printing and drawing of the next label are processed at the same time. [On-the-fly issue] However, printing may stop every label depending on the quantity of drawing data. Also, if the ribbon save issue is used, the On-the-fly issue will not be performed regardless of the data quantity.
- (10) The setting for the backing paper width is used for the control of the backing paper rewind motor for a strip issue. Therefore, this setting is not effective for any mode other than strip issue mode.

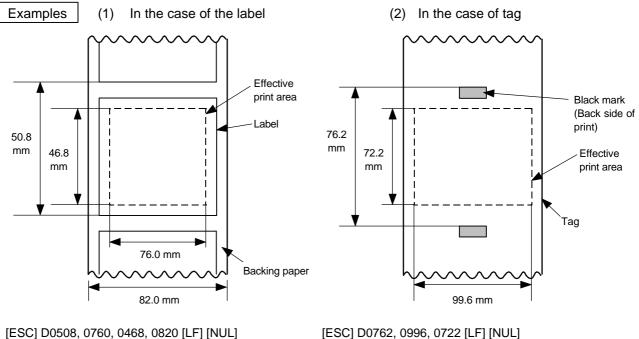

[ESC] D0508, 0760, 0468, 0820 [LF] [N [ESC] T20C30 [LF] [NUL]

[ESC] D0762, 0996, 0722 [LF] [NUL] [ESC] T10C30 [LF] [NUL]

### 6.4 POSITION FINE ADJUST COMMAND

[ESC] AX

Function

- ① Adjusts the feed value so that the label will be shifted forward or backward from the automatically set first print start position.
- ② Adjusts the cut position so that the label will be cut at a position shifted forward or backward from the automatically set cut position, or adjusts the strip position so that the label will be shifted forward or backward from the automatically set strip position.
- ③ Adjusts the value for feeding the label back to the home position after cutting, or adjusts the value for feeding the label back to the home position after stripping.

Format	

Term


а

[ESC] AX; abbb, cddd, eff [LF] [NUL]


- : Indicates the direction, forward or backward, in which a fine adjustment is to be made.
  - +: Backward
  - : Forward
- bbb : Feed value to be finely adjusted. 000 to 500 (in 0.1 mm units)
- c : Indicates the direction, forward or backward, in which a cut position (or strip position) fine adjustment is to be made.
  - +: Backward
  - : Forward
- ddd : Amount for finely adjusting the cut position (or strip position). 000 to 500 (in 0.1 mm units)

e : Indicates whether the back feed is to be increased or decreased.


- +: Increase
- : Decrease
- ff : Amount for finely adjusting the back feed. 00 to 99 (in 0.1 mm units)

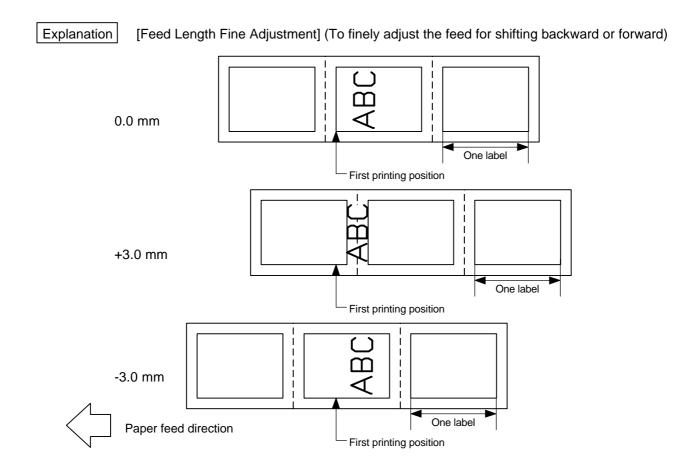


[Cut Position Fine Adjustment] (To finely adjust the cut position for shifting backward or forward)

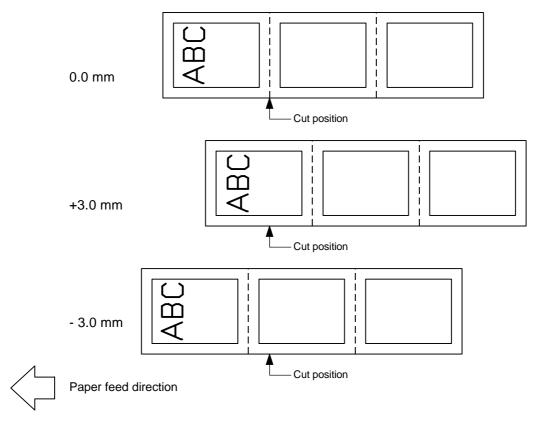

[Strip Position Fine Adjustment]

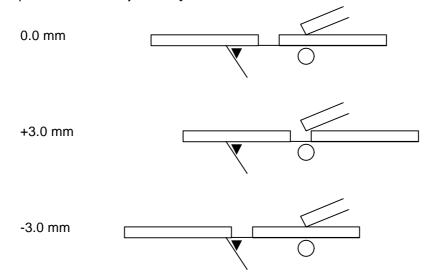


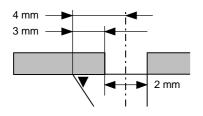

Printing in strip issue mode is stopped at the position where the distance from the middle point of the label-to-label gap to the top of the strip shaft is 4 mm, since the label-to-label gap is assumed to be 2 mm.

When the print stop position is not proper, the print stop position should be adjusted using the strip position fine adjust function. When the label-to-label gap is 5 mm or more, the effective print length should be set to the maximum (label pitch -2 mm). Then, the print stop position should be adjusted using the strip position fine adjust function.

[Back Feed Fine Adjustment] (To finely adjust the back feed for shifting backward or forward)

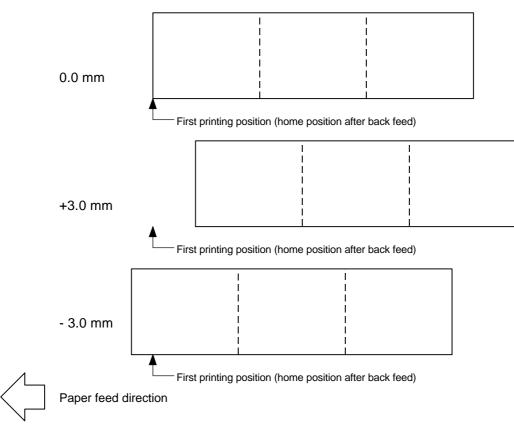



(1) If the feed value fine adjustment, cut position (or strip position) fine adjustment or back feed value fine adjustment has been set in system mode (key operation on the printer), the fine adjustment value will be the fine adjustment in system mode. The max. fine adjustment values are as follows. However, the max. feed fine adjustment value is limited within the label pitch.

> Feed value fine adjustment ......±50.0 mm Cut position (or strip position) fine adjustment ......±50.0 mm Back feed value fine adjustment ......±9.9 mm

- (2) After changing the fine adjustment value by this command, one label must be fed by the Feed Command ([ESC] T) to adjust the first printing position.
- (3) Each fine adjustment value is protected in memory (even if the power is turned off).
- (4) If a fine adjustment value is improper, printing will not be performed correctly. For example, if the back feed fine adjustment value is not set properly, the printing positions without cutting and after cutting will be different from each other. If the label is fed back excessively, the paper will not be fed correctly during printing.
- (5) The cut position (or the strip position) fine adjustment and back feed value fine adjustment are effective only when the printer is in cut issue or strip issue mode.
- (6) Procedure for labels having a label pitch of less than 38 mm when the swing cutter is used.

The minimum label pitch of a label which can be cut in normal use is 38.0 mm. When a label having a label pitch of less than 38 mm is used, the edge of the label is caught by the edge of the thermal head during a backfeed to the home position after cutting the gap area between labels. Therefore, the label may not be fed back to the proper home position. In this case, the problem will be solved by performing the following procedure.

#### [Method 1]

When the following conditions are all met, the paper ejection operation in cut print mode is as follows.

Forward feed to the cut position  $\rightarrow$  Cut  $\rightarrow$  Feed stopped  $\rightarrow$ Head lifted  $\rightarrow$  Reverse feed to the home position  $\rightarrow$  Head lowered

#### Conditions:

Issue Command, Feed Command, and Eject Command received. Label pitch of 38.0 mm or less, cut performed, transmissive sensor, cut position fine adjustment of  $\pm 10.0$  mm or less, and issue mode "C"

- **NOTES:** 1. If a cut is performed when the stacker is used and the head up operation is set to be performed in the system mode, the paper ejection operation is as follows regardless of the label size setting.
  - 2. If the head is lifted up when the edge of the label being ejected passes the feed roller, the sensor may not be able to detect an error even if it occurs (a feed cannot be performed).

#### [Method 2]

By performing the cut position fine adjustment according to the following procedure, the problem that the label may not be fed back to the proper home position will be solved. However, when this procedure is used, one or more printed labels are left between the head and the cutter. Therefore, the leftover labels should be removed by performing an issue or a feed.

(a) Cut Position Fine Adjustment Value Calculation

The cut position fine adjustment value can be calculated using the following method. Even if a back feed to the proper home position is not performed using this value, the cut position should be adjusted with the desired value.


Cut position fine adjustment value = (Number of labels left between head and cutter) × (Label pitch) =  $\left(\frac{32.8 \text{ mm}}{\text{Label Pitch}}\right)$  × (Label pitch) \* Decimals of the result of the division is omitted.

Ex) Label pitch: 30.0 mm

Cut position fine  
adjustment value = 
$$\left(\frac{32.8 \text{ mm}}{30.0 \text{ mm}}\right) \times (30.0 \text{ mm})$$
  
= 1 × 30.0 mm  
= +30.0 mm

(b) Operation Example


Issue count: 3, Cut interval = 1

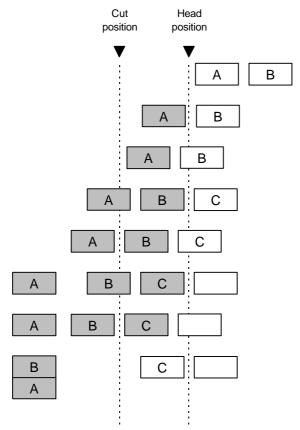

- (1) Idling
- (2) Completes printing the first label (A).
- (3) Cuts the gap before label A while label B is being printed.
- (4) Completes printing the second label (B).
- (5) Cuts the gap before label B while label C is being printed.
- (6) Completes printing the third label (C).
- (7) Feeds the label to the cut position. Cuts the gap before label C.
- (8) Backfeeds to the home position.



(1) Cut issue

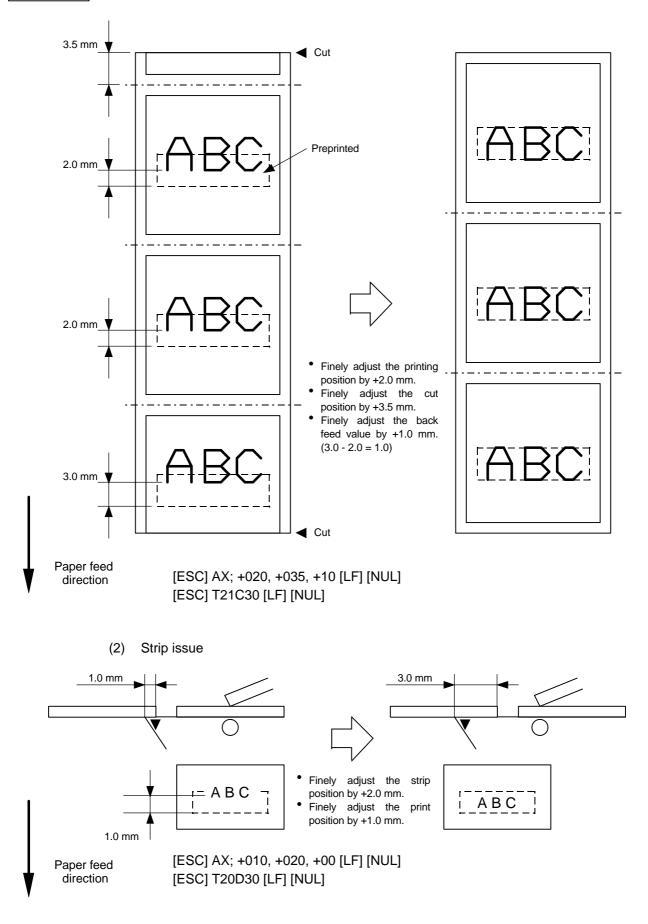

### 6.5 PRINT DENSITY FINE ADJUST COMMAND

[ESC] AY Function Finely adjusts the automatically set print density. Format [ESC] AY; abb, c [LF] [NUL] Term : Indicates whether to increase or decrease the density. а +: Increase (darker) - : Decrease (lighter) : Print density fine adjustment value bb 00 to 10 (in units of 1 step) С : Indicates the mode for fine adjustment, thermal transfer or direct thermal. 0: Thermal transfer 1: Direct thermal Explanation (1) The print density fine adjustment is performed by adjusting the time that voltage is applied to the thermal head. (2) If the print density fine adjustment value has been set in system mode (key operation on the printer), the fine adjustment value will be the sum of the fine adjustment by this command and the fine adjustment in system mode. The max. fine adjustment values for thermal transfer/direct thermal print modes are each ±10. (3) The fine adjustment values in thermal transfer print mode and direct thermal print mode can be set independently. (4) The Print Density Fine Adjust Command is protected in memory (even if the power is turned off). (5) The fine adjustment value for both the fine adjust command and the system mode fine adjustment is 00 at shipment from the factory. (6) The max. value for each print speed is as follows. When the value exceeds the maximum, it is automatically corrected to the max. value, and then the printer prints. Thermal transfer Direct thermal print mode print mode 3"/sec +10 step +10 step 4"/sec +2 step \_

Examples

To set the density in thermal transfer print mode to -2. [ESC] AY; -02, 0 [LF] [NUL]

+5 step

+2 step

+5 step

+2 step

5"/sec

8"/sec

To set the density in direct thermal print mode to +3. [ESC] AY; +03, 1 [LF] [NUL]

# 6.6 RIBBON MOTOR DRIVE VOLTAGE FINE ADJUST COMMAND [ESC] RM

Function	Finely	y adjusts the drive voltage of the ribbon motor.
Format	[ESC	] RM; abbcdd [LF] [NUL]
Term		Fine adjustment direction of the ribbon rewind motor -: Negative (The voltage is lowered.)
		Fine adjustment value for the ribbon rewind motor 00 to 15 (in units of 1 step)
		Fine adjustment direction of the ribbon back tension motor -: Negative (The voltage is lowered.)
		Fine adjustment value for the ribbon back tension motor 00 to 15 (in units of 1 step)
Explanation	• •	If wrinkles occur on the ribbon, they are removed by adjusting the ribbon motor drive voltage by this command.
	(2)	-1 step corresponds to -5% of the standard drive voltage.
	• •	The ribbon motor drive voltage fine adjustment value is protected in memory (even if the power is turned off).
		If the ribbon motor drive voltage fine adjustment value has been set in the system mode (key operation on the printer), the fine adjustment value will be the sum of the system mode and the ribbon rewind motor adjustments or the system mode and the ribbon back tension motor adjustments. The max. fine adjustment values for the ribbon motors (rewind/back tension) are each -15 (-75%).
	• •	When the RAM clear is performed, the fine adjustment values for both fine adjust commands (rewind/back tension) and the system mode are 00.
	• •	The fine adjustment values for both fine adjust commands (rewind/back tension) and the system mode are 00 at time of shipping from the factory.
Example		et the value for the ribbon motor (rewind) to -3, and the value for the ribbon motor (tension) to -2.

[ESC] RM; -03-02 [LF] [NUL]

# 6.7 IMAGE BUFFER CLEAR COMMAND

# [ESC] C

Function	Clears the image buffer for drawing characters, lines, bar codes, and graphics.
Format	[ESC] C [LF] [NUL]
Explanation	(1) After changing the label size, the image buffer must be cleared.
	(2) The increment/decrement designation (described later) is valid until the Image Buffer Clear Command is transmitted.
	(3) The link field designation (described later) is effective until the Image Buffer Clear Command is sent.
Examples	[ESC] D0508, 0760, 0468 [LF] [NUL] [ESC] T20C51 [LF] [NUL] [ESC] C [LF] [NUL] [ESC] RC000; ABC [LF] [NUL] [ESC] RC001; DEF [LF] [NUL] [ESC] XS; I, 0001, 0002C3000 [LF] [NUL]

### 6.8 CLEAR AREA COMMAND


# [ESC] XR

Function

Clears the designated area or reverses the white/black dot pattern in the designated area in the drawing area.

Format	[ESC] XR; aaaa, bbbb, cccc, dddd, e [LF] [NUL]	
Term	aaaa : Designated area start point X-coordinate Fixed as 4 digits (in 0.1 mm units)	

- bbbb : Designated area start point Y-coordinate 4 or 5 digits (in 0.1 mm units)
- cccc : Designated area end point X-coordinate Fixed as 4 digits (in 0.1 mm units)
- dddd : Designated area end point Y-coordinate 4 or 5 digits (in 0.1 mm units)
- e : Type of clear
  - A: Clears the contents in the designated area to zeros.
  - B: Reverses the white/black dot pattern in the designated area.

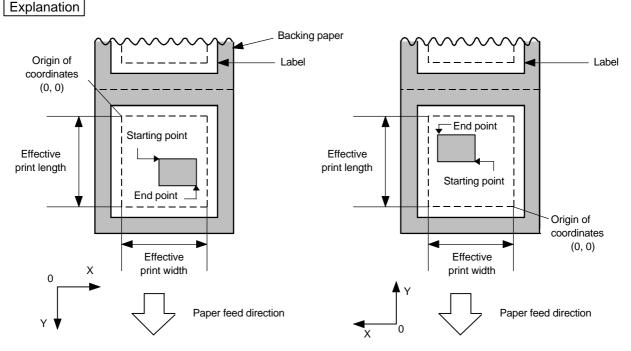

[Print direction: Printing bottom first]


[Print direction: Printing top first]

Notes

- (1) The result is the same even if the start and end point coordinates are reversed.
- (2) The result is the same even if the start and end point coordinates are set to an upper right and a lower left points, respectively.
- (3) The start and end coordinates of the designated area must be set within the effective print area set by the Label Size Set Command ([ESC] D).


#### [Effective print area]

[Effective print area]							[mm]
		Model	B-482-QQ/QP				
Item	I	Method	Batch	Strip	Rotary	cutter	Swing
					Head-up operation not performed	Head-up operation performed	cutter
Effective print width Min.					10.0		
	Max.		104.0				
Effective print					3": 79.0	3": 23.0	
length		Min.	6.0	21.4	4": 83.0	4": 23.0	23.0
	Label				5": 87.0	5": 23.0	
					8": 98.0	8": 23.0	
		Max.			2726.0		
					3": 2	8.0	
		Min.	8.0	-	4": 2	8.0	23.4
	Tag				5": 2	8.0	
					8": 3	8": 36.0	
		Max.	2726.0	-		2726.0	

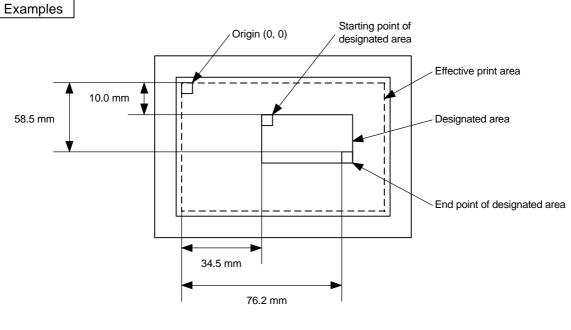

[ESC] XR; 0345, 0100, 0762, 0585, A [LF] [NUL] [ESC] RC000; ABC [LF] [NUL] [ESC] RC001; DEF [LF] [NUL] [ESC] XS; I, 0001, 0002C3000 [LF] [NUL]

### 6.9 LINE FORMAT COMMAND

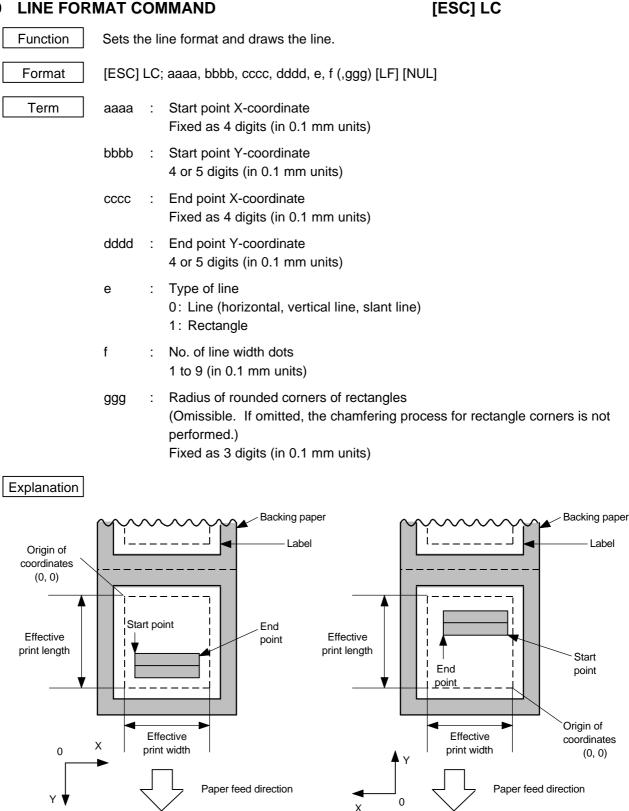


[Print direction: Printing bottom first]


[Print direction: Printing top first]

### [Line]


(1) Horizontal line (In the case of  $|Y_2 - Y_1| = 0$ )

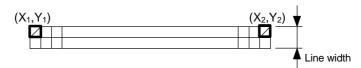


(2) Vertical line (In the case of  $|X_2 - X_1| = 0$ )

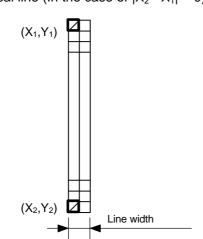

(3) Slant line A (
$$|X_2 - X_1| \le |Y_2 - Y_1|$$
)

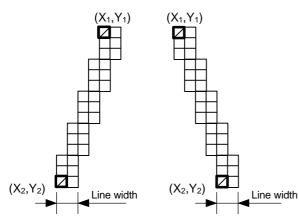


(4) Slant line B ( $|X_2 - X_1| > |Y_2 - Y_1|$ )

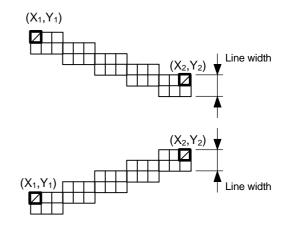


#### [Rectangle]

(1) Radius of rounded corners = 000 or parameter omitted

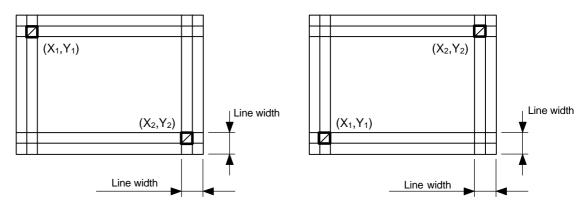

(2) Radius of rounded corners  $\neq$  000

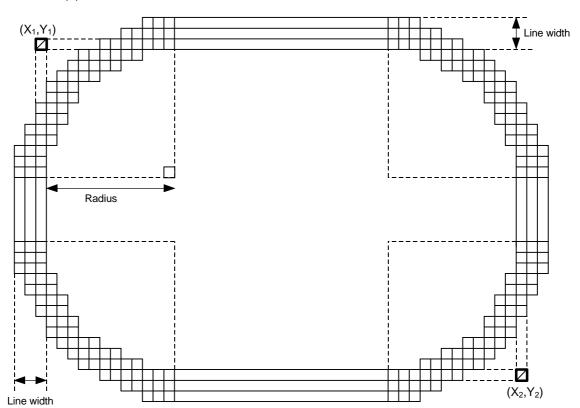

Notes

- (1) In line designation, a horizontal line, vertical line or slant line A/B is drawn according to the start and end point coordinates.
- (2) The result is the same even if the start and end point coordinates are reversed.
- (3) The start and end point coordinates must be set so that the result of line drawing will be within the effective print area set by the Label Size Set Command ([ESC] D).


(4) Programming the radius of the rounded corner is effective only when the type of line is 1 (rectangle). When the type of line is 0, designation of the radius is ignored.

When the type of line is 1, and the radius of the rounded corner is 000 or omitted, a rectangle is printed.

(5) A circle is assumed when:

$$\frac{|X_2 - X_1|}{2} = \frac{|Y_2 - Y_1|}{2} \leq [\text{Radius of rounded corners}]$$

[Effective print area]							[mm]	
		Model	B-482-QQ/QP					
Item	_ I	Method	Batch	Strip	Rotary	cutter	Swing	
					Head-up operation not performed	Head-up operation performed	cutter	
Effective print width		Min.			10.0			
	Max.	104.0						
Effective print					3": 79.0	3": 23.0		
length		Min.	6.0	21.4	4": 83.0	4": 23.0	23.0	
	Label				5": 87.0	5": 23.0		
					8": 98.0	8": 23.0		
		Max.			2726.0			
					3": 2	8.0		
		Min.	8.0	-	4": 2	8.0	23.4	
	Tag				5": 2	8.0		
					8": 36.0			
		Max.	2726.0	-		2726.0		

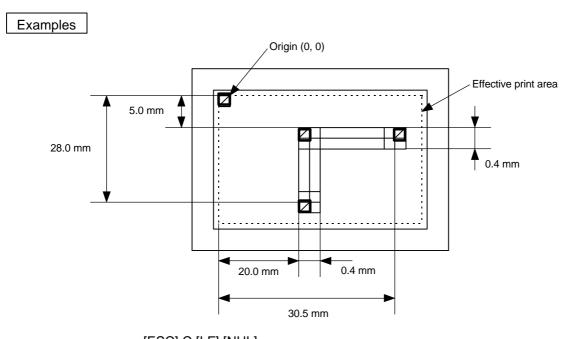

[ESC] C [LF] [NUL] [ESC] LC; 0200, 0350, 0305, 0050, 0, 4 [LF] [NUL] [ESC] LC; 0200, 0050, 0200, 0280, 0, 4 [LF] [NUL] [ESC] XS; I, 0001, 0002C3000 [LF] [NUL]

# 6.10 BIT MAP FONT FORMAT COMMAND

[ESC] PC

Function	Sets the format indicating on the label at which the bit map font is to be printed and how it is to be printed.
Format	<ul> <li>[ESC] PCaaa; bbbb, cccc, d, e, ff (, ghh), ii, j (, Jkkll) (, Mm) (, noooooooooo)</li> <li>(, Zpp) (, Pq) (=rrrrrr) [LF] [NUL]</li> </ul>
	<ul> <li>[ESC] PCaaa; bbbb, cccc, d, e, ff (, ghh), ii, j (, Jkkll) (, Mm) (, noooooooooo)</li> <li>(, Zpp) (, Pq) (; ss<sub>1</sub>, ss<sub>2</sub>, ss<sub>3</sub>,, ss<sub>20</sub>) [LF] [NUL]</li> </ul>
Term	aaa : Character string number 000 to 199 (two digits, 00 to 99, also acceptable)
	bbbb : Print origin of X-coordinate of character string Fixed as 4 digits (in 0.1 mm units)
	cccc : Print origin of Y-coordinate of character string 4 or 5 digits (in 0.1 mm units)
	d : Character horizontal magnification 1 to 9 (in magnifications)
	<ul> <li>* Two digit designation enables magnifications in 0.5 units (05 ~ 95: 0.5 to 9.5 magnifications).</li> <li>The magnification can be designated in 0.1 units between 0.5 to 1. (06 ~ 09: 0.6 to 0.9 magnifications).</li> </ul>
	d d Designation in 0.5 magnification units : 0 or 5 (5 to 9, up to 1 magnification) Designation in magnifications : 0 to 9
	e : Character vertical magnification 1 to 9 (in magnifications)
	<ul> <li>* Two digit designation enables magnifications in 0.5 units (05 ~ 95: 0.5 to 9.5 magnifications).</li> <li>The magnification can be designated in 0.1 units between 0.5 to 1. (06 ~ 09: 0.6 to 0.9 magnifications).</li> </ul>
	e e Designation in 0.5 magnification units : 0 or 5 (5 to 9, up to 1 magnification) Designation in magnifications : 0 to 9
	ff: Type of fontA : Times Roman(Medium)8 pointB : Times Roman(Medium)10 pointC : Times Roman(Bold)10 pointD : Times Roman(Bold)12 pointE : Times Roman(Bold)14 pointF : Times Roman(Italic)12 pointG : Helvetica(Medium)6 pointH : Helvetica(Medium)10 pointI : Helvetica(Medium)10 pointJ : Helvetica(Medium)12 pointJ : Helvetica(Bold)12 pointK : Helvetica(Bold)12 pointJ : Helvetica(Bold)12 pointK : Helvetica(Bold)12 pointK : Helvetica(Bold)14 pointL : Helvetica(Bold)14 pointM : Presentation(Bold)18 pointN : Letter Gothic(Medium)9.5 pointO : Prestige Elite(Medium)7 point

- P :Prestige Elite(Bold)10 pointQ :Courier(Medium)10 pointR :Courier(Bold)12 point
- R : Courier(Bold)12 pointS : OCR-A12 point
- T : OCR-B 12 point
  - 01 (a): Writable character 1 (1×1 dot to 720×720 dots)
- to
- 40 (a): Writable character 40 (1×1 dot to 720×720 dots)
- 51 (a): 2-byte code set writable character 1 (1×1 dot to 720×720 dots) to
- 55 (a): 2-byte code set writable character 5 (1×1 dot to 720×720 dots)
  - a: Drive
    - (Omissible. If omitted, the flash ROM on the CPU board is selected.)
      - 0: Flash ROM on the CPU board
      - 1: Slot 1 on the PCMCIA board (Option)
    - 2: Slot 2 on the PCMCIA board (Option)
- \* The following fonts are proportional.
  - A, B, C, D, E, F, G, H, I, J, K, L
- ghh : Fine adjustment of character-to-character space
  - (Omissible. If omitted, space is adjusted according to the designated font.)
  - g : Designates whether to increase or decrease the character-to-character space.
    - +: Increase
    - : Decrease
  - hh : No. of space dots between characters 00 to 99 (in dots)
- ii : Rotational angles of a character and character string
  - 00 : 0° (char.) 0° (char.-string)
  - 11: 90° (char.) 90° (char.-string)
  - 22 : 180° (char.) 180° (char.-string)
  - 33 : 270° (char.) 270° (char.-string)

: Character attribution

i

: Black character

W (aabb) : Reverse character

- aa: No. of dots from the character string to the end of the black background in the horizontal direction
- bb: No. of dots from the character string to the end of the black background in the vertical direction
  - aa: 01 to 99 (in units of dots)
  - bb: 01 to 99 (in units of dots)
- F (aabb): Boxed character
  - aa: No. of dots from the character string area to the box in the horizontal direction
  - bb: No. of dots from the character string area to the box in the vertical direction
    - aa: 01 to 99 (in units of dots)
    - bb: 01 to 99 (in units of dots)
- C (aa): Stroked out character
  - aa: No. of dots from the character string area to the end of the stroke
    - aa: 01 to 99 (in units of dots)
- \* Descriptions in parentheses are omissible.
   (If omitted, it is character magnification (the larger one of horizontal or vertical magnifications) × 6 dots.)

#### Jkkll : Designates a bold character

(Omissible. If omitted, this process is not performed.)

- kk : No. of horizontal shift dots 00 to 16 (in dots)
- II : No. of vertical shift dots 00 to 16 (in dots)
- Mm : Type of the check digit to be attached

(Omissible. If omitted, the check digit is not drawn.)

- m: Type of check digit
  - 0 : Modulus 10 (Draws data and check digit)
  - 1 : Modulus 43 (Draws data and check digit)
  - 2 : DBP Modulus 10 (Draws check digit only)

nooooooooo: Increment and decrement

- (Omissible. If omitted, incrementing/decrementing is not performed.)
- n: Designates whether to increment or decrement.
  - +: Increment
  - -: Decrement

ooooooooo: Skip value

#### 000000000 to 999999999

- Zpp : Zero suppression
  - (Omissible. If omitted, the zero suppression process is not performed.)
  - pp: No. of zeros to be suppressed

00 to 20


Ρq Alignment (Omissible. If omitted, the alignment is set to left.) : q: Designates the character position 1: Left 2: Center 3: Right 4aaaa: Equal space aaaa: X direction of character string area 0050 to 1040 (in 0.1 mm units) 5aaaabbbcc: Automatic line feed aaaa: X direction of character string area 0050 to 1040 (in 0.1 mm units) bbb: Line feed length 010 to 500 (in 0.1 mm units) Number of lines cc: 01 to 99 rrr----rrr: Data string to be printed (Omissible) Max. 255 digits Link field No. (Omissible) SS<sub>1</sub>, SS<sub>2</sub>, SS<sub>3</sub>, -----, SS<sub>20</sub> : 01 to 99 (1 to 99 can be also used.) Up to 20 fields can be designated using commas.

Explanation (1) Character

#### ) Character string number

When drawing by the Data Command ([ESC] RC), the format designated by the character string number is selected.

(2) Print origin of coordinates

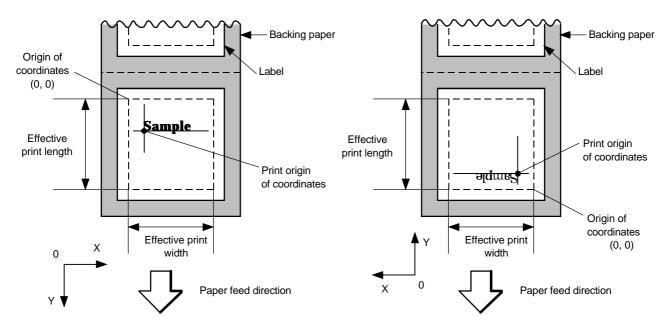


[Printing direction: Printing bottom first]

[Printing direction: Printing top first]


The print origin of coordinates must be set so that the result of character drawing will be within the effective print area set by the Label Size Set Command ([ESC] D).

[Effective print area]							[mm	
		Model		B-482-QQ/QP				
					Cut			
Item	_ I	Vethod	Batch	Strip	Rotary	cutter	Swing	
					Head-up operation not performed	Head-up operation performed	cutter	
Effective print width		Min.		10.0				
-	·		104.0					
Effective print					3": 79.0	3": 23.0		
length		Min.	6.0	21.4	4": 83.0	4": 23.0	23.0	
	Label				5": 87.0	5": 23.0		
					8": 98.0	8": 23.0		
		Max.			2726.0			
					3": 28.0			
		Min.	8.0	-	4": 28.0		23.4	
	Tag				5": 28.0 8": 36.0			
		Max.	2726.0	-		2726.0		

(3) Horizontal magnification and vertical magnification

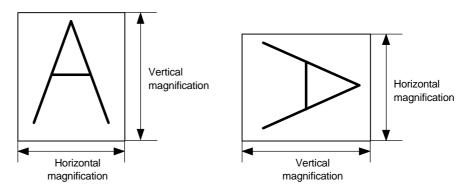


#### [Relationship between drawing coordinates and magnification]

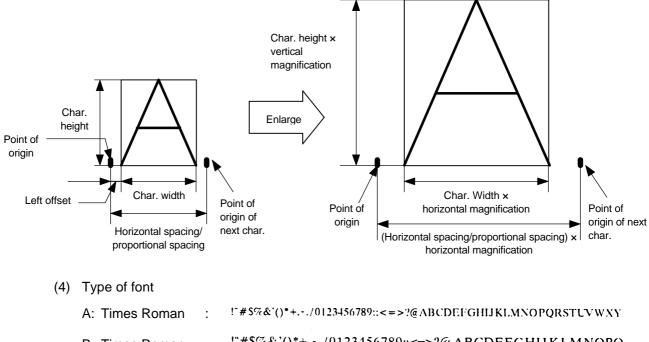


B: Times Roman	:	!"#\$%&`()*+,/0123456789:;<=>?@ABCDEFGHIJKLMNOPQ
C: Times Roman	:	!"#\$%&`()*+,/0123456789:;<=>?@ABCDEFGH1JKLMNOP
D: Times Roman	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKL
E: Times Roman	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEF
F: Times Roman	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKL
G: Helvetica	:	!'' #\$%&`()*+,/0123456789:;<=>?@ABCDEFGHIJKLMNOPQRSTUVWXYZ[Y]^_'abcdefghijkImnopq
H: Helvetica	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKLMNOPQRS
I: Helvetica	:	!"#\$%&`()*+,/0123456789:;<=>?@ABCDEFGHIJKL
J: Helvetica	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKL
K: Helvetica	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEF
L: Helvetica	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKL
M: Presentation	:	!"#\$%&'()*+,/0123456789:
N: Letter Gothic	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKLMNOPQRSTUVWXYZ[¥]^_'ab
O: Prestige Elite	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKLMNOPQRSTUVWXYZ[¥]^_'ab
P: Prestige Elite	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKLMNOP
Q: Courier	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGHIJKLMNOP
R: Courier	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGH
S: OCR-A	:	!"#\$%&'()*+/Dl23456789::<<>?@ABCDEFGH
T: OCR-B	:	!"#\$%&'()*+,/0123456789:;<=>?@ABCDEFGH

(5) Fine adjustment of character-to-character space

If no character-to-character space is specified or the number of space dots between characters is 0, drawing will take place according to the horizontal spacing/proportional spacing determined for each character. If character-to-character space is specified, drawing will take place according to the value obtained by adding the character spacing/proportional spacing to the specified value.

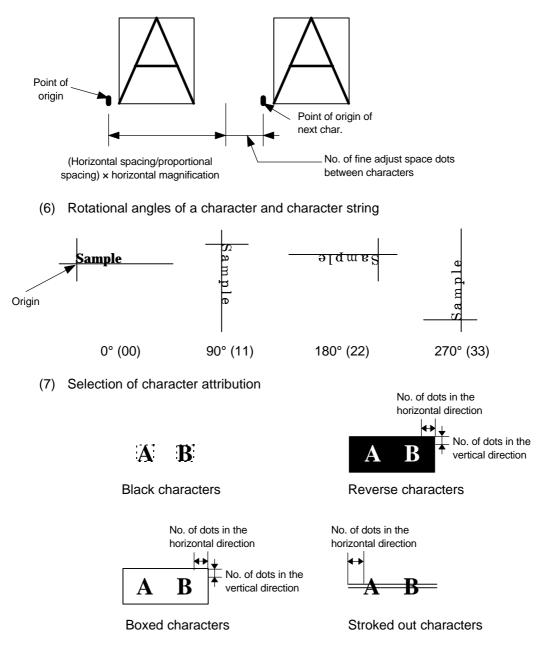

(8) Bold character designation

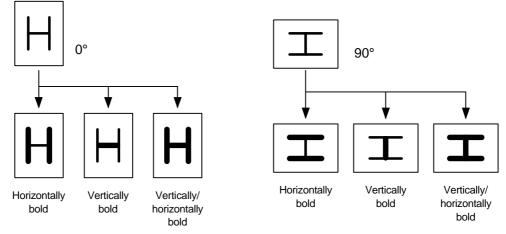

(9) Check digit to be attached

When Modulus 10 or Modulus 43 is selected, the check digit of a data row is calculated and attached to the data row for drawing.

When DBP Modulus 10 is selected, the check digit of a data row is calculated and only the check digit is drawn. When the data includes any data other than the numerals, drawing is not performed.

- \* DBP Modulus 10 is Modulus 10 for Deutsche Bundespost Postdienst only.
- (10) Increment/decrement

Printing is performed while the data is incremented or decremented each time a label is issued. Where the data row exceeds the maximum number of digits (40), the data row will not be drawn. When the font type is 51, 52, 53, 54 or 55, the incrementing/decrementing cannot be designated. (If it is designated, it is ignored, and the printer operates as if there was no designation.)

Initial value	0000	0000	0000	0000	999999
INC/DEC	+10	+10	+10	+10	+1
Zero suppression	Not designated	5	3	0	3
1st label	0000	0000	000	0000	999999
2nd label	0010	0010	<b>山010</b>	0010	ــــــــــــــــــــــــــــــــــــــ
3rd label	0020	0020	020	0020	പപപ001
4th label	0030	0030	⊔030	0030	പപപ002
5th label	0040	0040	ு040	0040	പപപ003

Letters and numerals for increment/decrement

For the data string, up to 40 digits (including letters, numerals and symbols) are possible. Only the numerals are picked up and calculated for incrementing/decrementing, and then are returned to the previous position to draw the data.

Initial value	00000	A0A0A	7A8/9	A2A0A
INC/DEC	+1	+1	+3	-3
1st label	00000	A0A0A	7A8/9	A2A0A
2nd label	00001	A0A1A	7A9/2	A1A7A
3rd label	00002	A0A2A	7A9/5	A1A4A
4th label	00003	A0A3A	7A9/8	A1A1A
5th label	00004	A0A4A	8A0/1	A0A8A


Example of increment/decrement calculation

#### (11) Zero suppression

No. of zeros to be suppressed	0	1	2	2	3	4	5
Data	0000	0000	0000	0A12	0123	0123	0123
Print	0000	0	00	ு A12	ு 123	0123	0123

The leading zero(s) in a data row is replaced by a space(s) according to the designated number of digits. However, if the number of digits to be suppressed is greater than the data row, the data row will be drawn without zero suppression. Where the data row exceeds the maximum number of digits (40), the data row will not be drawn. When the font type is 51, 52, 53, 54 or 55, zero suppression is not designated. If it is designated, it is ignored, and the printer operates as if there was no designation.

#### (12) Alignment

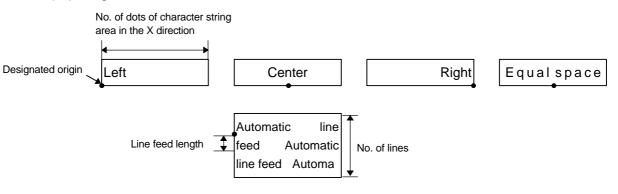

If characters are not placed on one line when equal space and automatic line feed is designated, the following steps should be performed.

Decrease the value of the character-to-character space. When characters are not placed on one line if the value is set to 0, return the value to its default, and then reduce the horizontal magnification for a character by 0.5.

If characters are still not placed on one line, repeatedly decrease the value of the character-to-character space, and then reduce the horizontal magnification. When characters are not placed on one line if the character magnification is set to 0.5 and the character-to-character space is set to 0, the field is not drawn. (The same previous field is also not drawn.)

(13) Data string to be printed

Drawing data can be programmed by designating the number of digits after the symbol "=." Up to 255 digits can be printed. If the number of digits exceeds 255, the excessive data will be discarded.

For the character code table, refer to the character code table mentioned later.

(14) Link field No.


The link field No. can be programmed by designating it after the symbol ";". After the link field No. is designated using the Format Command, the data strings are linked by the Link Field Data Command to draw an image. Up to 20 fields can be linked.

The following shows an example of linked fields on the two continuous labels.

[Format Command]

[ESC] PC01; [ESC] PC02; [ESC] PC03; [ESC] XB01;	; 03 [LF] [NUL] ; 04 [LF] [NUL]	:	Link field No. 1 is designated. Link field No. 3 is designated. Link field No. 4 is designated. Link fields No. 3 and No. 4 are designated.
[ESC] PC04; [ESC] PC05; [ESC] PC06; [ESC] XB02;	; 03 [LF] [NUL] ; 04 [LF] [NUL] ; <u>03, 04</u> [LF] [NUL]	::	Link field No. 2 is designated. Link field No. 3 is designated. Link field No. 4 is designated. Link fields No. 3 and No. 4 are designated. link field No.

[Data Command]

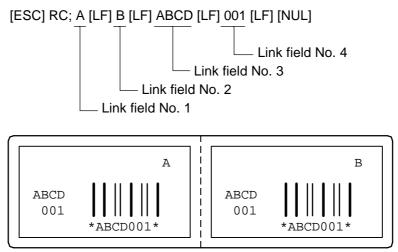

(1) The check digit attach, increment/decrement, and zero suppress processes are performed according to the following priority. If any of the conditions is improper, no drawing will take place.

For example, the zero(s) is replaced by a space(s) as a result of zero suppression but the modulus 10 designated to be attached cannot be calculated.

Increment/decrement > zero suppression > attachment of check digit

(2) Up to 32 fields for which incrementing/decrementing has been designated can be drawn. If the total of bit map font, outline font or bar code increment/decrement fields exceeds 32, drawing will take place without incrementing/decrementing any excessive field. The field to be incremented or decremented is incremented or decremented until the Image Buffer Clear Command ([ESC] C) is transmitted.

#### [Example]


- 1) Format Command (Increment character string No. 001 (+1))
- 2) Format Command (No incrementing for character string No. 002)
- 3) Format Command (Increment character string No. 003 (+2))
- 4) Image Buffer Clear Command
- 5) Data Command (character string No. 001 "0001")
- 6) Data Command (character string No. 002 "AB-")
- 7) Data Command (character string No. 003 "0100")
- 8) Issue Command (2 labels)

0001
AB - 0100
0002
AB - 0102

9) Issue Command (1 label)

0003	
AB - 0104	

- 10) Image Buffer Clear Command
- 11) Data Command (character string No. 002 "00000")
- 12) Issue Command (1 label)

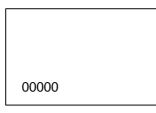


(3) The Bit Map Font Format Command may be connected to the Outline Font Format Command when transmitted.


[ESC] P C001; 0100, 0150, 1, 1, A, 00, B [LF] C002; 0350, 0180, 1, 1, A, 00, B [LF] C005; 0200, 0300, 25, 2, C, +05, 00, B, +0000000001 [LF] V01; 0500, 0400, 0100, 0100, A, 00, B [LF] [NUL]

- (4) When the drawing data is changed per label issue during printing, the field of the drawing data for the previous label is automatically cleared using the character string number, then the next drawing data is printed. Therefore, the character string number which differs according to the drawing fields should be designated. Since the automatic field clear is not performed between the Clear Command ([ESC] C) and Issue Command ([ESC] XS), the fixed data may be drawn using the same character string number. In this case, the Format Command and Data Command should be sent alternately. (After the Issue Command is sent, the fields with the same character string number are automatically cleared until the Clear Command is sent.)
- (5) The link field designation is cleared by omitting the link field designation using the same character string No. and reformatting data. The link field designation can be also cleared by the Image Buffer Clear Command.
- (6) A print data string and link field No. cannot be programmed at the same time.

Refer toBit Map Font Data Command ([ESC] RC)Outline Font Format Command ([ESC] PV)Bar Code Format Command ([ESC] XB)

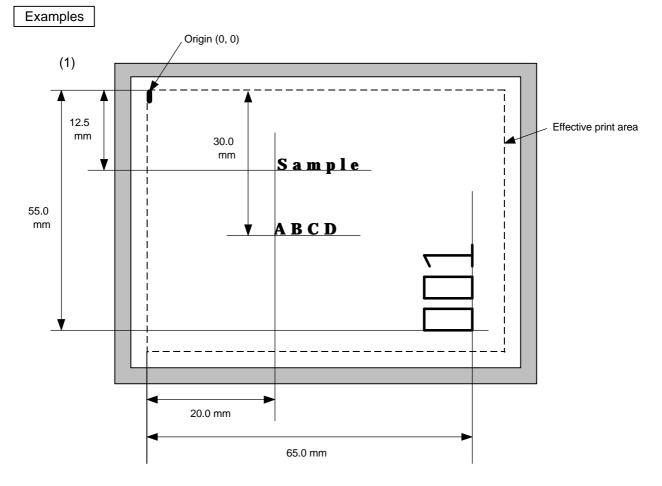

```
[ESC] C [LF] [NUL]
[ESC] PC000; 0200, 0300, 1, 1, A, 00, B=ABCD [LF] [NUL]
[ESC] PC001; 0200, 0125, 1, 1, C, 00, B [LF] [NUL]
[ESC] PC002; 0650, 0550, 2, 2, G, 33, B, +0000000001 [LF] [NUL]
[ESC] RC001; Sample [LF] [NUL]
[ESC] RC002; 001 [LF] [NUL]
[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]
```

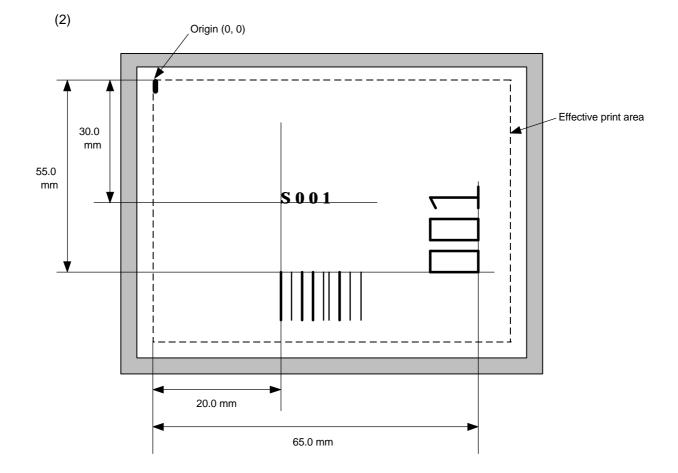

[ESC] C [LF] [NUL] [ESC] PC001; 0200, 0300, 1, 1, C, 00, B; 01, 02 [LF] [NUL] [ESC] PV01; 0650, 0550, 0200, 0150, B, 33, B; 02 [LF] [NUL] [ESC] XB01; 0200, 0550, 3, 1, 03, 03, 08, 08, 03, 0, 0150; 01, 02 [LF] [NUL] [ESC] RC; S [LF] 001 [LF] [NUL] [ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

# 6.11 OUTLINE FONT FORMAT COMMAND

[ESC] PV

Function

Sets the format to indicate the position on the label, at which the outline font is to be printed and how it is to be printed.

### ⊙ Fonts other than TrueType font

Format	<ul> <li>[ESC] PVaa; bbbb, cccc, dddd, eeee, f (, ghhh), ii, j (, Mk) (,Immmmmmmmm)</li> <li>(, Znn) (, Po) (=pppppp) [LF] [NUL]</li> </ul>
	<ul> <li>[ESC] PVaa; bbbb, cccc, dddd, eeee, f (, ghhh), ii, j (, Mk) (,Immmmmmmmm) (, Znn) (, Po) (; qq<sub>1</sub>, qq<sub>2</sub>, qq<sub>3</sub>,, qq<sub>20</sub>) [LF] [NUL]</li> </ul>
Term	aa : Character string number 00 to 99
	bbbb : Print origin of X-coordinate of the character string Fixed as 4 digits (in 0.1 mm units)
	cccc : Print origin of Y-coordinate of the character string 4 or 5 digits (in 0.1 mm units)
	dddd : Character width 0020 to 0850 (in 0.1 mm units)
	eeee : Height of the character 0020 to 0850 (in 0.1 mm units)
	f : Type of font A: TEC FONT1 (Helvetica [bold]) B: TEC FONT1 (Helvetica [bold] proportional) E: Price Font 1 F: Price Font 2 G: Price Font 3 H: TEC FONT2 DUTCH801 Bold (Times Roman Proportional) I: TEC FONT3 BRUSH738 Regular (Pop Proportional)
	<ul> <li>ghhh : Fine adjustment of character-to-character space (Omissible. If omitted, space is adjusted according to the designated font.)</li> <li>g: Designates whether to increase or decrease the character-to-character space.</li> <li>+: Increase</li> <li>-: Decrease</li> </ul>
	hhh: No. of space dots between characters 000 to 512 (in dots)
	<ul> <li>ii : Rotational angles of a character and character string 00 : 0° (char.) 0° (charstring) 11 : 90° (char.) 90° (charstring) 22 : 180° (char.) 180° (charstring) 33 : 270° (char.) 270° (charstring)</li> </ul>

: Character attribution

i

: Black character

W (aabb) : Reverse character

- aa: No. of dots from the character string to the end of the black background in the horizontal direction.
- bb: No. of dots from the character string to the end of the black background in the vertical direction.
  - aa: 01 to 99 (in units of dots)
  - bb: 01 to 99 (in units of dots)
- F (aabb): Boxed character
  - aa: No. of dots from the character string area to the box in the horizontal direction.
  - bb: No. of dots from the character string area to the box in the vertical direction.
    - aa: 01 to 99 (in units of dots)
    - bb: 01 to 99 (in units of dots)
- C (aa): Stroked out character
  - aa: No. of dots from the character string area to the end of the stroke
    - aa: 01 to 99 (in units of dots)
- Descriptions in parentheses are omissible.
   (If omitted, it is character size (the larger character width or height) ÷ 8 dots.)

#### Mk : Type of the check digit to be attached

(Omissible. If omitted, the check digit is not drawn.)

- k : Type of check digit
  - 0: Modulus 10 (Draws data and check digit)
  - 1: Modulus 43 (Draws data and check digit)
  - 2: DBP Modulus 10 (Draws check digit only)
- Immmmmmmmm: Increment and decrement

(Omissible. If omitted, incrementing/decrementing is not performed.)

- I: Designates whether to increment or decrement.
  - +: Increment
  - : Decrement

mmmmmmmmm: Skip value

000000000 to 999999999

Znn : Zero suppression

(Omissible. If omitted, the zero suppression process is not performed.) nn: No. of zeros to be suppressed

00 to 20

- Po : Alignment (Omissible. If omitted, the alignment is set to left.)
  - o: Designates the character position.
    - 1: Left
    - 2: Center
    - 3: Right

4aaaa: Equal space

- aaaa: X direction of character string area 0050 to 1040 (in 0.1 mm units)
- ppp-----ppp: Data string to be printed (Omissible) Max. 255 digits

qq<sub>1</sub>, qq<sub>2</sub>, qq<sub>3</sub>, -----, qq<sub>20</sub>: Link field No. (Omissible) 01 to 99 (1 to 99 can be also used.) Up to 20 fields can be designated using commas.

# ⊙ TrueType font

Format	[ESC] PVaa	; bbbb, cccc, dddd, eeee, ff, g (, hiii), jj, k (=ppp ppp) [LF] [NUL]
Term		aracter string number to 99
		nt origin of X-coordinate of the character string ed as 4 digits (in 0.1 mm units)
		nt origin of Y-coordinate of the character string or 5 digits (in 0.1 mm units)
		aracter width 20 to 0850 (in 0.1 mm units)
		ight of the character 20 to 0850 (in 0.1 mm units)
	ff : Typ 01: 02: 03: 04: 05: 06: 07: 08: 09: 10: 11: 12: 13: 14: 15: 16: 17: 18: 16: 17: 18: 19: 20: 21: 22: 23: 24: 25: (*1	<ul> <li>BlacklightD (File name: Blklt_rg.ttf)</li> <li>BrushScrD (File name: Brush_rg.ttf)</li> <li>CG Times (File name: Tec_cgt.ttf)</li> <li>CG Times Bold (File name: Tec_cgt.ttf)</li> <li>CG Times Italic (File name: Tec_cgt.ttf)</li> <li>Clarendon Condensed Bold (File name: Tec_clcd.ttf)</li> <li>FlashPBol (File name: Flash_bd.ttf)</li> <li>Garamond Kursiv Halbfett (File name: Tec_gmkh.ttf)</li> <li>GoudyHeaP (File name: Gdyhp_rg.ttf)</li> <li>GilliesGotDBol (File name: Gilli_bd.ttf)</li> <li>GilliesGotDBol (File name: Gilli_tt.ttf)</li> <li>NimbusSanNovTUltLigCon (File name: Nsnct_ul.ttf)</li> <li>Ryahd Bold (File name: ryahd.ttf)</li> <li>CG Triumvirate (File name: Trium.ttf)</li> <li>CG Triumvirate Condensed Bold (File name: Triumcb.ttf)</li> <li>Univers Medium (File name: Tec_uni.ttf)</li> <li>Univers Medium Italic (File name: Tec_uni.ttf)</li> <li>univers Medium Italic (File name: Tec_uni.ttf)</li> <li>add_on TrueType font 1 (File name: addttf04.ttf)</li> <li>add_on TrueType font 4 (File name: addttf05.ttf)</li> </ul>
	(*2	) For the fonts stored in the flash ROM on the CPU board, parameter "ff" for the type of font corresponds to the font type, according to the setting made when fonts are stored.

g: Drive

Indicates where the TrueType font files are stored.

- 0: Flash ROM on the CPU board
- 1: Slot 1 on the PCMCIA board (Option)
- 2: Slot 2 on the PCMCIA board (Option)
- \* "0" cannot be specified for the font types from 21 to 25.
- hiiii : Fine adjustment of character-to-character space
  - (Omissible. If omitted, space is adjusted according to the designated font.)
    - h: Designates whether to increase or decrease the character-to-character space.
      - +: Increase
      - -: Decrease
    - iii: No. of space dots between characters
      - 000 to 512 (in dots)
- jj : Rotational angles of a character and character string

00 :	0° (char.)	0° (charstring)
11:	90° (char.)	90° (charstring)
22 :	180° (char.)	180° (charstring)
33 :	270° (char.)	270° (charstring)


- k : Character attribution
  - B : Black character
- ppp-----ppp: Data string to be printed (Omissible) Max. 255 digits
- \* TrueType fonts are not included in the standard character generator data. Therefore, they must be installed in the flash ROM on the CPU board, or the ATA card. For installation of TrueType font and details, refer to the TrueType Font Specification (TAA-1184).

#### Explanation

(1) Character string number

When drawing by the Data Command ([ESC] RV), the format designated by the character string number is selected.


(2) Print origin of coordinates

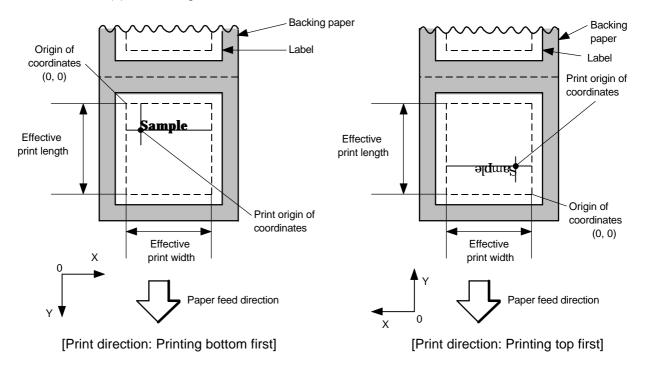

• The print origin of coordinates must be set so that the result of character drawing will be within the effective print area set by the Label Size Set Command ([ESC] D).

[Effective print area]							[mm]
Model				В	-482-QQ/QP		
					Cut		
Item	I	Vethod	Batch	Strip	Rotary	cutter	Swing
					Head-up operation not performed	Head-up operation performed	cutter
Effective print width		Min.	10.0				
		Max.			104.0		
Effective print					3": 79.0	3": 23.0	
length		Min.	6.0	21.4	4": 83.0	4": 23.0	23.0
	Label				5": 87.0	5": 23.0	
					8": 98.0	8": 23.0	
		Max.			2726.0		
					3": 28.0		
		Min.	8.0	-	4": 2	8.0	23.4
	Tag				5": 28.0		
					8": 3	6.0	
		Max.	2726.0	-		2726.0	

Character width and character height (3)

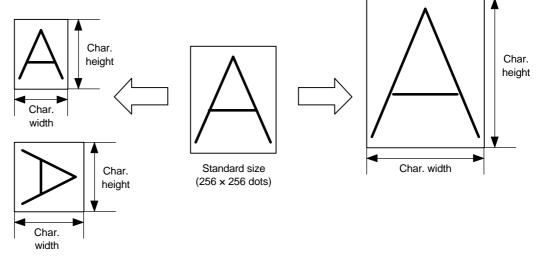

- (4) Type of font
  - A: TEC FONT1 (Helvetica [bold])

! "#\$%&'()\*+,-./ 0123456789:; <=>? @ABCDEFGHIJKLMNO PQRSTUVWXYZ[¥]^\_ 'abcdefghijklmno pqrstuvwxyz{¦}~

B: TEC FONT1 (Helvetica [bold] proportional)


!"#\$%&'()\*+,-./ 0123456789:;<=>? @ABCDEFGHIJKLMNO PQRSTUVWXYZ[¥]^\_ 'abcdefghijklmno pqrstuvwxyz{;}`A E: Price font 1 (POP font)

**\$%,-./** 0123456789 用头~

F: Price font 2 (POP font)

\$%,-./ 0123456789 円¥~

G: Price font 3 (POP font)

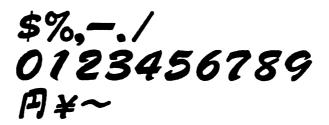

H: TEC FONT 2 DUTCH801 Bold (Times Roman Proportional)


```
!"#$%&'()*+,-./
0123456789:;<=>?
@ABCDEFGHLJKLMNO
PQRSTUVWXYZ[\] ^_
`abcdefghijklmno
pqrstuvwxyz{|}~
```


I: TEC FONT 3 BRUSH 738 Regular (Pop Proportional)

!"#\$%&'()\*+,-./ 0123456789:;<=>? @ABCDEFGHJFKLMNO PQRSJUVWXYE[\]^\_ `abcdefghijklmno pqrstuvwxyz{|}~

### (5) Fine adjustment of character-to-character space

If no character-to-character space is specified or the number of space dots between characters is 0, drawing will take place according to the horizontal spacing/proportional spacing determined for each character. If character-tocharacter space is specified, drawing will take place according to the value obtained by adding the character spacing/proportional spacing to the specified value. When equal space is selected in the alignment, the character-to-character space setting is invalid. (The horizontal spacing/proportional spacing are increased or decreased depending on the character size.)

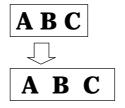

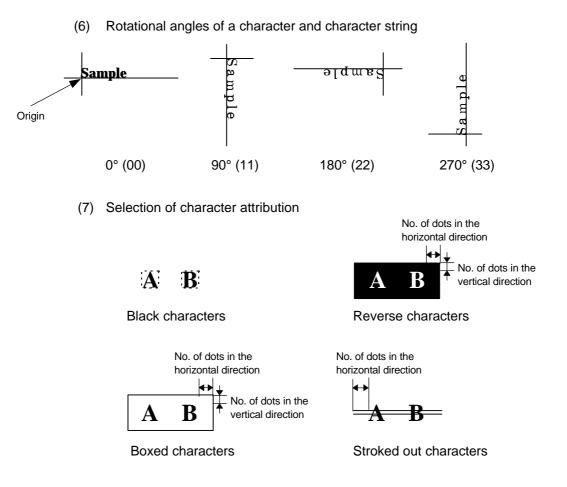

(8) Check digit to be attached

When Modulus 10 or Modulus 43 is selected, the check digit of a data row is calculated and attached to the data row for drawing. When modulus 10 is designated and the data includes any data other than the numerals the data row will not be drawn. When modulus 43 is designated and the data includes any character other than CODE39, no drawing will take place.

When DBP Modulus 10 is selected, the check digit of a data row is calculated and only the check digit is drawn. When the data includes any data other than the numerals, drawing is not performed.

\* DBP Modulus 10 is Modulus 10 for Deutsche Bundespost Postdienst only.

#### (9) Increment/decrement

Printing is performed while the data is incremented or decremented each time a label is issued. Where the data row exceeds the maximum number of digits (40), the data row will not be drawn.

Initial value	0000	0000	0000	0000	999999
INC/DEC	+10	+10	+10	+10	+1
Zero suppression	Not designated	5	3	0	3
1st label	0000	0000	000	0000	999999
2nd label	0010	0010	<b>山010</b>	0010	ப்பட 000
3rd label	0020	0020	⊔020	0020	ப்பட 001
4th label	0030	0030	⊔030	0030	പപപ002
5th label	0040	0040	ு040	0040	പപപ003

Letters and numerals for increment/decrement

For the data string, up to 40 digits (including letters, numerals and symbols) are possible. Only the numerals are picked up and calculated for incrementing/ decrementing, and then are returned to the previous position to draw the data.

Example of increment/decrement calculation

Initial value	00000	A0A0A	7A8/9	A2A0A
INC/DEC	+1	+1	+3	-3
1st label	00000	A0A0A	7A8/9	A2A0A
2nd label	00001	A0A1A	7A9/2	A1A7A
3rd label	00002	A0A2A	7A9/5	A1A4A
4th label	00003	A0A3A	7A9/8	A1A1A
5th label	00004	A0A4A	8A0/1	A0A8A

#### (10) Zero suppression

No. of zeros to be suppressed	0	1	2	2	3	4	5
Data	0000	0000	0000	0A12	0123	0123	0123
Print	0000	0	00	_A12	_123	0123	0123

The leading zero(s) in a data row is replaced by a space(s) according to the designated number of digits. However, if the number of digits to be suppressed is greater than the data row, the data row will be drawn without zero suppression. Where the data row exceeds the maximum number of digits (40), the data row will not be drawn.

No. of dots of character string

area in the X direction

(11) Alignment

Origin Left	Center	Right	Equalspace

If characters are not placed on one line when equal space is designated, the width is calculated automatically. When the width is less than the limit value (2 mm) for the outline font, the field is not drawn. (The same previous field is also not drawn.)

(12) Data string to be printed

Drawing data can be programmed by designating the number of digits after the symbol "=." Up to 255 digits can be printed. When the number of digits exceeds 255, the excessive data will be discarded.

For the character code table, refer to the character code table mentioned later.


(13) Link field No.

The link field No. can be programmed by designating it after the symbol ":." After the link field No. is designated using the Format Command, the data strings are linked by the Link Field Data Command to draw an image.


Up to 20 fields can be linked.


The following shows an example of linked fields on the two continuous labels.

[Format Command]

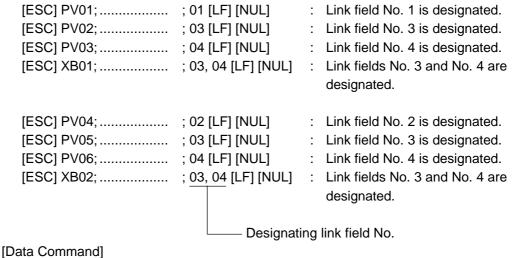

[ESC] RV; A [LF] B [LF] ABCD [LF] 001 [LF] [NUL]

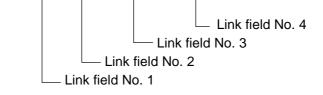

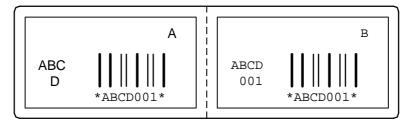

Notes

The check digit attach, increment/decrement, and zero suppress processes are (1) performed according to the following priority. If any of the conditions is improper, no drawing will take place.

For example, the zero(s) is replaced by a space(s) as a result of zero suppression Lbut the modulus 10 designated to be attached cannot be calculated.

Increment/decrement > zero suppression > attachment of check digit

(2) Up to 32 fields for which incrementing/decrementing has been designated can be drawn. If the total of bit map font, outline font, or bar code increment/decrement fields exceeds 32, drawing will take place without incrementing/decrementing any excessive field. The field to be incremented or decremented is incremented or decremented until the Image Buffer Clear Command ([ESC] C) is transmitted.

[Examples]


- 1) Format Command (Increment character string No. 001 (+1))
- 2) Format Command (No incrementing for character No. 002)
- 3) Format Command (Increment character string No. 003 (+2))
- 4) Image Buffer Clear Command
- 5) Data Command (character string No. 001 "0001")
- 6) Data Command (character string No. 002 "AB-")
- 7) Data Command (character string No. 003 "0100")
- 8) Issue Command (2 labels)

0001
AB-0100
0002
AB-0102

9) Issue Command (1 label)

0003 AB-0104

- 10) Image Buffer Clear Command
- 11) Data Command (character string No. 002 "00000")
- 12) Issue Command (1 label)

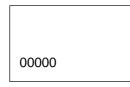


(3) The Outline Font Format Command may be connected to the Bit Map Font Format Command when transmitted.

[ESC] PC001; 0100, 0150, 1, 1, A, 00, B [LF] C002; 0350, 0180, 1, 1, A, 00, B [LF] C005; 0200, 0300, 25, 2, C, +05, 00, B, +0000000001 [LF] V01; 0500, 0400, 0100, 0100, A, 00, B [LF] [NUL]


- (4) When the drawing data is changed per label issue during printing, the field of the drawing data for the previous label is automatically cleared using the character string number, then the next drawing data is printed. Therefore, the character string number which differs according to the drawing fields should be designated. Since the automatic field clear is not performed between the Clear Command ([ESC] C) and Issue Command ([ESC] XS), the fixed data may be drawn using the same character string number. In this case, the Format Command and Data Command should be sent alternately. (After the Issue Command is sent, the fields with the same character string number are automatically cleared until the Clear Command is sent.)
- (5) When characters overlap due to the character-to-character space fine adjustment, the outline font is not painted properly. Program the fine adjust value so that characters will not overlap. Also, when drawings such as lines or characters are on the outline font drawing position, the outline font is not painted properly. For font types A and B, the fine adjustment value should be set so that other drawings do not overlap the area in which the outline font is to be drawn. For font types C, E, F and G, the fine adjustment value should be set so that other drawings do not overlap the area for the designated character width and height.
- (6) The link field designation is cleared by omitting the link field designation using the same character string No. and reformatting data. The link field designation can be also cleared by the Image Buffer Clear Command.
- (7) A print data string and link field No. cannot be programmed at the same time.

Outline Font Data Command ([ESC] RV) Bit Map Font Format Command ([ESC] PC) Bar Code Format Command ([ESC] XB)

Refer to

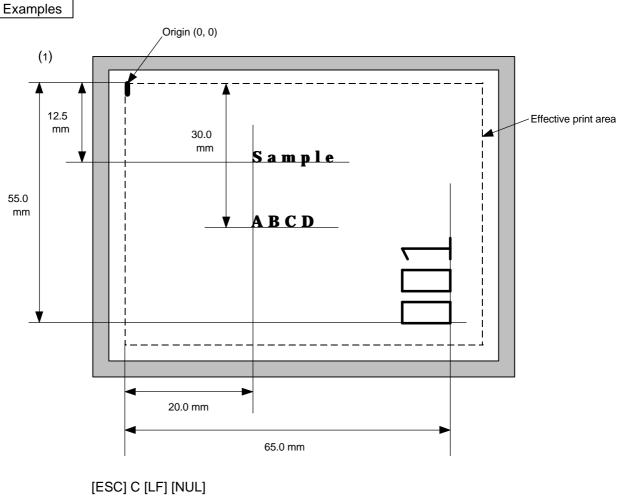

```
[ESC] C [LF] [NUL]
[ESC] PV00; 0200, 0300, 0080, 0080, B, 00, B=ABCD [LF] [NUL]
[ESC] PV01; 0200, 0125, 0100, 0100, B, 00, B [LF] [NUL]
[ESC] PV02; 0650, 0550, 0200, 0150, B, 33, B, +0000000001 [LF] [NUL]
[ESC] RV01; Sample [LF] [NUL]
[ESC] RV02; 001 [LF] [NUL]
[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]
```

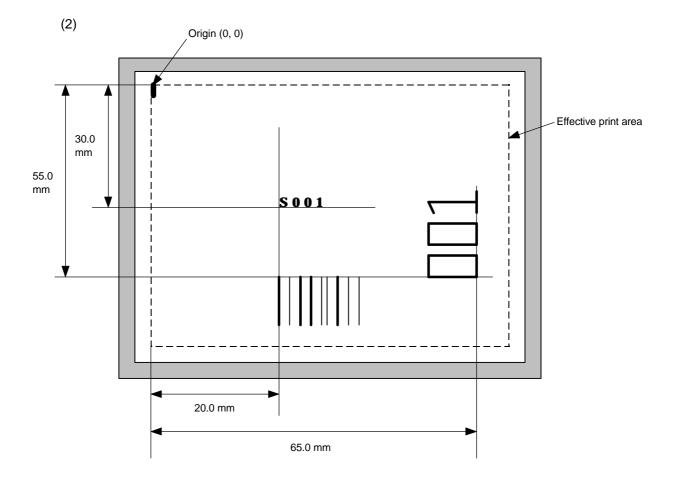

[ESC] C [LF] [NUL]

[ESC] PC001; 0200, 0300, 1, 1, C, 00, B; 01, 02 [LF] [NUL]
[ESC] PV01; 0650, 0550, 0200, 0150, B, 33, B; 02 [LF] [NUL]
[ESC] XB01; 0200, 0550, 3, 1, 03, 03, 08, 08, 03, 0, 0150; 01, 02 [LF] [NUL]
[ESC] RV; S [LF] 001 [LF] [NUL]
[ESC] XS; I, 0002, 0002C3000"; LF\$; NUL\$;

### 6.12 BAR CODE FORMAT COMMAND

### [ESC] XB

Function

Sets the format to indicate the position on the label, at which the bar code is to be printed and how it is to be printed.

⊙ In the case of WPC, CODE93, CODE128, UCC/EAN128, Customer bar code, POSTNET, RM4SCC, KIX CODE

(WPC is the generic name for bar codes of JAN, EAN and UPC.)

Format	<ul> <li>[ESC] XBaa; bbbb, cccc, d, e, ff, k, IIII (, mnnnnnnnnn, ooo, p, qq)</li> <li>(= sss sss) [LF] [NUL]</li> </ul>				
	② [ESC] XBaa; bbbb, cccc, d, e, ff, k, IIII (, mnnnnnnnn, ooo, p, qq) (; tt <sub>1</sub> , tt <sub>2</sub> , tt <sub>3</sub> ,, tt <sub>20</sub> ) [LF] [NUL]				
Term	aa : Bar code number 00 to 31				
	bbbb	:	Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)		
	cccc	:	Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)		
	d	:	Type of bar code 0 : JAN8, EAN8 5 : JAN13, EAN13 6 : UPC-E 7 : EAN13 + 2 digits 8 : EAN13 + 5 digits 9 : CODE128 (with auto code selection) A : CODE128 (without auto code selection) C : CODE93 G : UPC-E + 2 digits H : UPC-E + 5 digits I : EAN8 + 2 digits J : EAN8 + 5 digits K : UPC-A L : UPC-A + 2 digits M : UPC-A + 5 digits N : UCC/EAN128 R : Customer bar code (Postal code for Japan) S : Highest priority customer bar code (Postal code for Japan) U : POSTNET (Postal code for U.S) V : RM4SCC (ROYAL MAIL 4 STATE CUSTOMER CODE) (Postal code for U.K) W : KIX CODE (Postal code for Belgium)		

- e : Type of check digit
  - 1 : Without attaching check digit
  - 2 : Check digit check WPC Modulus 10 CODE93 Modulus 47 CODE128 PSEUDO 103
  - 3 : Check digit auto attachment (1) WPC Modulus 10 CODE93 Modulus 47 CODE128 PSEUDO 103 UCC/EAN128 Modulus 10 + Modulus 103 Customer code Special check digit POSTNET Special check digit RM4SCC Special check digit
  - 4 : Check digit auto attachment (2) WPC Modulus 10 + Price C/D 4 digits
  - 5 : Check digit auto attachment (3) WPC Modulus 10 + Price C/D 5 digits
    - \* For the Customer bar code, POSTNET, RMC4SCC, KIX CODE, only "3: Check digit auto attachment (1)" is effective.
- ff : 1-module width 01 to 15 (in dots)
- k : Rotational angle of bar code
  - 0 : 0°
  - 1 : 90°
  - 2 : 180°
  - 3 : 270°
- IIII : Height of the bar code

0000 to 1000 (in 0.1 mm units)

For the Customer bar code, POSTNET, RMC4SCC, KIX CODE, the height of the long bar is specified.

- mnnnnnnnn : Increment/decrement
  - (Omissible. If omitted, incrementing/decrementing is not performed.)
  - m : Indicates whether to increment or decrement
    - +: Increment
    - -: Decrement
- nnnnnnnnn : Skip value

р

0000000000 to 999999999

- ooo : Length of WPC guard bar (Omissible. If omitted, the
  - (Omissible. If omitted, the guard bar is not attached.) 000 to 100 (in 0.1 mm units)
  - : Selection of print or non-print of numerals under bars (Omissible. If omitted, the numerals under the bars are not printed.)
    - 0 : Non-print
    - 1 : Print

qq	: No. of zeros to be suppressed
	(Omissible. If omitted, the zero suppression process is not performed.)
	00 to 20
SSS SSS	: Data string to be printed (Omissible)
	Max. 126 digits. However, it varies according to the type of bar code.
tt <sub>1</sub> , tt <sub>2</sub> , tt <sub>3</sub> ,	tt <sub>20</sub> : Link field No. (Omissible)
	01 to 99 (1 to 99 can be also used.)
	Up to 20 fields can be designated using commas.

\* Omissible parameters (such as "Increment/decrement", "Selection of print or nonprint of numerals under bars" and "No. of zeros to be suppressed") cannot be set when the postal code (Customer bar code, POSTNET, RM4SCC, KIX CODE) is selected.

Format	-	ESC] XBaa; bbbb, cccc, d, e, ff, gg, hh, ii, jj, k, IIII (, mnnnnnnnnnn, p, qq) (, ⊧ ₌ssssss) [LF] [NUL]
	_	ESC] XBaa; bbbb, cccc, d, e, ff, gg, hh, ii, jj, k, IIII (, mnnnnnnnnn, p, qq) (, t tt <sub>1</sub> , tt <sub>2</sub> , tt <sub>3</sub> ,, tt <sub>20</sub> ) [LF] [NUL]
Term	aa:	Bar code number 00 to 31
	bbbb:	Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)
	CCCC:	Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)
	d:	Type of bar code
		<ol> <li>MSI</li> <li>Interleaved 2 of 5 (ITF)</li> <li>CODE39 (standard)</li> <li>NW7</li> <li>CODE39 (full ASCII)</li> <li>Industrial 2 of 5</li> </ol>
	e:	Type of check digit
		1: Without attaching check digit
		2: Check digit check CODE39 Modulus 43 MSI IBM modulus 10 ITF Modulus 10 Industrial 2 of 5 Modulus check character
		3:Check digit auto attachment (1)CODE39Modulus 43MSIIBM modulus 10ITFModulus 10Industrial 2 of 5Modulus check character
		4: Check digit auto attachment (2) MSI IBM modulus 10 + IBM modulus 10 ITF DBP Modulus 10
		<ol> <li>Check digit auto attachment (3)</li> <li>MSI</li> <li>IBM modulus 11 + IBM modulus 10</li> </ol>
	ff:	Narrow bar width 01 to 99 (in dots)
	gg:	Narrow space width 01 to 99 (in dots)
		* In case of industrial 2 of 5, an element-to-element space is designated.
	hh:	Wide bar width 01 to 99 (in dots)
	ii:	Wide space width

- jj: Character-to-character space width 01 to 99 (in dots)
  - \* In case of MSI and ITF, character-to-character space width is set to 00.
- k: Rotational angle of bar code
  - 0: 0°
  - 1: 90°
  - 2: 180°
  - 3: 270°
- IIII: Height of the bar code

0000 to 1000 (in 0.1 mm units)

mnnnnnnnnn:

## nnn: Increment/decrement

(Omissible. If omitted, incrementing/decrementing is not performed.)

- m: Indicates whether to increment or decrement
  - +: Increment
  - -: Decrement

nnnnnnnn: Skip value

### 000000000 to 999999999

- p: Selection of print or non-print of numerals under bars(Omissible. If omitted, the numerals under the bars are not printed.)
  - 0: Non-print
  - 1: Print

# qq: No. of zeros to be suppressed(Omissible. If omitted, the zero suppression process is not performed.)00 to 20

### r: Designates the attachment of start/stop code (Omissible. If omitted, the start/stop code is automatically attached.)

- T: Attachment of start code only
- P: Attachment of stop code only
- N: Start/stop code unattached

### sss-----sss: Data string to be printed (Omissible)

Max. 126 digits. However, the number of digits varies according to the type of bar code.

 $tt_1, tt_2, tt_3, -----, tt_{20}$ : Link field No. (Omissible)

01 to 99 (1 to 99 can be also used.)

Up to 20 fields can be designated using commas.

### ● In the case of Data Matrix (two-dimensional code)

Format	① [ESC] XBaa; bbbb, cccc, d, ee, ff, gg, h (, Ciiijjj) (, Jkkllmmmnnn) (= 000000) [LF] [NUL]					
	<ul> <li>[ESC] XBaa; bbbb, cccc, d, ee, ff, gg, h (, Ciiijjj) (, Jkkllmmmnnn)</li> <li>(= pp<sub>1</sub>, pp<sub>2</sub>, pp<sub>3</sub>,, pp<sub>20</sub>) [LF] [NUL]</li> </ul>					
Term	aa : Bar code number 00 to 31					
	bbbb : Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)					
	cccc : Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)					
	d : Type of bar code Q: Data Matrix (two-dimensional code)					
	ee : ECC type 00 : ECC0 01 : ECC50 04 : ECC50 05 : ECC80 06 : ECC80 07 : ECC80 08 : ECC80 09 : ECC100 10 : ECC100 11 : ECC140 12 : ECC140 13 : ECC140 20 : ECC200					
	ff : 1-cell width 00 to 99 (in dots)					
	gg : Format ID] 01 : Format ID 1 02 : Format ID 2 03 : Format ID 3 04 : Format ID 4 05 : Format ID 5 06 : Format ID 6					
	* When ECC200 is designated as ECC type, the format ID designation is ignored. When format ID of 11 through 16 is designated, the selection of ECC200 is					

compulsory (to ensure compatibility with the old model).

- h : Rotational angle of bar code
  - 0: 0°

•

- 1: 90°
- 2: 180°
- 3: 270°

Ciiijjj : No. of cells

- (Omissible. If omitted, it is automatically set.)
- iii..: No. of cells in X direction 000 to 144
- jjj..: No. of cells in Y direction 000 to 144
  - \* Cell setting varies according to the ECC type.

	ECC0 to ECC140	ECC200
No. of cells to be designated	Odd numbers only	Even numbers only
Min./Max. No. of cells	9 × 9 to 49 × 49	10 × 10 to 144 × 144
Rectangular code	None	18 × 8 32 × 8 26 × 12 36 × 12 36 × 16 48 × 16

• When this parameter is omitted, the number of cells is automatically set. Also, when data except for the above values is designated for Nos. of cells in X and Y directions, the number of cells is automatically set.

Jkkllmmmnnn :	Connection setting (Omissible. No connection if this parameter is omitted.)			
	kk :	Code number	01 to 16	
	II :	No. of divided codes	02 to 16	
	mmm :	ID number 1	001 to 254	
	nnn :	ID number 2	001 to 254	
000 000 :		ring to be printed (Omis 000 digits.	ssible)	
pp <sub>1</sub> , pp <sub>2</sub> , pp <sub>3</sub> ,	<ul> <li>2, pp<sub>3</sub>,, pp<sub>20</sub>: Link field No. (Omissible)</li> <li>01 to 99 (1 to 99 can also be used.)</li> <li>Up to 20 fields can be designated using comm</li> </ul>			

### dir odo) f D ocic nal

<ul> <li>In the case</li> </ul>	e of PDF	-417 (two-dimensional code)				
Format	① [ESC] XBaa; bbbb, cccc, d, ee, ff, gg, h, iiii (=jjjjjj) [LF] [NUL]					
	2 [	② [ESC] XBaa; bbbb, cccc, d, ee, ff, gg, h, iiii (; kk <sub>1</sub> , kk <sub>2</sub> , kk <sub>3</sub> ,, kk <sub>20</sub> ) [LF] [NUL]				
Term	aa:	Bar code number 00 to 31				
	bbbb:	Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)				
	cccc:	Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)				
	d:	Type of bar code P: PDF417 (two-dimensional code)				
	ee:	Security level 00: Level 0 01: Level 1 02: Level 2 03: Level 3 04: Level 4 05: Level 5 06: Level 6 07: Level 7 08: Level 8				
	ff:	1-module width 01 to 10 (in dots)				
	gg:	No. of columns (strings) 01 to 30				
	h:	Rotational angle of bar code 0: 0° 1: 90° 2: 180° 3: 270°				
	iiii:	Bar height 0000 to 0100 (in 0.1 mm units)				
	jjjjj	<ul><li>jj: Data string to be printed (Omissible)</li><li>Max. 2,000 digits</li></ul>				
	kk₁, kk	<ul> <li>k<sub>2</sub>, kk<sub>3</sub>,, kk<sub>20</sub>: Link field No. (Omissible)</li> <li>01 to 99 (1 to 99 can be also used.)</li> <li>Up to 20 fields can be designated using commas.</li> </ul>				

### • In the case of MicroPDF417 (two-dimensional code)

### Format

[ESC] XBaa; bbbb, cccc, d, ee, ff, gg, h, iiii (=jjj-----jjj) [LF] [NUL]
 [ESC] XBaa; bbbb, cccc, d, ee, ff, gg, h, iiii (; kk<sub>1</sub>, kk<sub>2</sub>, kk<sub>3</sub>, -----, kk<sub>20</sub>) [LF] [NUL]

Term

- aa: Bar code number 00 to 31
- bbbb: Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)
- cccc: Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)
- d: Type of bar code X: MicroPDF417 (two-dimensional code)
- ee: Security level 00: Fixed
- ff: 1-module width 01 to 10 (in dots)
- gg: No. of columns/rows 00 to 38
- h: Rotational angle of bar code
  - 0: 0°
  - 1: 90°
  - 2: 180°
  - 3: 270°
- iiii: Bar height 0000 to 0100 (in 0.1 mm units)
- jjj-----jjj: Data string to be printed (Omissible) Max. 366 digits
- kk1, kk2, kk3, -----, kk20: Link field No. (Omissible)

01 to 99 (1 to 99 can also be used.) Up to 20 fields can be designated using commas.

Parameter (gg)	No. of columns	No. of rows	Max. number of digits for binary mode	Max. number of digits for upper case letter/space mode	Max. number of digits for numeric mode
00	_	_	150	250	366
01	1	_	22	38	55
02	2	_	43	72	105
03	3	_	97	162	237
04	4	_	150	250	366
05		11	3	6	8
06		14	7	12	17
07	1	17	10	18	26
08		20	13	22	32
09		24	18	30	44
10		28	22	38	55
11		8	8	14	20
12		11	14	24	35
13		14	21	36	52
14	2	17	27	46	67
15		20	33	56	82
16		23	38	64	93
17		26	43	72	105
18		6	6	10	14
19		8	10	18	26
20		10	15	26	38
21		12	20	34	49
22	3	15	27	46	67
23		20	39	66	96
24		26	54	90	132
25		32	68	114	167
26		38	82	138	202
27		44	97	162	237
28		4	8	14	20
29		6	13	22	32
30		8	20	34	49
31		10	27	46	67
32		12	34	58	85
33	4	15	45	76	111
34		20	63	106	155
35		26	85	142	208
36		32	106	178	261
37		38	128	214	313
38		44	150	250	366

### The maximum numbers of columns and rows for the MicroPDF417

"-" for parameter 00 to 04 indicates that the numbers of columns/rows are automatically set by the printer. In this case, the pattern which has a smaller number of code words is automatically selected. When the numbers of code words is equal, the smaller number of columns is selected.

● In the case of QR code (two-dimensional code)

Format	① [ESC] XBaa; bbbb, cccc, d, e, ff, g, h (, Mi) (, Kj) (, Jkkllmm) (= nnn nnn) [LF] [NUL]					
	② [ESC] XBaa; bbbb, cccc, d, e, ff, g, h (, Mi) (, Kj) (, Jkkllmm) (= oo <sub>1</sub> , oo <sub>2</sub> , oo <sub>3</sub> oo <sub>20</sub> ) [LF] [NUL]					
Term	aa : Bar code number 00 to 31					
	bbbb : Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)					
	cccc : Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)					
	d : Type of bar code T: QR code (two-dimensional code)					
	e : Designation of error correction level L : High density level M : Standard level Q : Reliability level H : High reliability level					
	ff : 1-cell width 00 to 52 (in dots)					
	g : Selection of mode M : Manual mode A : Automatic mode					
	<ul> <li>h : Rotational angle of the bar code</li> <li>0 : 0°</li> <li>1 : 90°</li> <li>2 : 180°</li> <li>3 : 270°</li> </ul>					
	Mi : Selection of model (Omissible. If omitted, Model 1 is automatically selected.) i = 1 : Model 1 2 : Model 2					
	<ul> <li>Kj : Mask number</li> <li>(Omissible. If omitted, the number is automatically set.)</li> <li>j = 0 to 7 : Mask number 0 to 7</li> <li>8 : No mask</li> </ul>					
	Jkkllmm : Connection setting (Omissible. No connection if this parameter is omitted.) kk = 01 to 16 : Value indicating which divided code is connected. II = 01 to 16 : Number of divided codes mm = 00 to FF : EX-ORed value for all data to be printed (which is not divided) in units of bytes					
	nnn nnn : Data string to be printed (Omissible) Max. 2000 digits					
	<ul> <li>oo<sub>1</sub> oo<sub>20</sub> : Link field No. (Omissible)</li> <li>01 to 99 (1 to 99 can also be used.)</li> <li>Up to 20 digits can be designated using commas.</li> </ul>					

		xiC				
Format	① [ESC] XBaa; bbbb, cccc, d (, e) (, Jffgg) (, Zh) [LF] [NUL]					
Term	aa	:	Bar code number 00 to 31			
	bbbb	:	Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)			
	cccc	:	Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)			
	d	:	Type of bar code Z: MaxiCode (two-dimensional code)			
	e	:	Mode selection (Omissible)Omitted:Mode 20:Mode 21:Mode 42:Mode 34:Mode 45:Mode 26:Mode 67:Mode 28:Mode 29:Mode 2			
	Jffgg	:	Connection setting (Omissible. No connection if this parameter is omitted.)ff : Code number01 to 08gg : No. of divided codes01 to 08			
	Zh	:	<ul> <li>Attachment of Zipper block and Contrast block</li> <li>(Omissible. If omitted, they are not attached.)</li> <li>h= 0 : No attachment of Zipper block and Contrast block</li> <li>1 : Attachment of Zipper block and Contrast block</li> <li>2 : Attachment of Zipper block</li> <li>3 : Attachment of Contrast block</li> </ul>			

### ● In the case of MaxiCode Code (two-dimensional code)


<ul> <li>In the case</li> </ul>	e of CP code (two-dimensional code) (It will be available in the future.)
Format	① [ESC] XBaa; bbbb, cccc, d, e, ff, g, h (, Ciijj) (= kkkk kkk) [LF] [NUL]
	② [ESC] XBaa; bbbb, cccc, d, e, ff, g, h (, Ciijj) (; II <sub>1</sub> , II <sub>2</sub> , II <sub>3</sub> , II <sub>20</sub> ) [LF] [NUL]
Term	aa : Bar code number 00 to 31
	bbbb : Print origin of X-coordinate of the bar code Fixed as 4 digits (in 0.1 mm units)
	cccc : Print origin of Y-coordinate of the bar code 4 or 5 digits (in 0.1 mm units)
	d : Type of bar code Y: CP code (two-dimensional code)
	<ul> <li>e : Designation of ECC (Error Correction Code) level</li> <li>0 : No designation</li> <li>1 : 10%</li> <li>2 : 20%</li> <li>3 : 30%</li> <li>4 : 40%</li> <li>5 : 50%</li> </ul>
	Only when the number of code characters is specified, can "0" (No designation) be selected. If the number of code characters is not specified, the CP code is not printed. When the number of code characters is specified, blank code areas created after the characters are encoded should all be filled with ECC characters.
	ff : 1-cell width 00 to 99 (in dots)
	g : No. of character bits 0 : Set automatically A : 8 bits
	Designates how many bits are used for representing a character. When "0" is designated, the optimal value is automatically set.
	h : Rotational angle of the bar code $0 : 0^{\circ}$ $1 : 90^{\circ}$ $2 : 180^{\circ}$ $3 : 270^{\circ}$
	Ciijj : No. of code characters (Set automatically when the designation is omitted.) ii = No. of characters in the X direction: 03 to 22 jj = No. of characters in the Y direction: 02 to 22
	"Character" is a unit for code for encoding the CP code. 1 character occupies a 3×3 square block. When a value for "jj" larger than "ii" is set, an error occurs. The number of cells for the code is as follows. (No. of characters × 3 +2)
	kkkk kkk : Data string to be printed (Omissible) Max. 473 digits

II<sub>1</sub>, II<sub>2</sub>, II<sub>3</sub>, --- II<sub>20</sub>: Link field No. (Omissible) 01 to 99 (1 to 99 can also be used.) Up to 20 digits can be designated using commas.

### Explanation (1) Bar code number

When drawing by the Data Command ([ESC] RB), the format designated by the bar code is selected.

(2) Print origin of coordinates

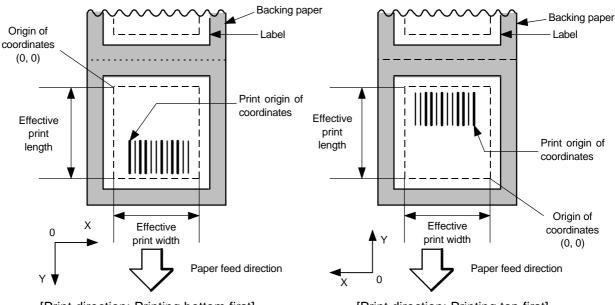

[Print direction: Printing bottom first]

[Print direction: Printing top first]

The print origin of coordinates must be set so that the result of bar code drawing will be within the effective print area set by the Label Size Set Command ([ESC] D).

[Effective print area]							[mm]	
		Model		В	-482-QQ/QP			
						Cut		
Item	I	Vethod	Batch	Strip	Rotary	cutter	Swing	
					Head-up operation not performed	Head-up operation performed	cutter	
Effective print width M			10.0					
		Max.	104.0					
Effective print					3": 79.0	3": 23.0		
length		Min.	6.0	21.4	4": 83.0	4": 23.0	23.0	
	Label				5": 87.0	5": 23.0		
					8": 98.0	8": 23.0		
		Max.			2726.0			
					3": 2	8.0		
		Min.	8.0	-	4": 2	8.0	23.4	
	Tag				5": 2	8.0		
	_				8": 3	6.0		
		Max.	2726.0	-		2726.0		

- (3) Type of bar code
  - 0: JAN8, EAN8



2: Interleaved 2 of 5



4: NW7



6: UPC-E



8: EAN13 +5 digits



B: CODE39 (Full ASCII)



G: UPC-E + 2 digits



I: EAN8 + 2 digits



K: UPC-A



- 1: MSI 1 2 3 4 5 6 7 8 9 0 3
- 3: CODE39 (standard)



5: JAN13, EAN13



7: EAN13 + 2 digits



9: A: CODE128



C: CODE93



H: UPC-E + 5 digits



J: EAN8 + 5 digits



L: UPC-A + 2 digits



M: UPC-A + 5 digits



O: Industrial 2 of 5

0



Q: Data Matrix



S: Highest priority customer bar code T:

U: POSTNET

հակտեսիսիսիսիսիվիկորովիսիսիսիսիսիսիսի

W: KIX code

իրկիիիկոլվիկիկիկին

Y: CP Code



N: UCC/EAN128



P: PDF417



R: Customer bar code

իլիվուիդեղեղեղեղեղեղեղեղերերել

de T: QR code



V: RM4SCC

հղիդիրկրկրկներիիիկներիկ

X: MicroPDF417



Z: MaxiCode



- (4) Type of check digit
  - ${\ensuremath{\mathbb O}}$  Where no check digit is attached, the bar code of the data row will be drawn.
  - In the case of the check digit check, if each check digit checked according to the type of bar code is normal, the bar code will be drawn. If the check digit not meeting the requirement is designated, the bar code will not be drawn.
  - ③ In the case of the check digit auto attachment, each check digit is attached according to the type of bar code and the bar code is drawn.
  - ④ If the type of bar code is CODE93, CODE128 (with auto code selection), or UCC/EAN128, the check digit will always be attached regardless of the designation of the type of check digit.
  - ⑤ If the type of bar code is JAN, EAN, or UPC, the designation of no check digit attachment automatically assume the check digit check.
  - © DBP Modulus 10 is Modulus 10 for Deutsche Bundespost Postdienst only.
- (5) Bar width, space width, and character-to-character space

Designate the bar, space, and character-to-character space widths according to the type of bar code. Note that the designated proper value differs according to the rotational angle of bar code, type, number of digits, print speed, paper used, etc. Examples of such designations are listed below. (1 dot = 1/12 mm)


In case of JAN, EAN, UPC, CODE93, CODE128, UCC/EAN128, PDF417, or MicroPDF417, a 2 to 6-module width is calculated automatically when a 1-module width is designated.

Type of bar code	1 module 2 modu		odules	3 modules		4 modules		5 modules		6 modules		
	Bar	Space	Bar	Space	Bar	Space	Bar	Space	Bar	Space	Bar	Space
JAN, EAN, UPC		4		8		12		16		-		-
CODE93		3		6		9		12		-		-
CODE128, EAN128		3		6		9		12		-		-
PDF417		3		6		9		12		15		18
MicroPDF417		2		4		6		8		10		12


Type of bar code	Narrow		Wide		Character-to-character
	Bar	Space	Bar	Space	
MSI	3	3	8	8	0
ITF	3	3	8	8	0
CODE39	3	3	8	8	3
NW7	3	3	8	8	3
Industrial 2 of 5	3	3	8	0	3

When NW7 is used, transmission of the space character assumes the space of (narrow space  $\times$ 12) dots. In this case, the space is max. 255 dots.


In the case of Data Matrix or CP code

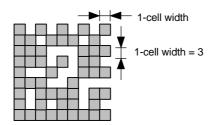

When 1-cell width is 00 for the Data Matrix or CP code, a two-dimensional code is not drawn. However, the two-dimensional code printed on the previous label is cleared.

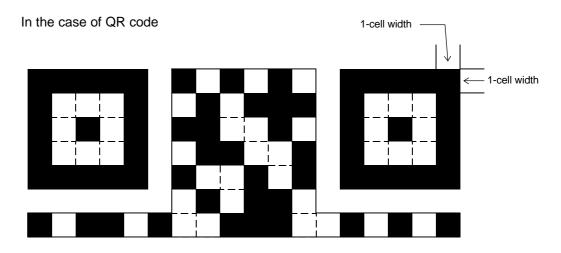


When the 1-cell width is 0, a two-dimensional code is not drawn. However, the bar code printed on the previous label is cleared.

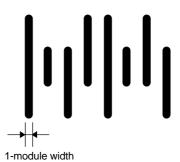


Rotational angle of bar code


In the case of a postal code

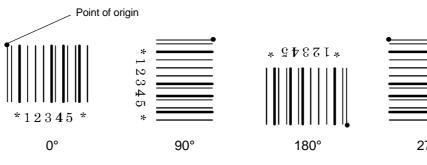


Point of origin

(6)

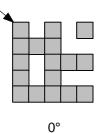


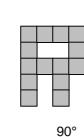

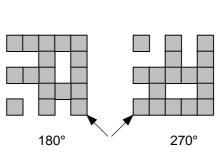

270°


\*12345 \*

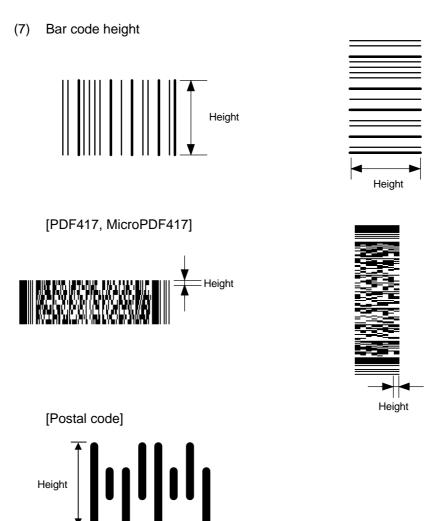

When the bar code height is 0000, bar code (including guard bar) and numerals under bars are not drawn. However, the bar code printed on the previous label is cleared.

(8) Length of guard bar

The length of guard bar is valid only when the type of bar code is WPC. It is ignored in any other cases.

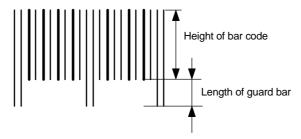

(9) Numerals under bars

Numerals are not or provided under bars according the parameter for the presence or absence of numerals under bars. The contents of numerals under bars to be printed vary according to the type of bar code. The character set of numerals under bars is OCR-B. Such numerals are enlarged or reduced only horizontally according to the width of the bar code. They are drawn vertically in the fixed one magnification.

[Drawing positions of numerals under bars]

 In the case of JAN and EAN (Example) EAN13 + 2 digits



(Example) EAN8



In the case of UPC
 (Example) UPC-A + 2 digits



(Example) UPC-E



In the case of other than JAN, EAN, and UPC (Example) CODE39



(Example) UCC/EAN128



- (10) Start/Stop Code
  - This parameter is valid only when the type of bar code is CODE39 and NW7.
  - Where the parameter is designated, the program will not check if the transmit print data is with a start code and stop code.
  - When the parameter is omitted in the case of CODE39 and NW7, a start/stop code will be attached. The code to be added is "\*" in the case of CODE39, and "a" in the case of NW7.
  - For details, refer to "Auto Attachment of Start/Stop Code" to be discussed later in this specification.
- (11) Increment/decrement

Printing is performed while the data is incremented or decremented each time a label is issued. Where the data row exceeds the maximum number of digits (40), the data row will not be drawn.

When CODE128 (without auto code selection) is used, the number of the start code (code A, code B, and code C) digits is regarded as 2.

Initial value	0000	0000	0000	0000	999999
INC/DEC	+10	+10	+10	+10	+1
Zero suppression	Not designated	5	3	0	3
1st label	0000	0000	000	0000	999999
2nd label	0010	0010	<b>_</b> 010	0010	ப்பட 000
3rd label	0020	0020	⊔020	0020	ப்பட 001
4th label	0030	0030	⊔030	0030	ப்பட 002
5th label	0040	0040	ு040	0040	പപപ003

Letters and numerals for increment/decrement

For CODE39 (standard), CODE39 (full ASCII), NW-7, CODE93, CODE128, if a data string other than numerals is included in the data, increment/decrement designation is performed. If any code which does not exist in each bar code table is contained in the data, increment/decrement designation is not performed.

Up to 40 digits (including letters, numerals and symbols) are possible. Only the numerals are picked up and calculated for incrementing/decrementing, and then are returned to the previous position to draw the data.

Initial value	00000	A0A0A	7A8/9	A2A0A
INC/DEC	+1	+1	+3	-3
1st label	00000	A0A0A	7A8/9	A2A0A
2nd label	00001	A0A1A	7A9/2	A1A7A
3rd label	00002	A0A2A	7A9/5	A1A4A
4th label	00003	A0A3A	7A9/8	A1A1A
5th label	00004	A0A4A	8A0/1	A0A8A

Example of increment/decrement calculation

Example of increment/decrement of data including the special codes of CODE128

Increment/decrement calculation starts from the last digit in the data strings. When the data string to be calculated is numeric, and the next (upper) digit is ">", that is a special code (shown with underline below). The next digit is calculated without incrementing/decrementing these two digits.

Example of increment/decrement calculation of CODE128

Initial value	00000	00 <u>&gt;0</u> 8	0A <u>&gt;0</u> 8	0A9 <u>&gt;0</u> 8
INC/DEC	+1	+1	+1	+1
1st label	00000	00 <u>&gt;0</u> 8	0A <u>&gt;0</u> 8	0A9 <u>&gt;0</u> 8
2nd label	00001	00 <u>&gt;0</u> 9	0A <u>&gt;0</u> 9	0A9 <u>&gt;0</u> 9
3rd label	00002	01 <u>&gt;0</u> 0	1A <u>&gt;0</u> 0	1A0 <u>&gt;0</u> 0
4th label	00003	01 <u>&gt;0</u> 1	1A <u>&gt;0</u> 1	1A0 <u>&gt;0</u> 1
5th label	00004	01 <u>&gt;0</u> 2	1A <u>&gt;0</u> 2	1A0 <u>&gt;0</u> 2

### (12) Zero suppression

No. of zeros to be suppressed	0	1	2	2	3	4	5
Data	0000	0000	0000	0A12	0123	0123	0123
Print	0000	0	00	山A12	∟123	0123	0123

The leading zero(s) in a data row is replaced by a space(s) according to the designated number of digits. However, if the number of digits to be suppressed is greater than the data row, the data row will be drawn without zero suppression. Where the data row exceeds the maximum number of digits (40), the data row will not be drawn.

When the print data including start/stop code is sent to sending print data, the start/stop code is also counted as a digit. When the bar code type is JAN, EAN, UPC or UCC/EAN 128, the data will be drawn without zero suppression.

(13) Data string to be printed


Drawing data can be programmed by designating the number of digits after the symbol "=." The maximum number of digits to be printed varies according to the types of bar codes. For codes, refer to the bar code table mentioned later.

(14) Link field No.

The link field No. can be programmed by designating it after the symbol ";." After the link field No. is designated using the Format Command, the data string are linked by the Link Field Data Command to draw an image. Up to 20 fields can be linked.

The following shows an example of linked fields on the two continuous labels.

### [Format Command]

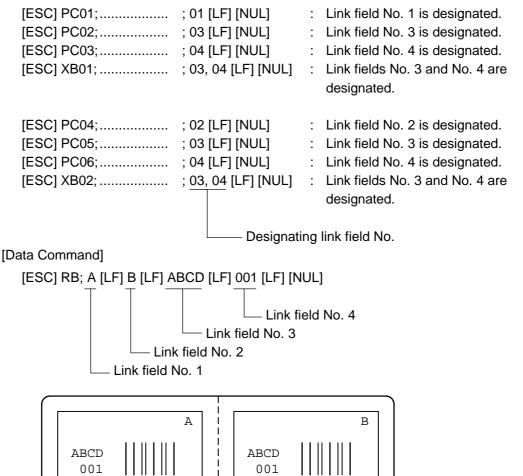

\*ABCD001;

\*ABCD001\*

(15) Explanation for Data Matrix

### ① ECC type

Data Matrix contains a function to correct a code reading error using an error correction code (ECC) and restore normal data. There are several ECCs and ECC is designated according to usage. The general correction ability is as follows. However, it may vary according to the error conditions.

ECC type	Error Correction Ability	Overhead by ECC
ECC0	Low	0%
ECC50		25%
ECC80		33%
ECC100	High	50%
ECC140	Tign	75%
ECC200		Approx. 30%

### ② Format ID

Data Matrix can handle all codes including alphanumerics, symbols and Kanji. Since data compression rate varies according to codes, however, a code to be used is designated using the format ID.

Format ID	Code	Details
1	Numerics	0 to 9 space
2	Letters	A to Z space
3	Alphanumerics, symbols	0 to 9 A to Z space . , - /
4	Alphanumerics	0 to 9 A to Z space
5	ASCII (7 bit)	00H to 7FH
6	ISO (8 bit)	00H to FFH (Kanji)

### ③ Maximum number of digits

The maximum number of digits varies according to the ECC type or format ID. Since each Kanji character uses 2 bytes, the maximum number of digits for it becomes half of the following values.

	ECC0	ECC50	ECC80	ECC100	ECC140
Format ID 1	500	457	402	300	144
Format ID 2	452	333	293	218	105
Format ID 3	394	291	256	190	91
Format ID 4	413	305	268	200	96
Format ID 5	310	228	201	150	72
Format ID 6	271	200	176	131	63

	Numeric	Alphanumeric	8 bit
ECC200	2000	2000	1556

For the maximum number of digits in cell units, see the next page.

### ④ Connection setting

The connection setting is used to comprise data with a set of two-dimensional codes when the data cannot be expressed with a two-dimensional code. When three two-dimensional codes are used to comprise data, identification information of 1/3, 2/3, and 3/3 is inserted into each two-dimensional code. The ID number is programmed to include a proper combination of two-dimensional codes when one label contains plural connecting symbols. For example, when there are two kinds of data containing identification information for 1/2 and 2/2 in the same label, combination of two-dimensional codes is unclear. By adding the ID number, the combination is made clear.

ECC000			ECC050	)		ECC080	)		ECC100	)		ECC140				
Symbo	ol size	Numeric capacity	Alphanum capacity	8-bit byte capacity												
Row	Col	-		oupdoity			oupdoity			oupdoity	-		oupuony	-		oupdoily
9	9	3	2	1	_	_	-	-	_	-	_	-	-	_	_	—
11	11	12	8	5	1	1	-	_	_	-	_	-	-	_	_	-
13	13	24	16	10	10	6	4	4	3	2	1	1	_	-	-	_
15	15	37	25	16	20	13	9	13	9	6	8	5	3	_	-	_
17	17	53	35	23	32	21	14	24	16	10	16	11	7	2	1	1
19	19	72	48	31	46	30	20	36	24	16	25	17	11	6	4	3
21	21	92	61	40	61	41	27	50	33	22	36	24	15	12	8	5
23	23	115	76	50	78	52	34	65	43	28	47	31	20	17	11	7
25	25	140	93	61	97	65	42	82	54	36	60	40	26	24	16	10
27	27	168	112	73	118	78	51	100	67	44	73	49	32	30	20	13
29	29	197	131	86	140	93	61	120	80	52	88	59	38	38	25	16
31	31	229	153	100	164	109	72	141	94	62	104	69	45	46	30	20
33	33	264	176	115	190	126	83	164	109	72	121	81	53	54	36	24
35	35	300	200	131	217	145	95	188	125	82	140	93	61	64	42	28
37	37	339	226	148	246	164	108	214	143	94	159	106	69	73	49	32
39	39	380	253	166	277	185	121	242	161	106	180	120	78	84	56	36
41	41	424	282	185	310	206	135	270	180	118	201	134	88	94	63	41
43	43	469	313	205	344	229	150	301	201	132	224	149	98	106	70	46
45	45	500	345	226	380	253	166	333	222	146	248	165	108	118	78	51
47	47	500	378	248	418	278	183	366	244	160	273	182	119	130	87	57
49	49	500	413	271	457	305	200	402	268	176	300	200	131	144	96	63

Cell size and the effective data capacity

/	/	ECC200			
Symbo	ol size	Numeric capacity	Alphanum capacity	8-bit byte capacity	
Row	Col			capacity	
10	10	6	3	1	
12	12	10	6	3	
14	14	16	10	6	
16	16	24	16	10	
18	18	36	25	16	
20	20	44	31	20	
22	22	60	43	28	
24	24	72	52	34	
26	26	88	64	42	
32	32	124	91	60	
36	36	172	127	84	
40	40	228	169	112	
44	44	288	214	142	
48	48	348	259	172	
52	52	408	304	202	
64	64	560	418	278	
72	72	736	550	366	
80	80	912	682	454	
88	88	1152	862	574	
96	96	1392	1042	694	
104	104	1632	1222	814	
120	120	2000	1573	1048	
132	132	2000	1954	1302	
144	144	2000	2000	1556	

### Rectangular code

	/	ECC200			
Symbo	ol size	Numeric capacity	Alphanum capacity	8-bit byte	
Row	Row Col			capacity	
8	18	10	6	3	
8	32	20	13	8	
12	26	32	22	14	
12	36	44	31	20	
16	36	64	46	30	
16	48	98	72	47	

- (16) Explanation for the PDF417 and MicroPDF417
  - ① Security level

The PDF417 contains a function to correct a code reading error using an error correcting code word and restore normal data. The security level is designated according to usage to perform the error correction function.

For the MicroPDF417, the printer sets the security level automatically.

Security level	Error Correction Ability	No. of error correction code words
Level 0		0
Level 1	Low	2
Level 2		6
Level 3		14
Level 4		30
Level 5		62
Level 6	$\overline{}$	126
Level 7	High	254
Level 8		510

② No. of columns (strings)

The number of lines is variable in the PDF417. The line length (No. of data strings) is also variable. Therefore, a symbol can be created in a form that can be easily printed, by changing the proportion of the height and width.

The number of columns (data strings) is variable between 1 to 30.

If the number of columns is small when data amount is large and security level is also high, drawing may not be performed. This is because the number of lines exceeds 90 when the number of columns becomes small. (When the PFD417 is used, the number of lines of symbols is limited from 3 to 90.)

For the MicroPDF417, not only the number of columns (data strings) but also the number of rows (data lines) can be designated. When these are to be designated, see the table on page 66. Note that the max. number of digits for the set parameter (gg) varies according to the character type. If data over the max. number of digits for the set parameter (gg) is set, the bar code is not printed. The number of columns (data strings) is variable from 1 to 4.

However, the max. number of lines, which is 44, depends on the number of columns.

- (17) Explanation for QR code
  - ① Error correction level

The QR code contains functions to detect and correct an error. If one of the data characters is damaged, the information can be restored when this code is read. There are 4 levels that can be designated. The general correction ability is as follows.

Level	Error correction ability	Overhead by correcting	
		an error	
High density level	Low	7%	
Standard level	$\left  \right\rangle$	15%	
Reliability level	$\checkmark$	25%	
High reliability level	High	30%	

# I-cell width

When the 1-cell width is 0, a two-dimensional code is not drawn. However, the twodimensional code printed on the previous label is cleared.

③ Selection of mode

All codes including alphanumerics, symbols, and Kanji can be used in one QR code. Manual mode or automatic mode can be selected to perform the operation.

④ Selection of model

Model 1 : Original specification

- Model 2 : Extended specification which enhances the function of position correction and contains a large amount of data.
- ⑤ Mask number

To be sure to read the QR code, it is preferable that white and black modules are arranged in this symbol in a balanced manner. This prevents the bit pattern "1011101", which is characteristically seen in the position detecting pattern, from appearing in the symbol as much as possible.

The mask number is 0 to 7. The pattern is determined by placing each masking pattern for the mask number upon the module pattern. When the mask number is set to 8, masking is not performed. When the parameter is omitted, the most appropriate mask number is automatically selected to perform masking.

6 Connection setting

For QR code, data can be divided into several codes. Even though there is only a narrow print space, the code can be entered in the space by dividing the code. The data can be divided into a max. of 16 codes. Parity data is obtained by EX-ORing all input data in units of bytes before dividing. The input data is calculated based on shift JIS for Kanji, or on JIS 8 for others. Examples are shown below:

"012345678日本" is divided into "0123," "4567" and "日本".

Code No. 1	No. of divided codes: 3	Parity data: 84	Data "0123"
Code No. 2	No. of divided codes: 3	Parity data: 84	Data "4567"
Code No. 3	No. of divided codes: 3	Parity data: 84	Data "89日本 "

\* The parity data is the EX-ORed value for "0123456789日本". 30 31 32 33 34 35 36 37 38 39 93 FA 96 7B = 84

- (18) Explanation for MaxiCode
  - $\textcircled{0} \quad \textbf{Connection setting}$

For MaxiCode, data can be divided into a max. of 8 codes.

- (19) Explanation for CP code
  - ① ECC (Error Correction Code) level

The CP code contains a function to correct a code reading error using an error correcting code word and restore normal data. The error correction level is selected according to usage to perform the error correction function.

The higher the percentage of the error correcting code word is, the higher the error correcting ability is.

For the CP code, the program is designed so that all remaining areas are used for correcting errors when the number of code characters is specified by a user. When the number of code characters is specified, "0" (No designation) can be used.

When the number of code characters is not specified by the user, a value from 10 to 50% must be selected. The printer automatically determines the number of code characters so that the error correcting code word exceeds the percentage specified by the user.

② The number of bits per character

Data is compressed by using the 8-bit compaction method. If "0" is specified, the data is compressed in the same way.

Character set for 8 bits

8 bits: ISO 00H to FFH (for Kanji)

③ The number of code characters

For the CP code, a  $3\times3$  cell is used for one block, and the block set forms the CP code.

The numbers of characters in X and Y directions can be set by the user.

When "0" is specified, the printer automatically sets the smallest code size in which data set by the user can be contained.

The rectangular code can be specified. The value for the Y direction must be smaller than the X direction.

The number of cells for the code is as follows.

(No. of code characters)  $\times 3 + 2$ 

### Notes

(1) The check digit attach, increment/decrement, and zero suppress processes are performed according to the following priority. If any of the conditions is improper, no drawing will take place.

For example, the zero(s) is replaced by a space(s) as a result of zero suppression but the modulus 10 designated to be attached cannot be calculated.

Increment/decrement > zero suppression > attachment of check digit

(2) Up to 32 fields for which incrementing/decrementing has been designated can be drawn. If the total of bit map font, outline font or bar code increment/decrement fields exceeds 32, drawing will take place without incrementing/decrementing any excessive field. The field to be incremented or decremented is incremented or decremented until the Image Buffer Clear Command ([ESC] C) is transmitted.

### [Example]

- ① Format Command (Increment character string No. 01 (+1))
- ② Format Command (Increment character string No. 02 (+2))
- ③ Image Buffer Clear Command
- ④ Data Command (character string No. 01 "0001")
- ⑤ Data Command (character string No. 02 "0100")
- 6 Issue Command (2 labels)

(0001)
(0100)
(0002)
(0102)

Issue Command (1 label)

(0003)
(0104)


- Image Buffer Clear Command
- Data Command (character string No. 02 "3000")
- Issue Command (1 label)




- (3) More than one Bar Code Format Command can be connected when transmitted.
  - [ESC] XB01; 0100, 0150, 3, 1, 02, 02, 06, 06, 02, 0, 0150 [LF] B02; 0350, 0150, 3, 1, 02, 02, 06, 06, 02, 0, 0150 [LF] [NUL]
- (4) When the drawing data is changed per label issue during printing, the field of the drawing data for the previous label is automatically cleared using the bar code number, then the next drawing data is printed. Therefore, the bar code number which differs according to the drawing fields should be designated. Since the automatic field clear is not performed between the Clear Command ([ESC] C) and issue Command ([ESC] XS), the fixed data may be drawn using the same bar code number. In this case, the Format Command and Data Command should be sent alternately. (After the Issue Command is sent, the fields with the same bar code number are automatically cleared until the Clear Command is sent.)
- (5) The link field designation is cleared by omitting the link field designation using the same bar code No. and reformatting data. The link field designation can be also cleared by the Image Buffer Clear Command.
- (6) A print data string and link field No. cannot be programmed at the same time.

Refer to


Bit Map Font Format Command ([ESC] PC) Outline Font Format Command ([ESC] PV) Bar Code Data Command ([ESC] RB)

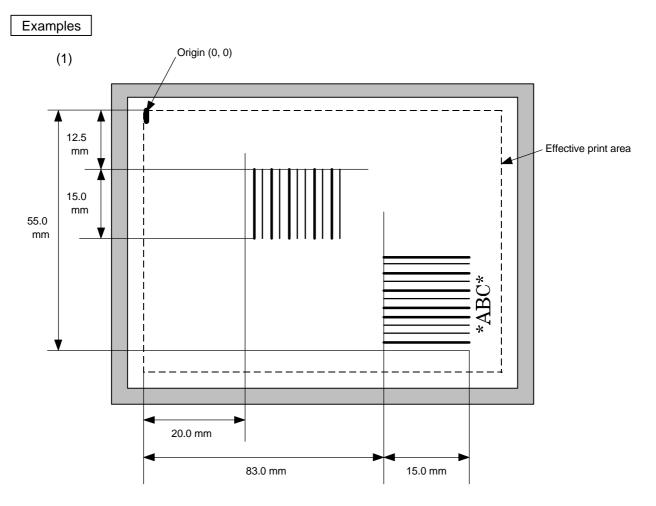

```
[ESC] C [LF] [NUL]
[ESC] XB01; 0200, 0125, 3, 1, 03, 03, 08, 08, 03, 0, 0150=12345 [LF] [NUL]
[ESC] XB02; 0830, 0550, 3, 1, 02, 04, 07, 08, 04, 3, 0150, +0000000000, 1, 00, N [LF] [NUL]
[ESC] RB02; * ABC * [LF] [NUL]
[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]
```

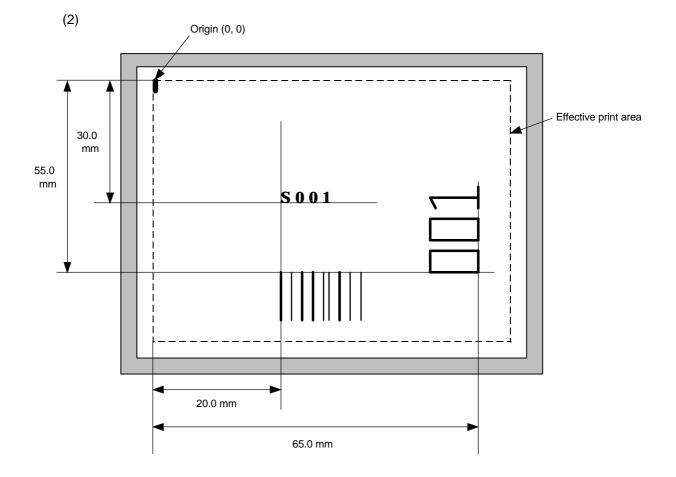

[ESC] C [LF] [NUL] [ESC] PC001; 0200, 0300, 1, 1, C, 00, B; 01, 02 [LF] [NUL] [ESC] PV01; 0650, 0550, 0200, 0150, B, 33, B; 02 [LF] [NUL] [ESC] XB01; 0200, 0550, 3, 1, 03, 03, 08, 08, 03, 0, 0150; 01, 02 [LF] [NUL] [ESC] RB; S [LF] 001 [LF] [NUL] [ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

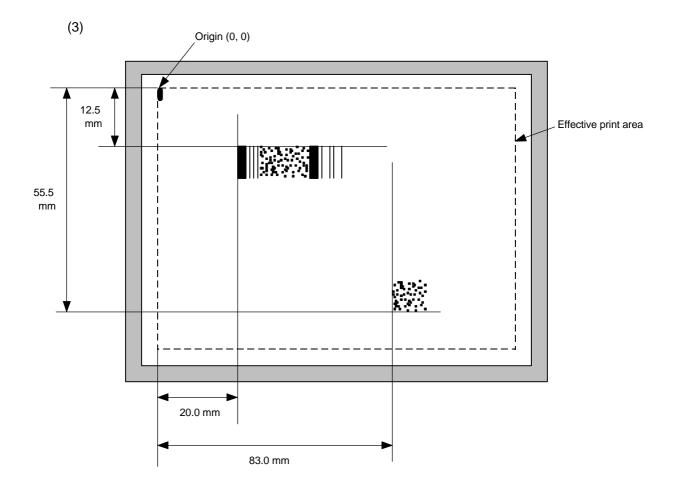

[ESC] C [LF] [NUL] [ESC] XB01; 0200, 0125, P, 04, 02, 03, 0, 0010 [LF] [NUL]

[ESC] XB02; 0830, 0550, Q, 08, 03, 05, 3 [LF] [NUL]

[ESC] RB01; PDF417 [LF] [NUL]


[ESC] RB02; Data Matrix [LF] [NUL]

[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]


# 6.13 BIT MAP FONT DATA COMMAND

3 BIT MAP	FONT DATA	COMMAND	[ESC] RC			
Function	Provides data	for the bit map font row.				
Format	<ul><li>2 Link Field</li></ul>	Caaa; bbb bbb [LF] [NUL] d Data Command C; ccc ccc [LF] ddd c	ldd [LF] [LF] xxx xxx [LF] [NUL]			
Term	aaa:	Character string number 000 to 199 (Two digits, 00 to s	99, also acceptable)			
	bbb bbb:	Any excess data will be disca	it type is 51, 52, 53, 54 or 55.) rded. r to the character code table to be given			
	ccc ccc:	Data string of link field No. 1				
	ddd ddd: to	Data string of link field No. 2				
		Data string of link field No. 99	)			
Explanation	<ul> <li>(1) Link field data string</li> <li>After the link field No. is designated in the Format Command, data string linked using the Link Field Data Command to draw an image.</li> </ul>					
	51, 52 When	53, 54, or 55, only up to 127 c	e linked. However, when the font type is digits can be linked. he maximum value, exceeding data will			
	• Up to 9	99 data strings can be linked.				
		2048 bytes can be used as the eld Data Command.	e command length ([ESC] to [NUL]) of the			
		the data string is omitted in th sing is performed:	e Link Field Data Command, the following			
	du ② W re	he to the omission. hen the field partially loses previous heat the field partially loses of the term of term	I for the field which contains no print data print data due to the omission, the only as print data. e used for the bit map font fields, outline			
	font fie (The s	lds, and bar code fields.	ny of the "RC," "RV" or "RB" command			
Refer to	Bit Map Font F	Format Command ([ESC] PC)				

Examples

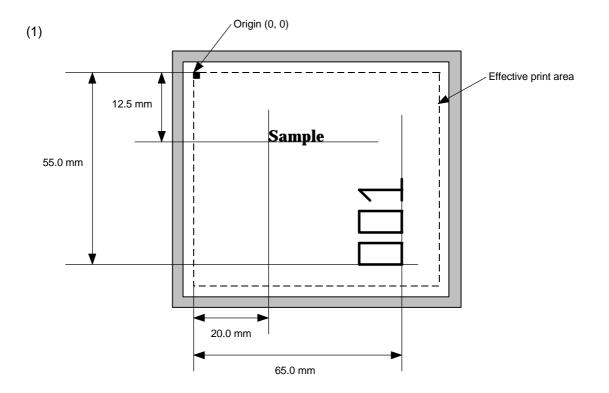

[ESC] C [LF] [NUL] [ESC] PC001; 0200, 0125, 1, 1, C, 00, B [LF] [NUL] [ESC] PC002; 0650, 0550, 2, 2, G, 33, B, +0000000001 [LF] [NUL] [ESC] RC001; Sample [LF] [NUL] [ESC] RC002; 001 [LF] [NUL] [ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

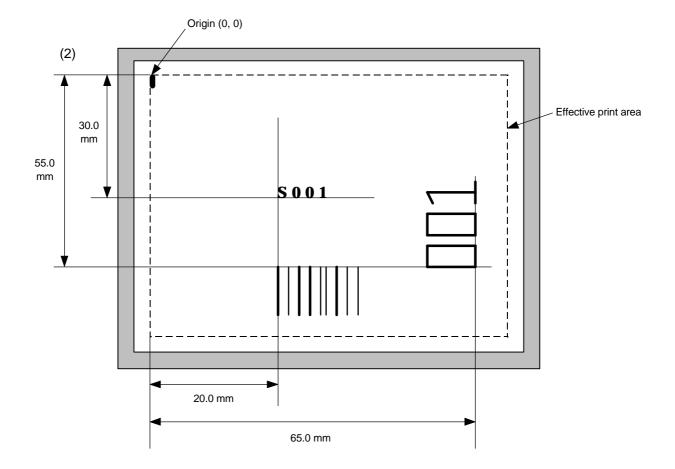

[ESC] C [LF] [NUL]

[ESC] PC001; 0200, 0300, 1, 1, C, 00, B; 01, 02 [LF] [NUL]

[ESC] PV01; 0650, 0550, 0200, 0150, B, 33, B; 02 [LF] [NUL]


[ESC] XB01; 0200, 0550, 3, 1, 03, 03, 08, 08, 03, 0, 0150; 01, 02 [LF] [NUL]

[ESC] RC; S [LF] 001 [LF] [NUL]


[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

## 6.14 OUTLINE FONT DATA COMMAND

14 OUTLINE	FONT DATA	COMMAND	[ESC] RV					
Function	Provides data f	or the outline font row.						
Format	① [ESC] RVaa	; bbb bbb [LF] [NUL]						
	② Link Field Data Command [ESC] RV; ccc ccc [LF] ddd ddd [LF] [LF] xxx xxx [LF] [NU							
Term	aa:	Character string number 00 to 99						
	bbb bbb:	Data string to be printed Max. 255 digits Any excess data will be disca For the character codes, refe later in this specification.	arded. Ir to the character code table to be given					
	CCC CCC:	Data string of link field No. 1						
	ddd ddd:	Data string of link field No. 2						
	to							
	xxx xxx:	Data string of link field No. 9	9					
Explanation	(1) Link field	data string						
		e link field No. is designated using the Link Field Data Com	in the Format Command, data strings are mand to draw an image.					
	-	255 digits of data strings ca of digits will be discarded.	in be linked. Data exceeding the max.					
	• Up to 9	9 data strings can be linked.						
	-	2048 bytes can be used as the eld Data Command.	e command length ([ESC] to [NUL]) of the					
		he data string is omitted in the sing is performed:	e Link Field Data Command, the following					
		processing will be performed to the omission.	for the field which contains no print data					
		en the field partially loses p aining data will be processed a	rint data due to the omission, the only as print data.					
	font fiel (The sa	ds, and bar code fields.	e used for the bit map font fields, outline by of the "RC," "RV" or "RB" command					
Refer to	Outline Font Fo	ormat Command ([ESC] PV)						
· · · · · · · · · · · · · · · · · · ·								

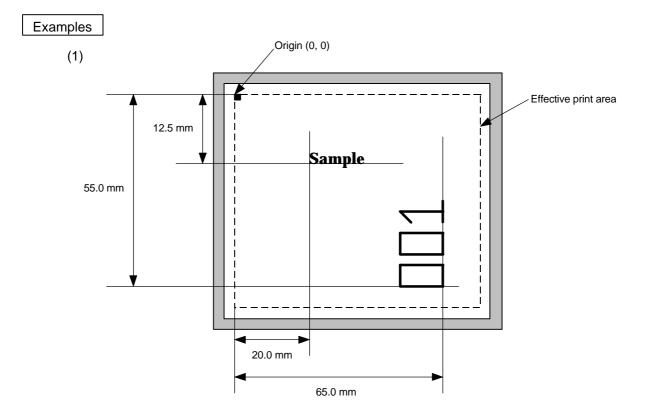

[ESC] C [LF] [NUL] [ESC] PV01; 0200, 0125, 0100, 0100, B, 00, B [LF] [NUL] [ESC] PV02; 0650, 0550, 0200, 0150, B, 33, B, +0000000001 [LF] [NUL] [ESC] RV01; Sample [LF] [NUL] [ESC] RV02; 001 [LF] [NUL] [ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

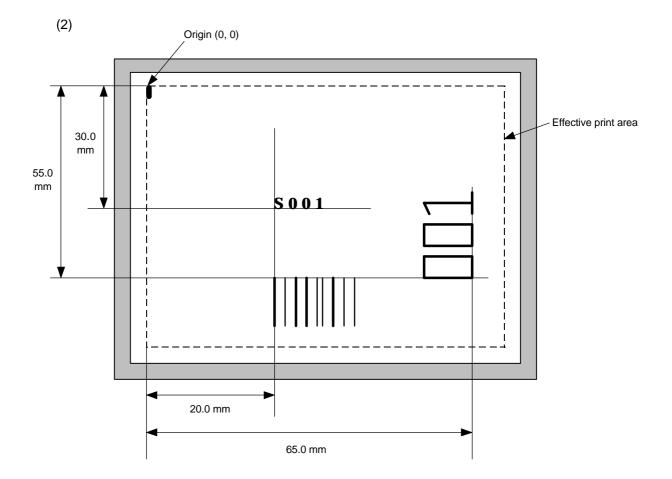

[ESC] C [LF] [NUL]

[ESC] PC001; 0200, 0300, 1, 1, C, 00, B; 01, 02 [LF] [NUL]

[ESC] PV01; 0650, 0550, 0200, 0150, B, 33, B; 02 [LF] [NUL]

[ESC] XB01; 0200, 0550, 3, 1, 02, 02, 06, 06, 02, 0, 0150; 01, 02 [LF] [NUL]

[ESC] RC; S [LF] 001 [LF] [NUL]

[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

## 6.15 BAR CODE DATA COMMAND

.15 BAR CO	DE DATA CO	MMAND	[ESC] RB			
Function	Provides data	for the bar code.				
Format	① [ESC] RBaa	a; bbb bbb [LF] [NUL]				
	② Link Field D [ESC] RB; c	eata Command	[LF] xxx xxx [LF] [NUL]			
Term	aa:	Bar code number 00 to 31				
	bbb bbb:	Data string to be printed The maximum number of digits varie code.	es according to the type of bar			
	CCC CCC:	Data string of link field No. 1				
	ddd ddd:	Data string of link field No. 2				
	to					
	xxx xxx:	Data string of link field No. 99				
	The Data Com	mand for the MaxiCode is described I	ater.			
Explanation	(1) Data chec	k				
	code will	data in the data row, which does not not be drawn. If wrong code select (no auto code selection), the bar cod	ion takes place in the data row of			
		data different from the one designat used, the symbol is not drawn.	ed using the format ID when Data			
	(2) No. of dig	its of data				
		a exceeding the maximum number o scarded. For the maximum number	-			
	CP coo MicroP MaxiCo Custon Highes POSTN ROYAI KIX CO Bar coo	DF417: ode: ner bar code: t priority customer bar code: NET: _ MAIL 4 STATE CUSTOMER CODE DDE: de other than the above	18 digits 126 digits			
	When the is not be c	number of digits does not correspond Irawn.	I to the bar code type, the bar code			

For the MaxiCode, the maximum number of digits varies according to the mode. In mode 2 or 3 and mode 4 or 6, it is 84 digits and 93 digits, respectively.

The maximum number of digits for Data Matrix varies according to the settings for ECC type, format ID, and the cell size. In the case of Kanji, the maximum number of digits is half those of the values described below since a Kanji character occupies 2 bytes.

Max number of	digits for	Data Matrix
---------------	------------	-------------

	ECC0	ECC50	ECC80	ECC100	ECC140
Format 1	500	457	402	300	144
Format 2	452	333	293	218	105
Format 3	394	291	256	190	91
Format 4	413	305	268	200	96
Format 5	310	228	201	150	72
Format 6	271	200	176	131	63

	Numeric	Alphanumeric	8 bit
ECC200	2000	2000	1556

### Cell Size and Effective Data Capacity

/	/	I	ECC000	)		ECC050	)		ECC080	)		ECC100	)		ECC140	)
Symbo	ol size	Numeric capacity	Alphanum capacity	8-bit byte capacity												
Row	Col															
9	9	3	2	1	_	_	-	-	-	-	_	_	-	-	_	_
11	11	12	8	5	1	1	-	-	_	-	_	_	-	-	_	-
13	13	24	16	10	10	6	4	4	3	2	1	1	-	-	-	-
15	15	37	25	16	20	13	9	13	9	6	8	5	3	-	-	_
17	17	53	35	23	32	21	14	24	16	10	16	11	7	2	1	1
19	19	72	48	31	46	30	20	36	24	16	25	17	11	6	4	3
21	21	92	61	40	61	41	27	50	33	22	36	24	15	12	8	5
23	23	115	76	50	78	52	34	65	43	28	47	31	20	17	11	7
25	25	140	93	61	97	65	42	82	54	36	60	40	26	24	16	10
27	27	168	112	73	118	78	51	100	67	44	73	49	32	30	20	13
29	29	197	131	86	140	93	61	120	80	52	88	59	38	38	25	16
31	31	229	153	100	164	109	72	141	94	62	104	69	45	46	30	20
33	33	264	176	115	190	126	83	164	109	72	121	81	53	54	36	24
35	35	300	200	131	217	145	95	188	125	82	140	93	61	64	42	28
37	37	339	226	148	246	164	108	214	143	94	159	106	69	73	49	32
39	39	380	253	166	277	185	121	242	161	106	180	120	78	84	56	36
41	41	424	282	185	310	206	135	270	180	118	201	134	88	94	63	41
43	43	469	313	205	344	229	150	301	201	132	224	149	98	106	70	46
45	45	500	345	226	380	253	166	333	222	146	248	165	108	118	78	51
47	47	500	378	248	418	278	183	366	244	160	273	182	119	130	87	57
49	49	500	413	271	457	305	200	402	268	176	300	200	131	144	96	63

/	/	ECC200				
Symbo	ol size	Numeric capacity	Alphanum capacity	8-bit byte capacity		
Row	Col			сарасну		
10	10	6	3	1		
12	12	10	6	3		
14	14	16	10	6		
16	16	24	16	10		
18	18	36	25	16		
20	20	44	31	20		
22	22	60	43	28		
24	24	72	52	34		
26	26	88	64	42		
32	32	124	91	60		
36	36	172	127	84		
40	40	228	169	112		
44	44	288	214	142		
48	48	348	259	172		
52	52	408	304	202		
64	64	560	418	278		
72	72	736	550	366		
80	80	912	682	454		
88	88	1152	862	574		
96	96	1392	1042	694		
104	104	1632	1222	814		
120	120	2000	1573	1048		
132	132	2000	1954	1302		
144	144	2000	2000	1556		

### Rectangular code

	/	ECC200				
Symbol size		Numeric capacity	Alphanum capacity	8-bit byte		
Row	Col			capacity		
8	18	10	6	3		
8	32	20	13	8		
12	26	32	22	14		
12	36	44	31	20		
16	36	64	46	30		
16	48	98	72	47		

When PDF417 or MicroPDF417 is used, the number of symbol characters called code words is limited to 928 or less. Moreover, the data compression rate varies according to the contents of data. Therefore, the maximum number of digits according to modes is as follows.

When letters and numerics are mixed in data in EXC mode, for example, however, the maximum values become smaller than the following values, since the internal mode switching code is used.

To correct a reading error by designating the security level, the maximum value becomes smaller, since the following error correction code words are used.

When the number of digits of the code word exceeds 928, or when the number of lines exceeds 90, the symbols are not drawn.

For the MicroPDF417, the numbers of lines and digits can be specified.

The maximum number of digits varies according to the setting.

In the case of PDF417

- Extended Alphanumeric Compaction (EXC) mode: 1850 digits
- Binary/ASCII Plus mode: 1108 digits
- Numeric compaction mode: 2000 digits

In the case of MicroPDF417

Binary mode: 150 digits
Upper case letter/space mode: 250 digits
Numeric compaction mode: 366 digits

#### No. of Error Correction Code Words of PDF417

For the MicroPDF417, the printer sets the security level automatically.

Security level	Error Correction Ability	No. of error correction code words
Level 0		0
Level 1	Low	2
Level 2	$\land$	6
Level 3		14
Level 4		30
Level 5		62
Level 6		126
Level 7	High	254
Level 8		510

Parameter (gg)	No. of columns	No. of rows	Max. number of digits for binary mode	Max. number of digits for upper case letter/space mode	Max. number of digits for numeric mode
00	_	_	150	250	366
01	1	_	22	38	55
02	2	_	43	72	105
03	3	_	97	162	237
04	4	_	150	250	366
05		11	3	6	8
06		14	7	12	17
07	1	17	10	18	26
08		20	13	22	32
09		24	18	30	44
10		28	22	38	55
11		8	8	14	20
12	]	11	14	24	35
13		14	21	36	52
14	2	17	27	46	67
15		20	33	56	82
16		23	38	64	93
17		26	43	72	105
18		6	6	10	14
19		8	10	18	26
20		10	15	26	38
21		12	20	34	49
22	3	15	27	46	67
23		20	39	66	96
24		26	54	90	132
25		32	68	114	167
26		38	82	138	202
27	<u> </u>	44	97	162	237
28		4	8	14	20
29		6	13	22	32
30		8	20	34	49
31		10	27	46	67
32		12	34	58	85
33	4	15	45	76	111
34		20	63	106	155
35		26	85	142	208
36		32	106	178	261
37		38	128	214	313
38		44	150	250	366

## The maximum numbers of columns and rows for the MicroPDF417

(3) CODE128 code selection

If the case of CODE128 (with auto code selection), code selection is performed in the following manner. (Conforming to USS-128 APPENDIX-G)

- ① Determining the start character
  - (a) If the data begins with four or more consecutive numerals, the start code to be used is (CODE C).
  - (b) In any case other than (a) in ①, if a control character appears before a small letter (see ④.) or four or more consecutive numerals, the start code is (CODE A).
  - (c) In none of the above cases, the start code is (CODE B).
- ② If the data begins with an odd number of digits in (a), ①:
  - (a) Insert the (CODE A) or (CODE B) character just before the last numeric data. When (FNC1), if found in the number, breaks a pair of digits in the number, insert the (CODE A) or (CODE B) character before the numeric data preceding the (FNC1). Selection of (CODE A) or (CODE B) should conform to (b) and (c) in ①.
- ③ If four or more digits of numeric data continue in (CODE A) or (CODE B).
  - (a) When the numeric data is an even number of digits, insert the (CODE C) character just before the first numeric data.
  - (b) When the numeric data is an odd number of digits, insert the (CODE C) character immediately after the first numeric data.
- ④ If a control character appears in (CODE B):
  - (a) In the subsequent data, when a small letter appears before the next control character or four or more consecutive digits, insert the (SHIFT) character before the first control character.
  - (b) When not so, insert the (CODE B) character just before the first control character.
- If a small letter appears in (CODE A):
  - (a) In the subsequent data, when a control character appears before the next small letter or four or more consecutive digits, insert the (CODE B) character before the first small letter.
  - (b) When not so, insert the (CODE B) character just before the first small letter.
- 6 If any data other than the numerals appears in (CODE C):
  - (a) Insert the (CODE A) or (CODE B) character just before the data other than the numerals. Selection of (CODE A) or (CODE B) should conform to (b) and (c) in ①.

(4) CODE128 code selection check

Check if selection of (CODE A), (CODE B) or (CODE C) of CODE128 has been set correctly. If an error is found, the bar code will not be drawn.

[Conditions causing an error]

- ① No start code is designated.
- O A small letter (including { , | , } , ~, \_ ) is found in (CODE A).
- ③ A control character is found in (CODE B).
- ④ Any data other than the numerals, (FNC1), (CODE A), and (CODE B) is found in (CODE C).
- ⑤ There are two or more consecutive (SHIFT) characters.
- <sup>©</sup> The number in (CODE C) is an odd number of digits.
- $\odot$  (SHIFT) is followed by (CODE A), (CODE B) or (CODE C).
- (5) Kanji code selection
  - In case of Data Matrix and PDF417, Kanji codes can be printed. Shift JIS, JIS hexadecimal, JIS 8 codes can be mixed.
- (6) Link field data string
  - After the link field No. is designated in the Format Command, data strings are linked using the Link Field Data Command to draw an image.
  - Up to 2000 digits of data strings of Data Matrix and PDF417 can be linked. For other bar codes, up to 126 digits can be linked. (The value varies according to the type of bar code.)
     When the number of digits exceeds the maximum value, exceeding data will be discarded.
  - Up to 99 data strings can be linked.
  - Up to 2048 bytes can be used as the command length ([ESC] to [NUL]) of the Link Field Data Command.
  - When the data string is omitted in the Link Field Data Command, the following processing is performed:
    - $\ensuremath{\mathbb O}$  No processing will be performed for the field which contains no print data due to the omission.
    - ② When the field partially loses print data due to the omission, the only remaining data will be processed as print data.
  - The Link Field Data Command can be used for the bit map font fields, outline font fields, and bar code fields.

(The same result is obtained when any of the "RC," "RV" or "RB" command code is designated.)

- (7) When manual mode is selected in the Format Command for a QR code
  - ① Numeric mode, alphanumeric and symbol mode, Kanji mode

Mode selection	Data to be printed	
----------------	--------------------	--

② Binary mode

Mode selection (4 digits) Data to be printer	Mode selection	No. of data strings (4 digits)	Data to be printed
--	----------------	-----------------------------------	--------------------

③ Mixed mode

Data	"," (comma)	Data	"," (comma)	Data
------	-------------	------	-------------	------

The QR code can handle all codes including alphanumerics, symbols and Kanji. Since data compression rate varies according to codes, the code to be used is designated when the mode is selected.

Mode	Code	Details	
Ν	Numerals	0 to 9	
А	Alphanumerics, symbols	A to Z 0 to 9 space	
		\$ % * + / :	
В	Binary (8-bit)	00H to FFH	
К	Kanji	Shift JIS, JIS hexadecimal	

If mixed mode is selected, up to 200 modes can be selected in a QR code.

(8) When the automatic mode is selected in the Format Command for a QR code.

Data to be printed

(9) How to transmit the control code data

NUL (00H) SOH (01H) STX (02H)	= = =	> A	(3EH, 40H) (3EH, 41H) (3EH, 42H)
i i			
GS (1DH)	=	> ]	(3EH, 5DH)
RS (1EH)	=	> ^	(3EH, 5EH)
US (1FH)	=	>_	(3EH, 5FH)
How to transmit	the spec	cial code	6
> (3EH)	=	> 0	(3EH, 30H)

()																
	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0	NUL	DLE	SP	0	@	Ρ	`	р	-							
1	SOH	DC1	!	1	А	Q	а	q								
2	STX	DC2	"	2	В	R	b	r								
3	ETX	DC3	#	3	С	S	с	s								
4	EOT	DC4	\$	4	D	Т	d	t								
5	ENQ	NAK	%	5	Е	U	е	u								
6	ACK	SYN	&	6	F	V	f	v								
7	BEL	ETB	,	7	G	W	g	w								
8	BS	CAN	(	8	Н	Х	h	х								
9	HT	EM	)	9	Ι	Υ	i	у								
А	LF	SUB	*	:	J	Ζ	j	z								
В	VT	ESC	+	;	К	[	k	{								
С	FF	FS	,	<	L	\	Ι									
D	CR	GS	-	=	М	]	m	}								
Е	SO	RS	•	>	Ν	^	n	~								
F	SI	US	/	?	0	_	0	DEL								

(10) Transfer code for QR code


\* The shaded parts are Japanese. They are omitted here.

(11) Examples of data designation

① Alphanumeric mode: ABC123


A <u>A B C 1 2 3</u> Data to be printed Designation of mode

② Binary mode: 01H, 03H, 05H

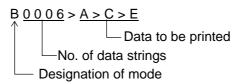

③ Mixed mode

Numeric mode	:	123456
Kanji mode	:	Kanji data
Binary mode	:	aアiイuウeエoオ
Alphanumeric mode	:	ABC

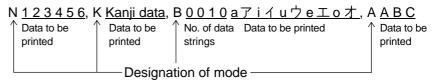


④ Automatic mode

When the data above (③) is designated in automatic mode:


<u>123456 Kanji data a ア i イ u ウ e エ o オ A B C</u> Data to be printed (12) MaxiCode data

For mode 2 or 3: [ESC] RBaa; bbbbbbbbbcccdddeeeee eeeee [LF] [NUL]							
	For mode 4 or 6: [ESC] RBaa; ffffffffgggggg ggggg [LF] [NUL]						
<ol> <li>bbbbbbbbb</li> <li>Mode 2:</li> </ol>							
b1b2b3b4	lb5	: Zip code	Fixed as 5 digits (Numerics)				
b6b7b8b9	)	: Zip code extension	Fixed as 4 digits (Numerics)				
Mode 3:		•					
b1b2b3b4b5b6 : Zip code		6:Zip code	Fixed as 6 digits (Character "A" of code set)				
b7b8b9		: Vacant	Final as 0 disits (0011)				
		. vacan	Fixed as 3 digits (20H)				
② ccc	:	Class of service	Fixed as 3 digits (20H)				
<ul><li>② ccc</li><li>③ ddd</li></ul>	:		<b>C</b> ( )				
		Class of service	Fixed as 3 digits (Numerics)				
③ ddd		Class of service Country code	Fixed as 3 digits (Numerics) Fixed as 3 digits (Numerics) 84 digits				

- **NOTES:** 1. When other than numerics is included in the data string of zip code (mode 2), zip code extension, class of service or country code, a MaxiCode is not drawn.
  - If the message data is less than 84 digits when mode 2 or 3 is selected, the printer adds a CR (000000) at the end of the data, and the remaining digits will be padded with FSs (011100). When message data exceeding 84 digits is received, the excess data will be discarded before drawing a MaxiCode.
  - 3. If the message data is less than 93 digits (9 digits + 84 digits) when mode 4 or 6 is selected, the printer adds a CR (000000) at the end of the data, and the remaining digits will be padded with FSs (011100). When message data exceeding 93 digits is received, the excess data will be discarded before drawing a MaxiCode.
  - 4. Mode 6 should not be used for usual operation since it is used for scanner programming.

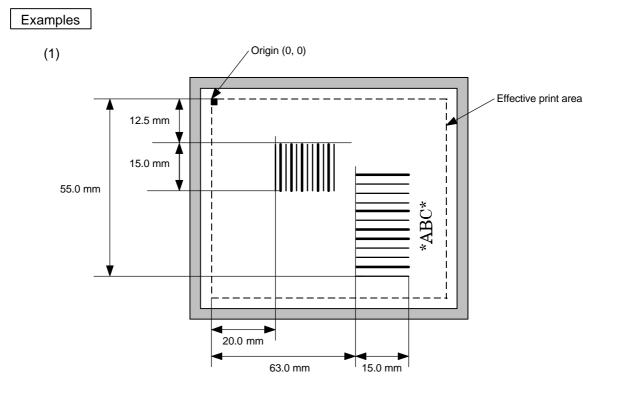

[ESC] C [LF] [NUL] [ESC] XB01; 0200, 0125, 3, 1, 02, 02, 06, 06, 02, 0, 0150 [LF] [NUL] [ESC] XB02; 0830, 0550, 3, 1, 02, 04, 07, 08, 04, 3, 0150, +0000000000, 1, 00, N [LF] [NUL] [ESC] RB01; 12345 [LF] [NUL] [ESC] RB02; \*ABC\* [LF] [NUL] [ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

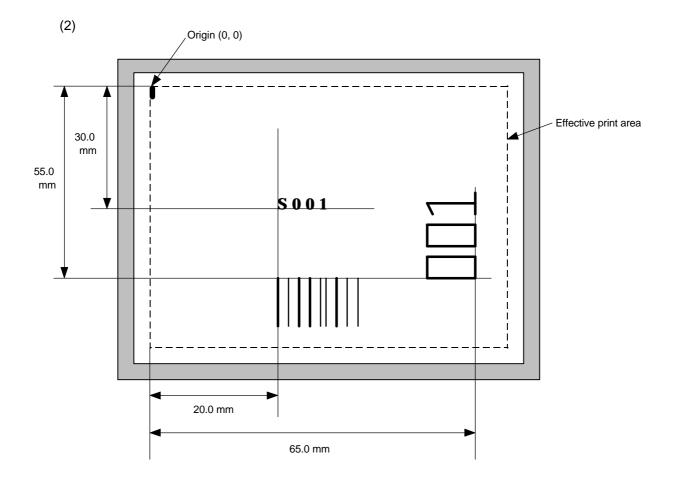

[ESC] C [LF] [NUL]


[ESC] PC001; 0200, 0300, 1, 1, C, 00, B; 01, 02 [LF] [NUL]

[ESC] PV01; 0650, 0550, 0200, 0150, B, 33, B; 02 [LF] [NUL]

[ESC] XB01; 0200, 0550, 3, 1, 02, 02, 06, 06, 02, 0, 0150; 01, 02 [LF] [NUL]

[ESC] RB; S [LF] 001 [LF] [NUL]

[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

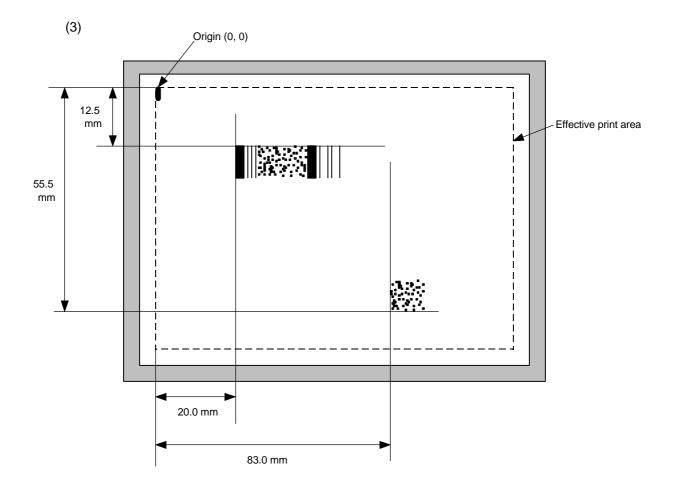

[ESC] C [LF] [NUL] [ESC] XB01; 0200, 0125, P, 04, 02, 03, 0, 0010 [LF] [NUL]

[ESC] XB02; 0830, 0550, Q, 08, 04, 05, 3 [LF] [NUL]

[ESC] RB01; PDF417 [LF] [NUL]

[ESC] RB02; Data Matrix [LF] [NUL]

[ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

## 6.16 ISSUE COMMAND

[ESC] XS

Function	Issues labels a	according to the print conditions programmed.
Format	[ESC] XS; I, a	aaa, bbbcdefgh [LF] [NUL]
Term	aaaa :	Number of labels to be issued 0001 to 9999
	bbb :	Cut interval. Designates the number of pieces to be printed before the backing paper is cut. 000 to 100 (no cut when 000)
	c :	<ul> <li>Type of sensor</li> <li>0: No sensor</li> <li>1: Reflective sensor</li> <li>2: Transmissive sensor (when using normal labels)</li> <li>3: Transmissive sensor (when using preprinted labels)</li> <li>4: Reflective sensor (when using a manual threshold value)</li> </ul>
	d :	Issue mode C: Batch mode D: Strip mode (with back feed, the strip sensor is valid.) E: Strip mode (with back feed, the strip sensor is ignored, the applicator supports this mode.)
	e :	<ul> <li>Issue speed</li> <li>3: 3 inches/sec</li> <li>4: 4 inches/sec</li> <li>5 5 inches/sec</li> <li>8 8 inches/sec</li> <li>NOTE: 4 inches/sec is effective only when the direct thermal print mode (without ribbon) is selected. If "4 inches/sec" is specified when the thermal transfer print mode (with ribbon) is selected, the printer will issue a label at 3 inches/sec.</li> </ul>
	f :	<ul> <li>With/without ribbon</li> <li>0: Without ribbon</li> <li>1: With ribbon (with ribbon saving function)</li> <li>2: With ribbon (without ribbon saving function)</li> <li>* With ribbon, transmissive/non-transmissive conforms to the system mode.</li> <li>When the stacker is used, "Without ribbon" is selected even if "With ribbon" is specified.</li> </ul>
	g :	<ul> <li>Designates tag rotation.</li> <li>0: Printing bottom first</li> <li>1: Printing top first</li> <li>2: Mirror printing bottom first</li> <li>3: Mirror printing top first</li> </ul>
	h :	Type of status response 0: No status response 1: Status response

### Explanation

- (1) Number of labels to be issued
  - If increment/decrement is not specified, the designated number of pieces with the same drawing dot will be issued.
  - If increment /decrement is specified, the designated number of pieces will be issued while incrementing/decrementing the piece of the designated drawing area.
    - \* The increment/decrement designation is valid until the Image Buffer Clear Command ([ESC] C) is transmitted.
- (2) Cut interval

The cut interval is valid only when the cutter has been installed and the issue mode is "C". If an error occurs during an issue after the cut interval is designated, and then printing is restarted, the printer ejects the printed paper then resumes printing on the paper where the error occurred.

If no subsequent command is received from the PC for 3 seconds after cutissuing the last label, when the cut interval is valid and "with automatic forward feed standby" set in the system mode, the printer automatically performs a 10mm forward feed.

When the Issue Command is received during the automatic forward feed standby, an issue is started after a reverse feed to the original position.

If any command is sent and processed after the Issue Command is sent, the automatic forward feed is not performed. Therefore, a command should not be sent after the Issue Command is sent. If the power should not be turned off then on, or the printer should not be placed in a pause/reset state before the automatic forward feed, since the automatic forward feed is not performed when the paper is fed by turning the power off then on, or by pressing the [FEED] key of the printer in the pause/reset state.

If the paper is fed by pressing the [FEED] key of the printer during the forward feed standby, the printer feeds one label, cuts, performs the automatic forward feed then stops.

**NOTE:** When the stacker is used, the cut interval is set to 1 automatically.

- (3) Type of sensor
  - No sensor: Printing takes place according to the parameter designated by the Label Size Set Command.
  - ② Reflective sensor:

Printing takes place according to the parameter designated by the Label Size Set Command. However, the black mark provided on the back side of the tag paper is automatically sensed by the reflective sensor and the paper position is finely adjusted every piece.

③ Transmissive sensor (when using normal labels):

Printing takes place according to the parameter designated by the Label Size Set Command. However, the label-to-label gap is automatically sensed by the reflective sensor and the paper position is finely adjusted every piece.


④ Transmissive sensor (when using preprinted labels):

Printing takes place according to the parameter designated by the Label Size Set Command. However, the label-to-label gap is automatically sensed by the transmissive sensor and the paper position is finely adjusted every piece according to the value set by the threshold set operation (key operation).

© Reflective sensor (when using a manual threshold value)


Printing takes place according to the parameters designated by the Label Size Set Command. However, the black mark provided on the back of the tag paper is automatically sensed by the reflective sensor and the paper position is finely adjusted every piece, according to the set threshold setting value (set using keys).

- (4) Issue mode
  - [C: Batch mode (cut interval 0)]

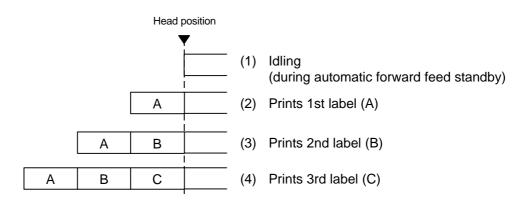


[C: Batch mode (Cut interval: 1, Issue count: 2)]

"Without automatic forward feed standby" selected in the system mode

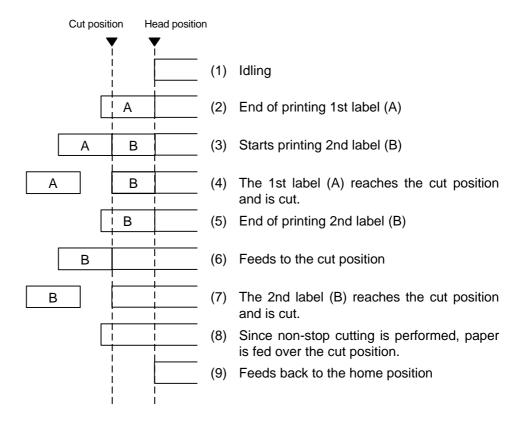


[C: Batch mode (Cut interval: 1, Issue count: 2)]

"With automatic forward feed standby" selected in the system mode

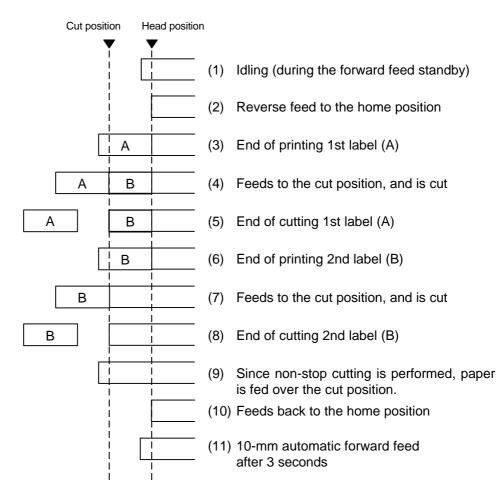


[When the stacker is used]


"Without automatic forward feed standby" selected in the system mode

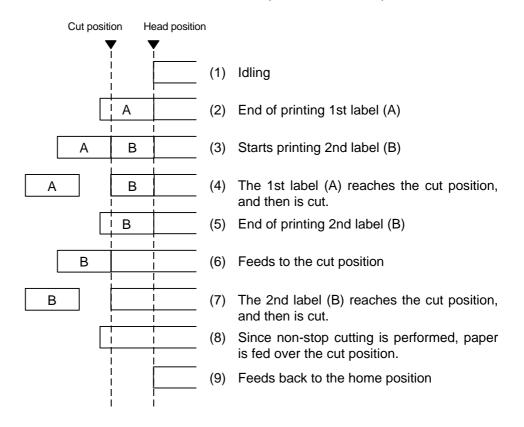

"With automatic forward feed standby" selected in the system mode

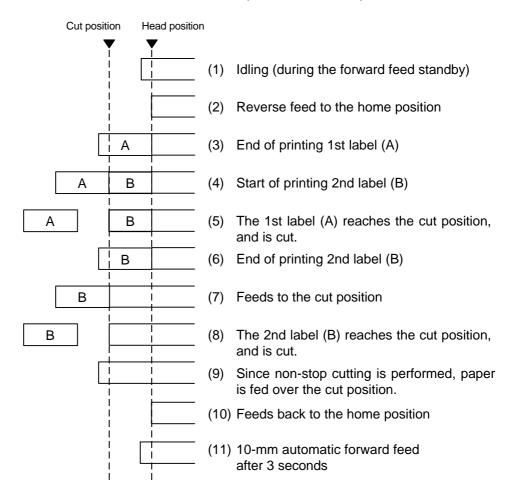


[D: Strip mode (Issue count: 3)]

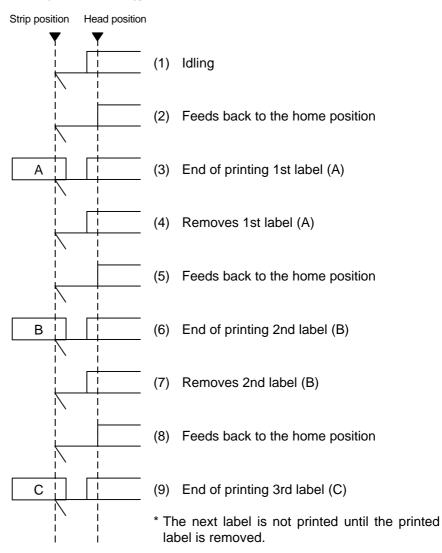

[E: Strip mode (Issue mode)]


The expansion I/O is installed:

The strip sensor is ignored. An issue performed by checking a PAUSE signal generated from the expansion I/O.

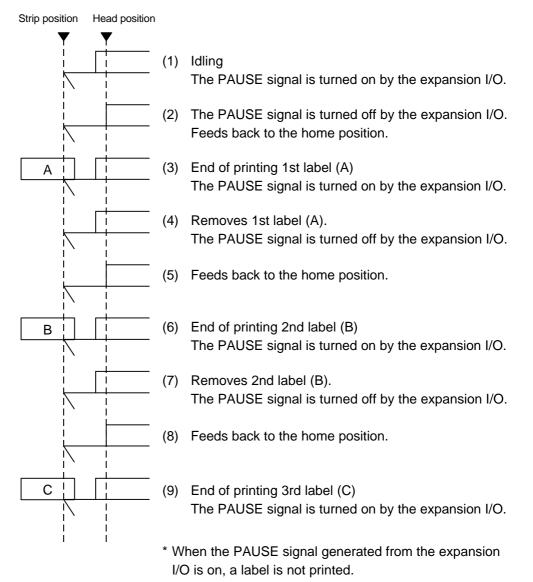

The expansion I/O is not installed:

The strip sensor is ignored, an issue is performed.

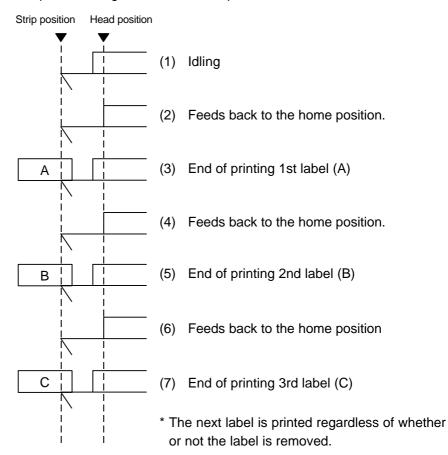

- \*1 Issue mode E is different from issue mode D. In issue mode E, a label is issued regardless of the strip sensor, and whether or not a label to be stripped, is placed.
- \*2 The peripheral device such as an applicator, must control the PAUSE signal generated from the expansion I/O.
- \*3 If the issue count is set to 2 or more to issue labels when the expansion I/O has been installed, the printer issues the specified number of labels while the PAUSE signal generated from the expansion I/O is off.
- \*4 If the issue count is set to 2 or more to issue labels when the expansion I/O has not been installed, the specified number of labels is issued.

- (5) Issue speed
  - Printing takes place at the designated speed.
     However, the back feed speed in cut mode and strip mode is 3"/sec.
  - The possible issue speed varies according to types and sizes of the paper supply. For details, refer to the Supply Specification.

Model	B-482-0	QQ/QP
	Thermal transfer	Direct thermal
Parameter	print mode	print mode
1		
2	3"/sec	3"/sec
3		
4		4"/sec
5		
6	5"/sec	5"/sec
7		
8		
9	8"/sec	8"/sec
А		

(6) With/without ribbon

Without ribbon : Use direct thermal paper.


With ribbon : Use thermal transfer ribbon.

With ribbon saving:

- When there is a non-print area (in the feed direction) of 20 mm or more in the batch mode, cut mode or strip mode, ribbon saving is performed automatically.
- The minimum print area (in the feed direction) in ribbon saving issue is 8 mm. If the print area is less than 8 mm, printing is performed by automatically assuming the minimum print area of 8 mm.
- Ribbon saving is performed for up to 4 fields (4 printing fields + 4 ribbon saving fields).
- When the ribbon saving issue is performed, on-the-fly issue is not performed regardless of data quantity or print length.
- When the parameter in the Issue Command is set to "Without ribbon saving function", or the ribbon saving system is set in the system mode so that it is not used, no ribbon saving will take place.


(7) Tag rotation

The origin of coordinates and printing direction vary according to the designation of tag rotation.

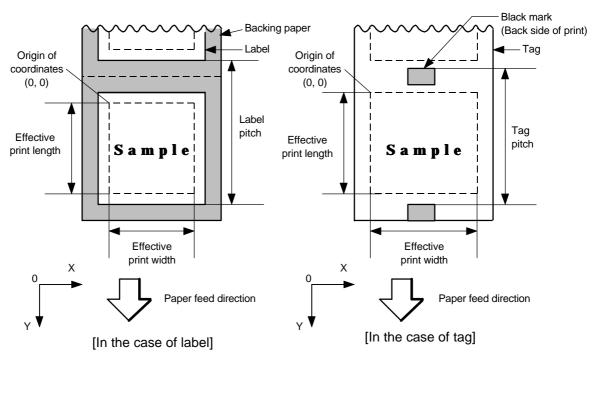


① Printing bottom first


② Printing top first

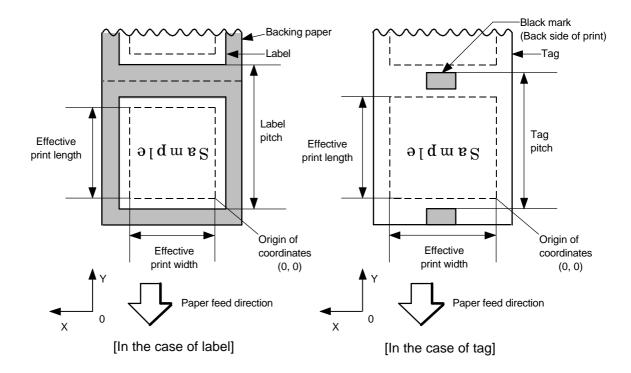

### ③ Mirror printing bottom first

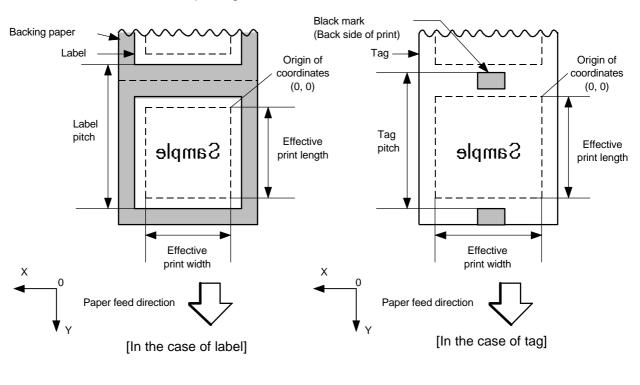

④ Mirror printing top first

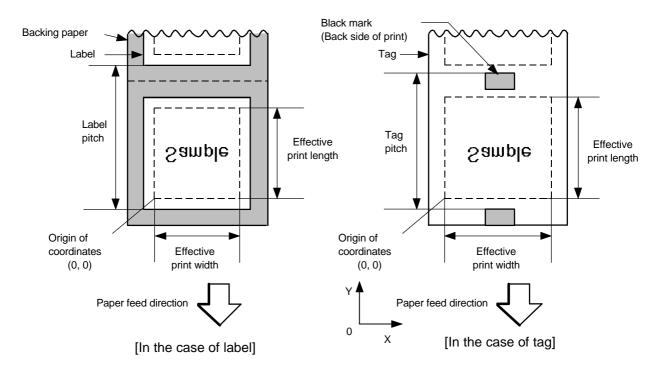


(8) Status response

When the option with status response has been selected, a status response is made at the end of printing or if an error occurs.

In batch mode and cut mode, the print end status response is made after printing on the designated number of labels.

In strip mode, the status response is made after printing one label.

\* Do not change the parameter for status response/no status response during printing. Otherwise the status response may not be performed properly.

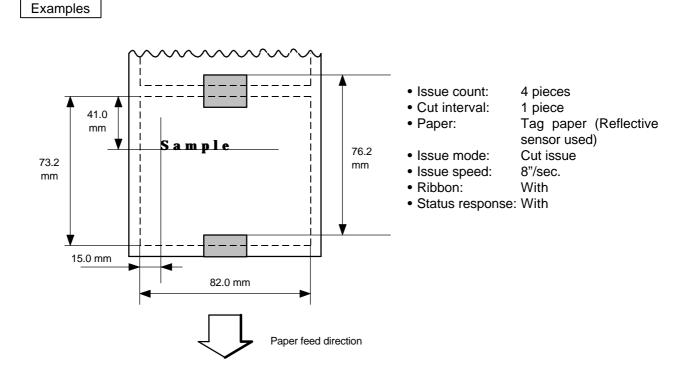


[ESC] D0762, 0820, 0732 [LF] [NUL] [ESC] T11C30 [LF] [NUL] [ESC] C [LF] [NUL] [ESC] PC001; 0150, 0410, 1, 1, A, 00, B [LF] [NUL] [ESC] RC001; Sample [LF] [NUL] [ESC] XS; I, 0004, 0011C8201 [LF] [NUL]




• Explanation of processes involved to stop the label at the home position after the head-open state is detected:


When the gap between labels (black mark) is found after the head open state is detected, the value to stop at the home position of each label between the head and the sensor is set again.

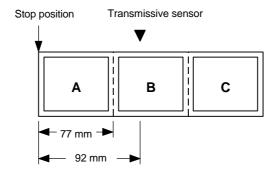

• The paper is moved in the above state.

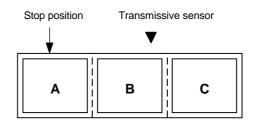

• Stop position after feeding one label

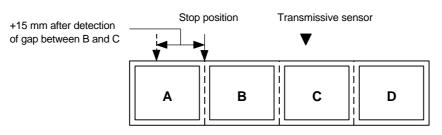

\* However, an error will result when feed jam conditions are met.



Paper feed direction

## 6.17 FEED COMMAND

[ESC] T

Function

Format [E

а

[ESC] Tabcde [LF] [NUL]

Feeds the paper.

Term

: Type of sensor

- 0: No sensor
- 1: Reflective sensor
- 2: Transmissive sensor (when using normal labels)
- 3: Transmissive sensor (when using preprinted labels)
- 4: Reflective sensor (when using a manual threshold value)
- b : Selects cut or non-cut
  - 0: Non-cut
  - 1: Cut
- c : Feed mode
  - C: Batch mode (Cut and feed when "Cut" is selected for parameter b.)
  - D: Strip mode (with back feed)
  - E: Strip mode (with back feed, the strip sensor is ignored, the applicator supports this mode.)
- d : Feed speed
  - 3: 3 inches/sec
  - 4: 4 inches/sec
  - 5 5 inches/sec
  - 8 8 inches/sec
  - **NOTE:** 4 inches/sec is effective only when the direct thermal print mode (without ribbon) is selected. If "4 inches/sec" is specified when the thermal transfer print mode (with ribbon) is selected, the printer will issue a label at 3 inches/sec.
- e : With/without ribbon
  - 0: Without ribbon
  - 1: With ribbon (with ribbon saving function)
  - 2: With ribbon (without ribbon saving function)
  - \* With ribbon, transmissive/non-transmissive conforms to the setting in the system mode.

When the stacker is used, "Without ribbon" is selected even if "With ribbon" is specified.

- Explanation (1) Type of sensor
  - ① No sensor:

Feeding takes place according to the parameter designated by the Label Size Set Command.

② Reflective sensor:

Feeding takes place according to the parameter designated by the Label Size Set Command. However, the black mark provided on the back side of the tag paper is automatically sensed by the reflective sensor and the stop position is finely adjusted.

③ Transmissvie sensor (when using normal labels):

Feeding takes place according to the parameter designated by the Label Size Set Command. However, the label-to-label gap is automatically sensed by the reflective sensor and the stop position is finely adjusted.

④ Transmissive sensor (when using preprinted labels):

Feeding takes place according to the parameter designated by the Label Size Set Command. However, the label-to-label gap is automatically sensed by the transmissive sensor and the stop position is finely adjusted according to the value set by the threshold set operation (key operation).

S Reflective sensor (when using a manual threshold value)

Printing takes place according to the parameters designated by the Label Size Set Command. However, the black mark provided on the back of the tag paper is automatically sensed by the reflective sensor and the paper position is finely adjusted every piece, according to the set threshold setting value (set using keys).

(2) Cut/non-cut

This option is valid in batch feed mode only. (Non-cut is selected in strip mode.) If no subsequent command is received from the PC for 3 seconds after cut-feeding when "with automatic forward feed standby" is set in the system mode, the printer automatically performs a 10-mm forward feed.


When the Feed Command is received in the forward feed standby state, the printer performs a reverse feed to the original position.

\* For notes, refer to the section regarding the Issue Command. For cutting the label having label pitch of 38 mm or less, refer to the section regarding the Position Fine Adjustment Command.

**NOTE:** When the stacker is used, "Cut" is selected compulsorily.


(3) Feed mode

[C: Batch (Non-cut)]

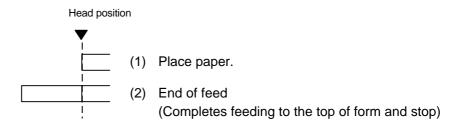


[C: Batch (Cut)]

"Without automatic forward feed standby" selected in the system mode.

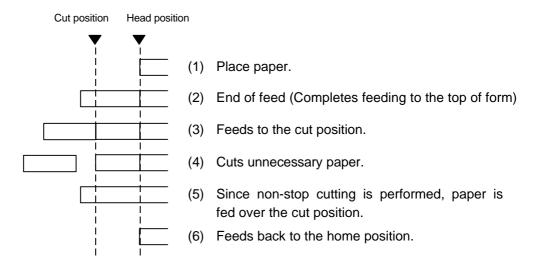


[C: Batch (Cut)]


"With automatic forward feed standby" selected in the system mode.

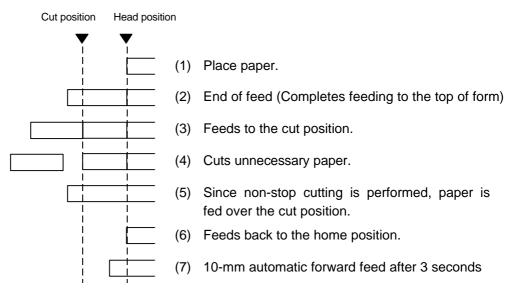



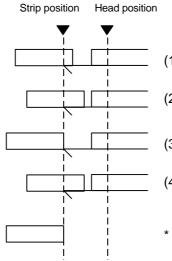


- (1) Place paper.
- (2) Feeds back to the home position.
- (3) Feeding starts
- (4) End of feed(Completes feeding to the top of form and stops)
- \* If a label is not removed, a feed is performed.
- [When the stacker is used]
- **NOTE:** When the stacker is used, "Batch with cut" is selected automatically.

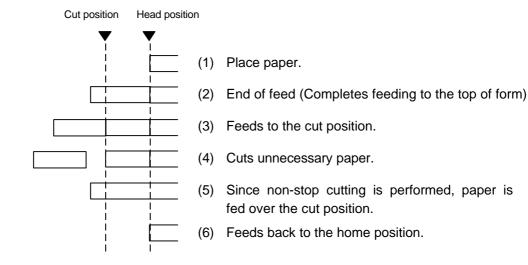

[E: Strip (Feed mode)]


Expansion I/O is installed:

The strip sensor is ignored. A feed is performed by checking a PAUSE signal generated from the expansion I/O.

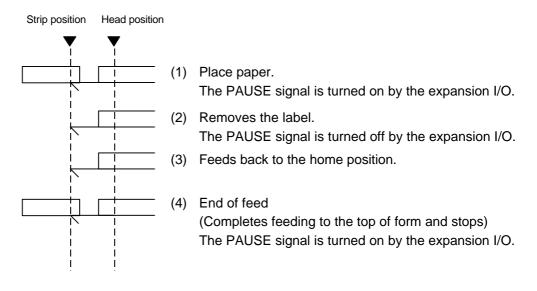

Expansion I/O is not installed:

The strip sensor is ignored. A feed is performed.

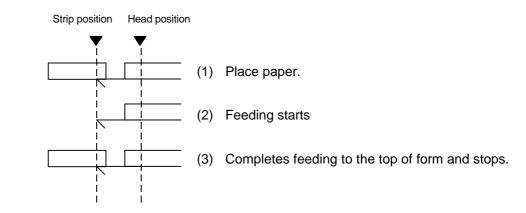

- \*1 Feed mode E is different from feed mode D. In feed mode E, a label is fed, regardless of the strip sensor, and whether or not a label to be stripped, is placed.
- \*2: The peripheral device such as an applicator, must control the PAUSE signal generated from the expansion I/O.

- (4) Feed speed
  - A feed is performed at the designated speed.
     However, the back feed speed in the cut mode or the strip mode is 3"/sec.
  - The possible issue speed varies according to types and sizes of the paper supply.

For details, refer to the Supply Specification.					
	Model	B-482-00/0P			

Model	B-482-0	QQ/QP
	Thermal transfer	Direct thermal
Parameter	print mode	print mode
1		
2	3"/sec	3"/sec
3		
4		4"/sec
5		
6	5"/sec	5"/sec
7		
8		
9	8"/sec	8"/sec
A		

(5) With/without ribbon

Without ribbon : The ribbon motor is not operated at feed.

With ribbon : The ribbon motor is operated at feed.

With ribbon saving: When the ribbon saving system is set to be used in the system mode, ribbon saving will be performed automatically.


When "without ribbon saving" is selected, or the ribbon saving system is set in the system mode so that it is not used, ribbon saving will not be performed.

### Notes

- (1) If a change of label size or type of sensor, feed fine adjustment, cut position fine adjustment (or strip position fine adjustment) or back feed fine adjustment is made, one label must be fed to adjust the first printing position prior to printing.
- (2) The parameter of the Feed Command is protected in memory (even if the power is turned off).
- (3) When "status response" is selected in the Issue Command parameter setting, a status response is made after the end of feed or when an error occurs.
- (4) For explanation about the processing to stop the label at the home position, refer to the section regarding the Issue Command.
- (5) If no subsequent command is received from the PC for 3 seconds after the last label has been fed, the printer automatically performs a 10-mm forward feed when the cut mode is selected and "with automatic forward feed standby" is selected in the system mode. When the Feed Command is received during the forward feed standby, the printer feeds the label in reverse to the original position and ejects it.

\* For notes, refer to the section regarding the Issue Command.

#### Examples

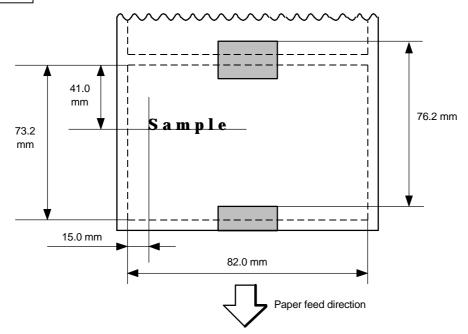

[ESC] D0762, 0820, 0732 [LF] [NUL] [ESC] AX; +010, +000, +10 [LF] [NUL] [ESC] T11C30 [LF] [NUL] [ESC] C [LF] [NUL] [ESC] PC001; 0150, 0410, 1, 1, A, 00, B [LF] [NUL] [ESC] RC001; Sample [LF] [NUL] [ESC] XS; I, 0004, 0011C3001 [LF] [NUL]

### 6.18 EJECT COMMAND

[ESC] IB



Ejects (cuts) the label presently remaining between the head and the cutter and returns to the original position.

Format	


Notes

[ESC] IB [LF] [NUL]

If no subsequent command is received from the PC for 3 seconds after ejection, the printer automatically performs a 10-mm forward feed when "with automatic forward feed standby" is selected in the system mode.

When the Eject Command is received in the forward feed standby state, the printer feeds the label in reverse to the original position and ejects it.

\* For notes, refer to the section regarding the Issue Command.

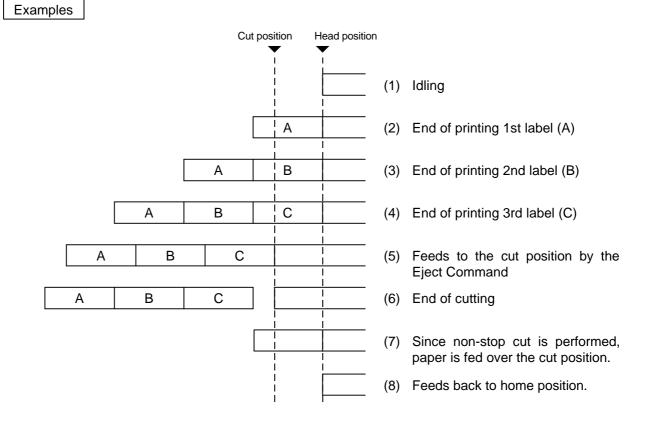


[ESC] C [LF] [NUL] [ESC] PC001; 0200, 0125, 1, 1, A, 00, B [LF] [NUL] [ESC] RC001; A [LF] [NUL] [ESC] XS; I, 0001, 0001C3001 [LF] [NUL] [ESC] RC001; B [LF] [NUL] [ESC] XS; I, 0001, 0001C3001 [LF] [NUL] [ESC] XS; I, 0001, 0001C3001 [LF] [NUL] [ESC] XS; I, 0001, 0001C3001 [LF] [NUL]

## 6.19 FORWARD/REVERSE FEED COMMAND

# [ESC] U1, [ESC] U2

Function	After printing or feeding the paper, feeds the paper to a manually cut position. When issuing the next label, feeds the paper back to the first printing position.
Format	Forward Feed [ESC] U1; aaaa [LF] [NUL]
	Reverse Feed [ESC] U2; aaaa [LF] [NUL]
Term	aaaa: Feed value by which the paper is fed forward or backward. 0030 to 2000 (in 0.1 mm units)
Notes	(1) When the [FEED] key is pressed on the printer, one label is fed, and then fed by the forward feed value automatically if the Forward Feed Command has already been transmitted.
	(2) The Forward/Reverse Feed Command is protected in memory (even if the power is turned off).
	(3) The Forward/Reverse Feed Command is ignored in strip mode and cut issue mode.
	(4) The Forward/Reverse Feed Command feeds the label without ribbon saving even if the ribbon saving issue is designated.
	<ul><li>(5) The forward feed is performed at the speed designated in the Issue Command or Feed Command.</li><li>The reverse feed is performed at the speed of 3"/sec.</li></ul>

Examples

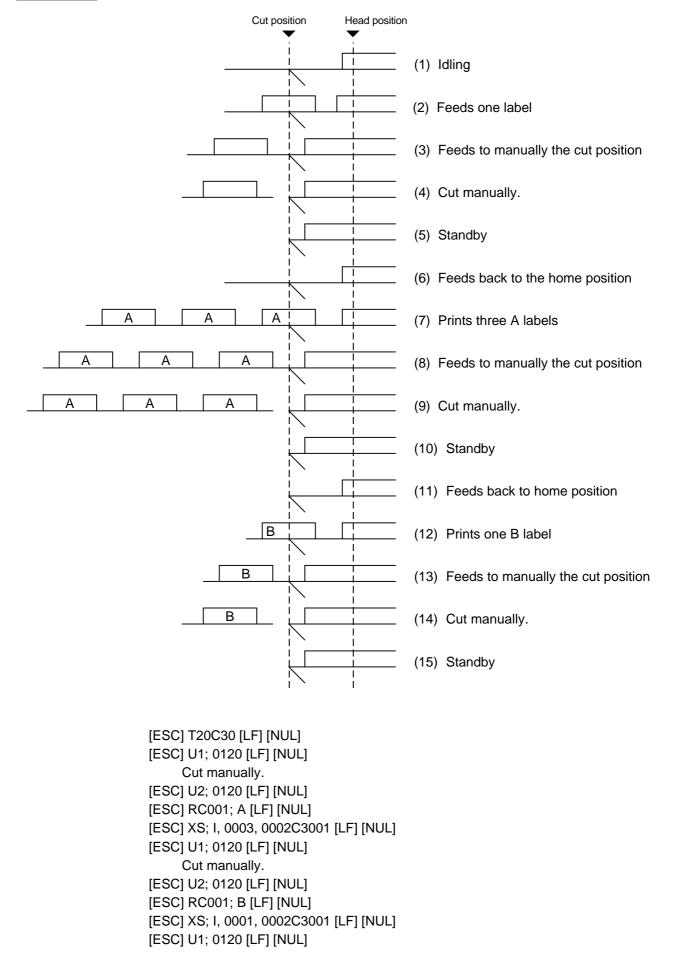

# 6.20 STORAGE AREA ALLOCATE COMMAND [ESC] XF

Function	Allocates the storage area in the flash ROM on the CPU board.
Format	[ESC] XF; aa, bb [LF] [NUL]
Term	aa: Size of the TrueType font storage area 00 to 14 (0 KB to 896 KB) (in units of 64 KB)
	bb:Size for bit map writable character storage area00 to 14 (0 KB to 896 KB)(in units of 64 KB)
Explanation	(1) The storage area in the flash ROM has a total capacity of 896 KB.
	(2) If the above command is received, the complete area in the flash ROM on the CPU board is cleared.
	(3) If the above command is not sent, the storage area in the flash ROM on the CPU board cannot be used.
	(4) The area specified by the above command is allocated in order – from the TrueType font storage area to the bit map writable character storage area. The remaining area is used for the PC save storage area.
	(5) If the sum of TrueType font storage area and bit map writable character storage area specified by the above command is 896 KB, the specified TrueType font storage area and bit map writable character storage area are allocated. However, the PC save storage area is not allocated.
	(6) If the sum of TrueType font storage area and bit map writable character storage area specified by the above command exceeds 896 KB, the TrueType font storage area is allocated as specified, and the remaining area is used for the bit map writable character storage area. Therefore, the PC save storage area is not allocated.
	(7) When "00" (0 KB) is specified for the bit map writable character storage area, the TrueType font storage area is allocated as specified, and the remaining area is used for the PC save storage area. Therefore, the bit map font storage area is not allocated.
	(8) When "00" (0 KB) is specified for the TrueType font storage area, the bit map writable character storage area is allocated as specified, and the remaining area is used for the PC save storage area. Therefore, the TrueType font storage area is not allocated.
	(9) When "14" (896 KB) is specified for the TrueType font storage area, all area is used for the TrueType font storage area. Therefore, neither writable character storage area nor PC save storage area is allocated.
	(10) When "00" (0 KB) and "14" (896 KB) are specified for the TrueType font storage area and the bit map writable character font storage area, respectively, all area is used for the bit map writable character storage area. Therefore, neither TrueType font storage area nor PC save storage area is allocated.
	(11) When "00" (0 KB) is specified for both the TrueType font storage area and the bit map writable character font storage area, all area is used for PC save storage area. Therefore, neither TrueType font storage area nor bit map writable character storage area is allocated.

#### Refer to

- Bit Map Writable Character Command ([ESC] XD)
- Save Start Command ([ESC] XO)
- Memory Card Format Command ([ESC] J1)
- 2-byte Writable Character Code Range Command ([ESC] XE)

Example

The TrueType fonts storage area and bit map writable characters storage area are set to 640 KB and 192 KB, respectively. (PC save storage area: 896 KB - 640KB - 192 KB = 64 KB) [ESC] XF; 10, 03 [LF] [NUL]

# 6.21 MEMORY CARD FORMAT COMMAND

\_\_\_\_

\_

Function	Formats (initializes) the flash memory card or the ATA card for storage.
Format	For flash memory card: [ESC] J1; a (, b) [LF] [NUL]
	For ATA card: [ESC] JA; b [LF] [NUL]
Term	<ul> <li>a : Formatting (initializing) range for flash memory card</li> <li>A : All area of flash memory card</li> <li>B : PC save area of flash memory card</li> <li>C : Writable character area of flash memory card</li> </ul>
	<ul> <li>b : Drive (Omissible in the Memory Card Format Command ([ESC] J1). If omitted, the flash ROM on the CPU board is selected.)</li> </ul>
	<ul> <li>0 : Flash ROM on the CPU board (It can be specified only in [ESC] J1.)</li> <li>1 : Slot 1 on the PCMCIA board (Option)</li> <li>2 : Slot 2 on the PCMCIA board (Option)</li> </ul>
Explanation	(1) Only a 4-MB flash memory card can be formatted.
	(2) The flash memory card can be roughly divided into the PC save area and writable character area. They can be formatted (initialized) either separately or at the same time.
	(3) When using a new flash memory card, the area to be used must be formatted (initialized) and then the PC save or writable characters must be stored.
	(4) After formatting the flash memory card, the remaining memory is the PC save area (895 Kbytes) and writable character area (3147 Kbytes). The remaining memory is displayed on the LCD.
	(5) When the flash memory card is used and storing already stored data (PC save, writable characters, logo) again, memory is consumed with every storing unless the Format Command ([ESC] J1) is transmitted.
	(6) When performing the label issue operation after sending the Format Command, the image buffer is automatically cleared.
	(7) When storing of writable characters, logos, or PC interface commands is not continued, the printer automatically enters the on-line mode (label issue operation) after about 10 seconds. In this case, the image buffer is automatically cleared.
Refer to	<ul> <li>Bit Map Writable Character Command ([ESC] XD, [ESC] XA)</li> <li>Save Start Command ([ESC] XO, [ESC] XV)</li> <li>Save Terminate Command ([ESC] XP)</li> </ul>
Example	[ESC] J1; A, 1 [LF] [NUL] [ESC] JA; 2 [LF] [NUL]

# 6.22 2-BYTE WRITABLE CHARACTER CODE RANGE COMMAND [ESC] XE

Function	Sets the on the CF			-	hen a	a 2-b <u>:</u>	yte w	ritab	le cł	narac	ter c	ode is	s stoi	red ii	n the	flasł	ו RC	M
Format	[ESC] XE	ESC] XE; $a_1a_1a_1a_1$ , $b_1b_1b_1b_1$ , $a_2a_2a_2a_2$ , $b_2b_2b_2b_2$ , $a_na_na_na_n$ , $b_nb_nb_nb_n$ ]}																
Term	aaaa:				er co F (In				-	ata in	ASC	CII coc	le.)					
	bbbb:				cters 0 (Inc			•		ta in <i>i</i>	ASC	II cod	e.)					
Explanation	divi can	ded i be c	nto t delet	wo o ed by	r moi	re. ignat	The c ing tl	contro	ol in	forma	ation	chara area range	for th	ne ur	nece	essar	y co	de
		tota racte		nber	of c	harad	cters	for e	each	rang	je m	ust no	ot ex	ceed	0x4	000	(163	34
	(3) Up	to 27	00 c	an be	e des	ignat	ed fo	r the	ran	ge.								
	. ,	narac store		code	whic	h is r	iot ap	prop	oriate	e for t	the s	etting	for t	his c	omm	and	cann	ot
Refer to	<ul><li>Forma</li><li>Bit Ma</li></ul>				-	. ,	omma	and (	ES(	C] XC	D)							
Example	In the cas	se tha	at Sh	nift JI	S 814	40H t	o 83I	OFH:	[			aracte aracte				ot exit		
		0	1	2	3	4	5	6	7	8	9	А	В	С	D	E	F	]
	8140							-										
	81F0																	
	8240																	
	82F0																	
	8340																	
	83D0																	

[ESC] XE; 8140, 00BD, 8240, 00B7, 8340, 00BD [LF] [NUL]

### 6.23 BIT MAP WRITABLE CHARACTER COMMAND

Function Writes writable characters and logos in the flash memory card, the ATA card, or the flash ROM on the CPU board. Format For the flash memory card or flash ROM on the CPU board [ESC] XD; (Sj, ) aa, b, ccc, ddd, eee, fff, ggg, h, iii ----- iii [LF] [NUL] For ATA card: [ESC] XA; j, aa, b(b), ccc, ddd, eee, fff, ggg, h, iii ----- iii [LF] [NUL] Term Sj: Drive in which writable characters or logos are stored (Omissible in the Bit Map Writable Character Command for the flash memory card ([ESC] XD). If omitted, the flash ROM on the CPU board is selected.) j: Drive 0: Flash ROM on CPU board (It can be specified only in [ESC] XD.) 1: Slot 1 on the PCMCIA board (Option) 2: Slot 2 on the PCMCIA board (Option) aa: Writable character set • Flash memory card ATA card 01 to 40 01 to 40 41 16 x 16 dots 41 16 x 16 dots 42 24 × 24 dots 42 24 × 24 dots 43 32 x 32 dots 43 32 x 32 dots 44 48 x 48 dots 44 48 x 48 dots 51 to 55 (2-byte code character) Flash ROM on the CPU board 01 to 40 41 16 x 16 dots 42 24 × 24 dots 43 32 × 32 dots 44 48 × 48 dots 51 2-byte code character b(b): Writable character code · Flash memory card 20H to FFH (Set in hex.) 40H to 7EH, 80H to FCH (When the writable character set is 41 to 44) ATA card 20H to FFH (Set in hex.) 40H to 7EH, 80H to FCH (When the writable character set is 41 to 44) 2020H to FFFFH (When the writable character set is 51 to 55) ccc: Left offset 000 to 719 (in dots) ddd: Top offset 000 to 719 (in dots) eee: Character width 001 to 720 (in dots) fff: Character height 001 to 720 (in dots)

[ESC] XD, [ESC] XA

- ggg: Horizontal spacing/proportional spacing 000 to 999 (in dots)
- h: Type of writable character data
  - 0: Nibble mode (4 bits/byte)
  - 1: Hex. mode (8 bits/byte)
- iii --- iii: Writable character data to be stored
- \* If each parameter for left offset, top offset, character width, character height, and horizontal spacing/proportional spacing is fixed as "000", the setting is ignored when the writable character set is 41 to 44,

#### Explanation (1) Type of writable character

Up to 40 and 49 writable character sets can be stored for the flash card and the ATA card, respectively. However, the maximum number of characters varies depending on the writable character size and number of characters because of the limited memory capacity. For 41 to 44 writable character sets, each writable character size is fixed.

(2) Character code


Up to 224 characters can be stored per character set. The maximum number of characters in 40 sets  $\times$  224 characters = 8960 characters. It varies depending on the writable character size and number of characters because of the limited memory capacity. For 41 to 44 character sets, a character code consisting of 1 byte is stored. However, when the character code is called up, F0H is added to the upper digit of it, and consists of 2 bytes. In this case, up to 188 characters can be stored per character set.

- (3) Only a 4-MB flash memory card can be used for storing a writable character.
- (4) The configuration of the writable character file stored in the ATA card is as follows.


1st byte	No. of dots for left offset
2nd byte	(from upper to lower)
3rd byte	No. of dots for top offset
4th byte	(from upper to lower)
5th byte	No. of dots for character height
6th byte	(from upper to lower)
7th byte	No. of dots for character width
8th byte	(from upper to lower)
9th byte	No. of dots for horizontal spacing/proportional spacing
10th byte	(from upper to lower)
11th byte	Writable character data (Hex. data)
	(If it is stored in the nibble mode, data is 8 bits/byte.)

(5) When writable characters are stored in the ATA card, the "GAIJI" directory is created, and then the directory for each writable character set is created under the "GAIJI" directory level as shown on the next page. One writable character file is created in the writable character set directory per writable character.

1-byte writable character	W/C = Writable character
ATA card · · · · · GAIJI · · · · · 0100 · · · · · · · · · · · ·	···· 01000020. UDF (W/C file for character code 20H)
(Writable character 41)	01000021. UDF (W/C file for character code 21H)
··· 0101·····Each W/C file	01000022. UDF (W/C file for character code 22H)
(Writable character 42)	
0102 Each W/C file	010000FD. UDF (W/C file for character code FDH)
(Writable character 43)	010000FE. UDF (W/C file for character code FEH)
	010000FF. UDF (W/C file for character code FFH)
··· 0126·····Each W/C file	
(Writable character 39)	
0127 Each W/C file	
(Writable character 40)	
Writable character with Kanji size	
··· 001A ·····	001A0040. UDF (W/C file for character code 40H)
(Writable character 41)	001A0041. UDF (W/C file for character code 41H)
··· 001B···· Each W/C file	
(Writable character 42)	001A007E. UDF (W/C file for character code 7EH)
··· 001C···· Each W/C file	001A0080. UDF (W/C file for character code 80H)
(Writable character 43)	001A0081. UDF (W/C file for character code 81H)
··· 001D····· Each W/C file	
(Writable character 44)	···· 001A00FC. UDF (W/C file for character code FCH)
2-byte writable character	
<u>.</u>	02002020. UDF (W/C file for character code 2020H)
(Writable character 51)	02002021. UDF (W/C file for character code 2021H)
··· 0201 ····· Each W/C file	02002022. UDF (W/C file for character code 2022H)
(Writable character 52)	0200FFFD LIDE (IV/C file for character and FFFDH)
(Writeble character 52)	0200FFFD. UDF (W/C file for character code FFFDH)
(Writable character 53) 0203 Each W/C file	<ul> <li>0200FFFE. UDF (W/C file for character code FFFEH)</li> <li>0200FFFF. UDF (W/C file for character code FFFFH)</li> </ul>
(Writable character 54)	
(Writable character 55)	
(Whate character boy	
<ul> <li>How to assign the directory name for a wr</li> </ul>	itable character set
Directory name for writable character 0	
Directory name for writable character 0	$02 \rightarrow 00101$
Directory name for writable character 3	
Directory name for writable character 4	
Directory name for writable character 4	$11 \rightarrow 001$ A"
Directory name for writable character 4	$14 \rightarrow$ "001D"
Directory name for writable character 5	
	/ / 0200
Directory name for writable character 5	$55 \rightarrow$ "0204"
<ul> <li>How to assign the file name</li> </ul>	
-	40: writable character file for character code 22H)
	the writable character file
Character code (2-byte co	
Writable character set (Writable	character 40: Same as the directory name)

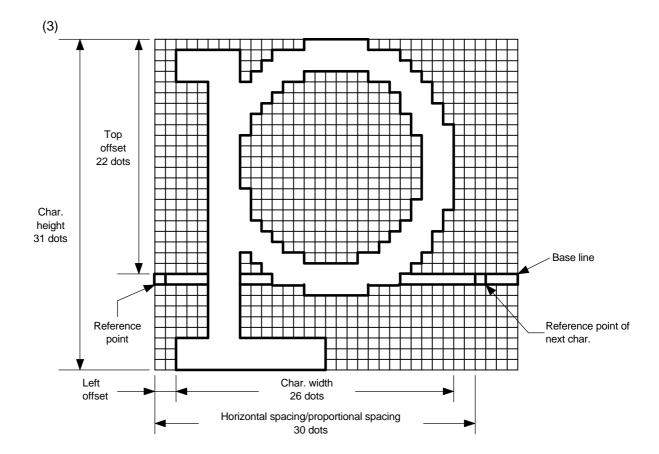

(4) Writable character set: 01 to 40, 51 to 55

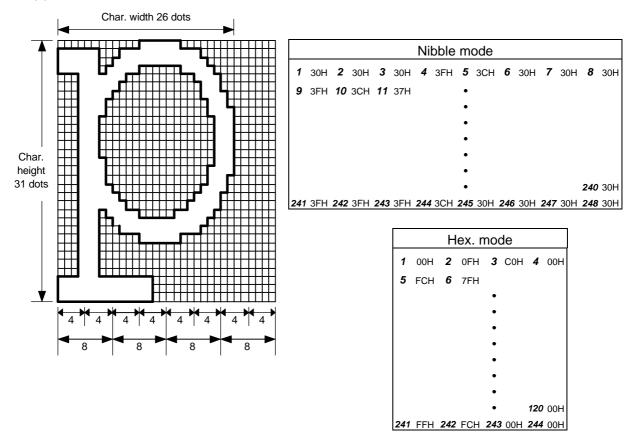

[Nibble mode]

- (1) The writable character data to be stored is separated into four dot units and sent in the following order (*1* @ **248**). (high order digit: "3")
- (2) The data of writable characters to be stored is 30H to 3FH.
- (3) The minimum unit in the X direction is 8 dots. Dots with no data are transmitted as data 0.
- (4) The data count of writable characters to be stored must be as follows: Data count of writable characters to be stored = {(No. of char. width dots + 7)/8} × No. of char. height dots × 2
   \* The value in the brackets is truncated to the next whole number.

[Hex. mode]

- (1) The writable character data to be stored is separated into eight dot units and sent in the following order ( $1 \rightarrow 124$ ).
- (2) The data of writable characters to be stored is 00H to FFH.
- (3) The minimum unit in the X direction is 8 dots. Dots with no data are transmitted as data 0.
- (4) The data count of writable characters to be stored must be as follows:
   Data count of writable characters to be stored =


{(No. of char. width dots + 7)/8}  $\times$  No. of char. height dots

\* The value in the brackets is truncated to the next whole number.

#### Notes

- (1) With the same writable character set designated, character width and character height can be designated for each writable character code. In other words, character size can be changed for each character, thus saving memory.
- (2) Proportional spacing and descending characters are possible depending on the parameters of horizontal spacing/proportional spacing, left offset, and top offset.
- (3) When top offset = 000, the reference coordinates are at the above left when drawing because the base line is at the top. (Coordinate setting is facilitated for logos.)

(5) Writable character set: 41 (16×16 dots )

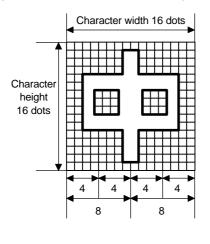

Nibble mode										
1	30H	2	30H	3	30H	4	30H			
5	30H	6	31H	7	<b>7</b> 38H					
				٠						
				•						
				٠						
		58	31H	59	38H	60	30H			
61	30H	62	30H	63	30H	64	30H			


	Hex. mode										
1	00H	2	00H	3	01H	4	80H				
5	01H	6	80H	7	01H						
				•							
				•							
				•							
		26	80H	27	01H	28	80H				
29	01H	30	80H	31	00H	32	00H				

[Nibble mode]

- (1) The writable character data to be stored is separated into four dot units and sent in the following order (1 @ 64). (High order digit: "3")
- (2) The data of writable characters to be stored is 30H to 3FH.
- (3) The data count of writable characters to be stored should be 64 bytes.

- (1) The writable character data to be stored is separated into eight dot units and sent in the following order  $(1 \rightarrow 32)$ .
- (2) The data of writable characters to be stored is 00H to FFH.
- (3) The data count of writable characters to be stored should be 32 bytes.
- \* When writable character 41 is designated, the width and height of the character are both 16 dots.

(6) Writable character set: 42 (24×24 dots )

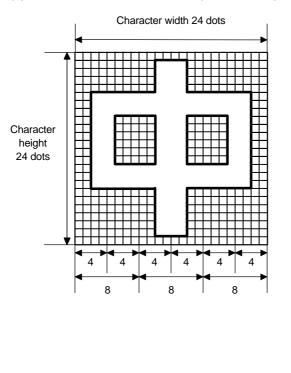

	Nibble mode											
1	30H	2	30H	3	30H	4	30H	5	30H	6	30H	
7	30H	8	30H	9	33H							
						•						
						•						
						•						
						•						
						•			30H			
139	30H	140	30H	141	30H	142	30H	143	30H	144	30H	


	Н	ex.	mod	le	
1	00H	2	00H	3	00H
4	00H	5	3CH	6	00H
			•		
			•		
			•		
			•		
67			3CH		
70	00H	71	00H	72	00H

[Nibble mode]

- (1) The writable character data to be stored is separated into four dot units and sent in the following order (1 @ 144). (High order digit: "3")
- (2) The data of writable characters to be stored is 30H to 3FH.
- (3) The data count of writable characters to be stored should be 144 bytes.

- (1) The writable character data to be stored is separated into eight dot units and sent in the following order  $(1 \rightarrow 72)$ .
- (2) The data of writable characters to be stored is 00H to FFH.
- (3) The data count of writable characters to be stored should be 72 bytes.
- \* When writable character 42 is designated, the width and height of the character are both 24 dots.

(7) Writable character set: 43 (32×32 dots)

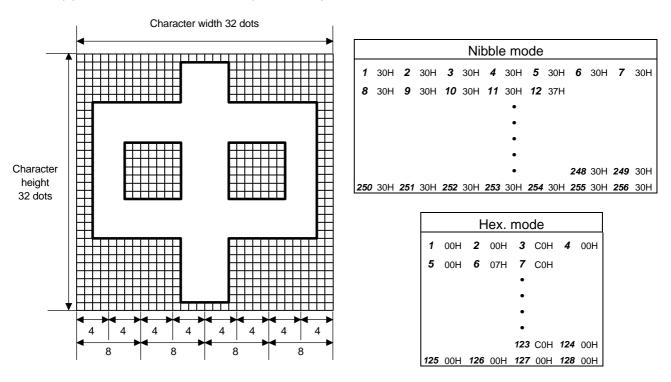


[Nibble mode]

- (1) The writable character data to be stored is separated into four dot units and sent in the following order (*1* @ **256**). (High order digit: "3")
- (2) The data of writable characters to be stored is 30H to 3FH.
- (3) The data count of writable characters to be stored should be 256 bytes.

- (1) The writable character data to be stored is separated into eight dot units and sent in the following order ( $1 \rightarrow 128$ ).
- (2) The data of writable characters to be stored is 00H to FFH.
- (3) The data count of writable characters to be stored should be 128 bytes.
- \* When writable character 43 is designated, the width and height of the character are both 32 dots.

#### (8) Writable character set: 44 (48×48 dots)

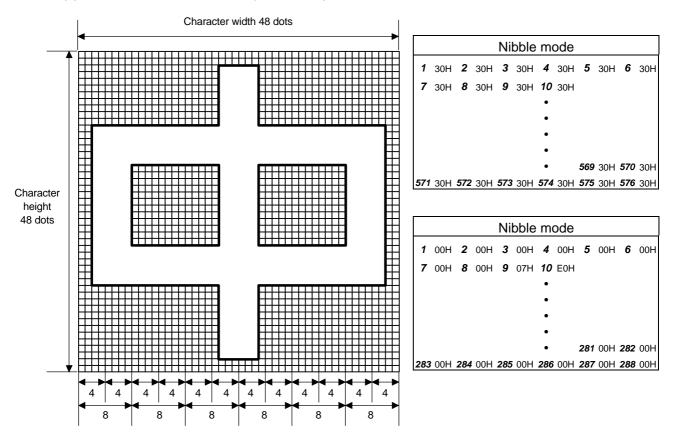

[Nibble mode]

- (1) The writable character data to be stored is separated into four dot units and sent in the following order (*1* @ **576**). (High order digit: "3")
- (2) The data of writable characters to be stored is 30H to 3FH.
- (3) The data count of writable characters to be stored should be 576 bytes.


- (1) The writable character data to be stored is separated into eight dot units and sent in the following order ( $1 \rightarrow 288$ ).
- (2) The data of writable characters to be stored is 00H to FFH.
- (3) The data count of writable characters to be stored should be 288 bytes.
- \* When writable character 44 is designated, the width and height of the character are both 48 dots.

#### Notes

Refer to

- (1) No matter what character set or character code is selected, no memory will be wasted.
- (2) When a new writable character is stored, the Flash Memory Card Format Command ([ESC] J1) or the ATA Card Format Command ([ESC] JA) must be transmitted.
- (3) A character code already stored can be stored in the flash memory card again if the Writable Character Command ([ESC] XD) is transmitted, but memory will be consumed with every storage. Memory can be efficiently used by sending the Format Command ([ESC] J1) before storing.
- (4) If a flash memory card is used, and a label issue operation is performed after sending the Bit Map Writable Character Command ([ESC] XD), the image buffer is cleared automatically.
- (5) When the storing operation stops after storing the writable character and logos, the printer automatically enters the online mode (label issue operation) after about 10 seconds. In this case, when the flash memory card is used, the image buffer will be cleared automatically.
- (6) Only a 4-MB flash memory card manufactured by Maxell can be used for storing a writable character.

Flash Memory Card Format Command ([ESC] J1) ATA Card Format Command ([ESC] JA)

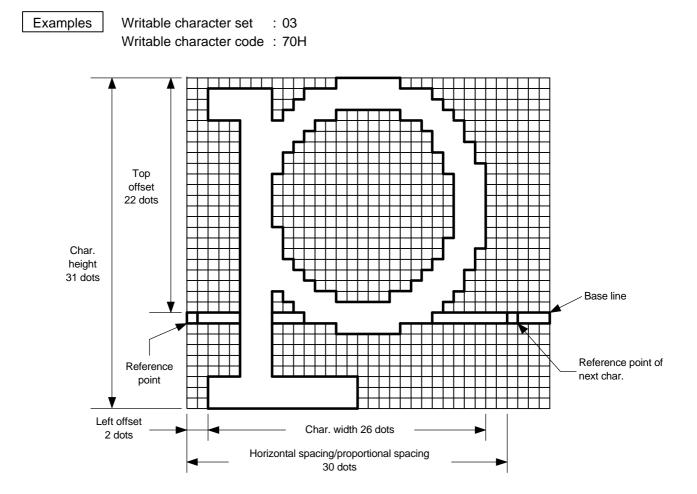

[ESC] J1; C [LF] [NUL]

[ESC] XD; 03, p, 002, 022, 026, 031, 030, 0, 000?<000?<7??800?<???<00?=?03>001?<colored colored colore

- \* 30H = "0"
  - 31H = "1"
  - 32H = "2"
  - 33H = "3"
  - 34H = "4"
  - 35H = "5"
  - 36H = "6"
  - 37H = "7"
  - 38H = "8"
  - 39H = "9"
  - 3AH = ":"
  - 3BH = ";"
  - 3CH = "<"
  - 3DH = "="
  - 3EH = ">"
  - 3FH = "?"


### 6.24 GRAPHIC COMMAND

Function Draws graphic data. Format [ESC] SG; aaaa, bbbb, cccc, dddd, e, ggg --- ggg [LF] [NUL] or [ESC] SG0; aaaa, bbbb, cccc, dddd, e, ffff, ggg --- ggg [LF] [NUL] Term aaaa : Print origin of X-coordinate for drawing graphic data Fixed as 4 digits (in 0.1 mm units) bbbb : Print origin of Y-coordinate for drawing graphic data 4 or 5 digits (in 0.1 mm units) : No. of graphic width dots CCCC Fixed as 4 digits (in dots) However, when the graphic data "2: BMP file" or "6: PCX file" is selected, this designation is ignored. (The information of the graphic width is contained in the graphic data.) dddd : No. of graphic height dots 4 or 5 digits (in dots) However, when the graphic data "2: BMP file" or "6: PCX file" is selected, this designation is ignored. (The information of the graphic width is contained in the graphic data.) When "3: TOPIX compression mode" is selected for the type of graphic data: Resolution of graphic data: \*only two types 0150: 150 DPI (The data is drawn in double resolution.) 0300: 300 DPI (The data is drawn in single resolution.) : Type of graphic data е [ESC] SG; -- command: 0: Nibble mode (4 dots/byte) Overwrite drawing 1: Hex. mode (8 dots/byte) Overwrite drawing 2: BMP file mode Overwrite drawing 3: TOPIX compression mode Overwrite drawing 4: Nibble mode (4 dots/byte) OR drawing 5: Hex. mode (8 dots/byte) OR drawing 6: PCX file mode Overwrite drawing [ESC] SG0; -- command: A: Printer driver compression mode Overwrite drawing ffff : No. of data (Effective only for [ESC] SG0; -- command) Fixed as 4 digits Represents the total number of bytes for the compressed graphic data by 32 bits in Hex. Range: 0 to 4,294,967,295 bytes (00H, 00H, 00H, 00H to FFH, FFH, FFH, FFH) : Graphic data ggg --- ggg

[ESC] SG


Explanation (1) When the graphic data 0, 1, 2, 3, 6, or A is selected, the graphic data is drawn by overwriting the image buffer.

(2) When the graphic data "4" or "5" is selected, the graphic data is drawn by carrying out OR between the graphic data and the data in the image buffer.

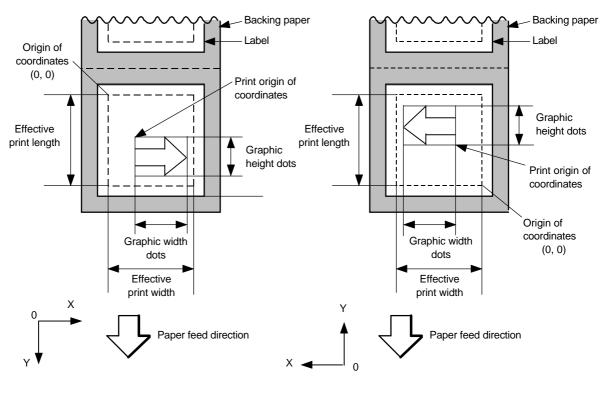

[Print direction: Printing bottom first]

[Print direction: Printing top first]

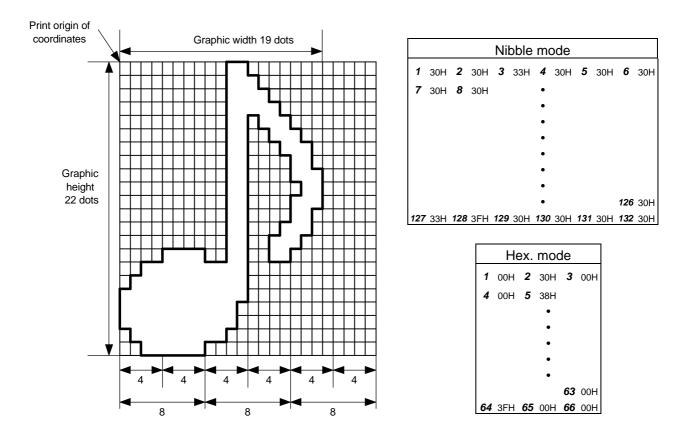

[Nibble mode]

- (1) The graphic data is separated into four dot units and sent in the following order ( $1 \rightarrow 132$ ). (high order digit: "3")
- (2) The graphic data is 30H to 3FH.
- (3) The minimum unit in the X direction is 8 dots. Dots with no data are transmitted as data 0.
- (4) The graphic data count must be as follows: Graphic data count = {(No. of graphic width dots + 7)/8} × No. of graphic height dots × 2


\* The value in the brackets is truncated to the next whole number.

[Hex. mode]


- (1) The graphic data is separated into eight dot units and sent in the following order ( $1 \rightarrow 66$ ).
- (2) The data of graphic data is 00H to FFH.
- (3) The minimum unit in the X direction is 8 dots. Dots with no data are transmitted as data 0.
- (4) The graphic data count must be as follows:
   Graphic data count = {(No. of graphic width dots + 7)/8} × No. of graphic height dots

\* The value in the brackets is truncated to the next whole number.


[When TOPIX compression mode is selected:]

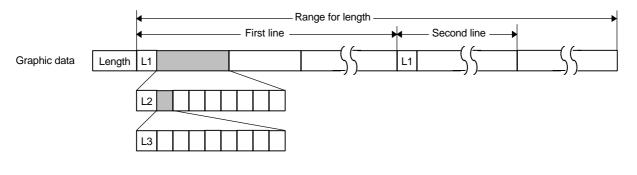


- (1) Length: Total number of bytes of the graphic data (0001H ~ ) Ex. Length = 20 bytes:  $\begin{bmatrix} 0 & 0 \\ 1 & 4 \end{bmatrix}$
- (2) L1 parameter: Shows in which large block (512 dots/block) the changed data is contained.

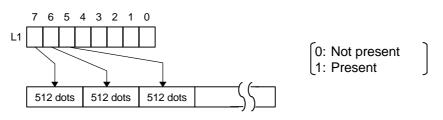

(3) L2 parameter: Shows in which medium block (64 dots/block) the changed data is contained (of the L1 large block).

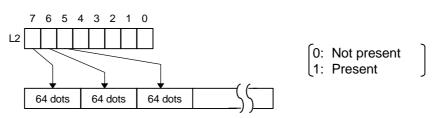

(4) L3 parameter: Shows in which small block (8 dots/block) the changed data is contained (of the L2 medium block).

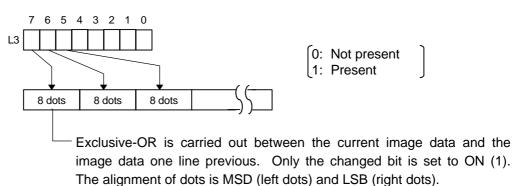

The graphic width for only the smaller value of either the designated value or the max. buffer size (512 KB) is drawn. The minimum unit of the data drawing is 8 dots (1 byte). If the graphic width is set to 3 dots, it will be reset to 8 dots (1 byte).

[When the printer driver compression mode is selected:]

- (1) For the [ESC] SG0; -- command, only "A: Printer driver compression mode" can be selected for the type of graphic data. The parameter for the number of data is attached after the parameter for the type of graphic data. When the total number of data cannot be provided by the printer driver, "00H, 00H, 00H, 00H" should be specified for the number of graphic data. However, in this case, the printer diver cannot support printing through a serial interface (RS-232C).
- (2) How to compress data

Compression is performed for every data of one line specified for the number of graphic width dots.

The data is made up in units of 8 dots. A repeated value is encoded in 2 bytes. The first byte is a numeric value n indicating that a value is repeated (-n + 1) times.

The range is between -127 and -1. The second byte is the repeated value.

If a value is not repeated the first byte is the numeric value m. The length of the values is indicated in (m+1). The range of "m" is between 0 and 126. The length of the repetition of the value and "m" should not exceed 127 and 126, respectively.

If it exceeds the range, it should be divided into blocks of repetition.


When the same contents as the data for 1 line appear repeatedly in the next line and after, the number of lines in which the same contents appear is encoded in 2 bytes. The first byte is fixed as 127. The second byte indicates "N" times that the same contents are repeated. Its range is between 1 and 255. "N" should not exceed 255. If it exceeds the range, the data for the excess number of times should be compressed as the new data of 1 line, and the remaining number of repetitions should be encoded.

[Example]

Data before being compressed (Width: 120 dots, Height: 300 lines)

- 1AAh AAh AAh AAh AAh AAh AAh AAh BBh CCh DDh EEh FFh FFh FFh FFh2AAh AAh AAh AAh AAh AAh AAh BBh CCh DDh EEh FFh FFh FFh FFh
- 299AAh AAh AAh AAh AAh AAh AAh AAh BBh CCh DDh EEh FFh FFh FFh FFh300AAh AAh AAh AAh AAh AAh AAh BBh CCh DDh EEh FFh FFh FFh FFh

Data after being compressed

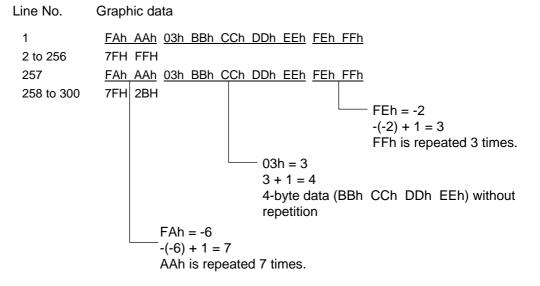

Notes

- (1) The print origin of coordinates must be set so that the result of drawing the graphic data will be within the effective print area set by the Label Size Set Command ([ESC] D).
- (2) The number of graphic width dots and the number of graphic height dots must also be set so that the result of drawing the graphic data will be within the effective print area set by the Label Size Set Command ([ESC] D) in the same manner as the above.
- (3) Both width and height are 12 dots/mm.
- (4) The actual result of drawing may deviate within ±0.33 mm in the X direction with respect to the designated print origin of the X-coordinate.


To draw the received graphic data at high speed, the data is directly developed in the image buffer without applying correction to each bit with respect to the designated X-coordinate. Consequently, an error of up to 4 bits occurs.

#### [Effective print area]

[mm]

	Model		B-482-QQ/QP				
						Cut	
Item	Method		Batch	Strip	Rotary cutter		Swing
					Head-up operation not performed	Head-up operation performed	cutter
Effective print width		Min.			10.0		
	-	Max.			104.0		
Effective print					3": 79.0	3": 23.0	
length		Min.	6.0	21.4	4": 83.0	4": 23.0	23.0
	Label				5": 87.0	5": 23.0	
					8": 98.0	8": 23.0	
		Max.			2726.0		
					3": 2	8.0	
		Min.	8.0	-	4": 2	8.0	23.4
	Tag				5": 2	8.0	
					8": 3	6.0	
		Max.	2726.0	-		2726.0	

Examples

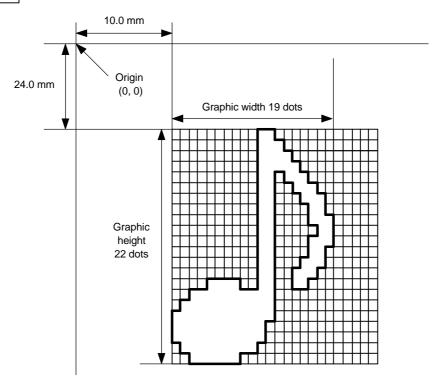


### [ESC] C [LF] [NUL]

[ESC] SG; 0100, 0240, 0019, 0022, 0, 00300003800003<00003>000037000033800031<

* 30H = "0"	38H = "8"
31H = "1"	39H = "9"
32H = "2"	3AH = ":"
33H = "3"	3BH = ";"
34H = "4"	3CH = "<"
35H = "5"	3DH = "="
36H = "6"	3EH = ">"
37H = "7"	3FH = "?"

#### [TOPIX compression mode]

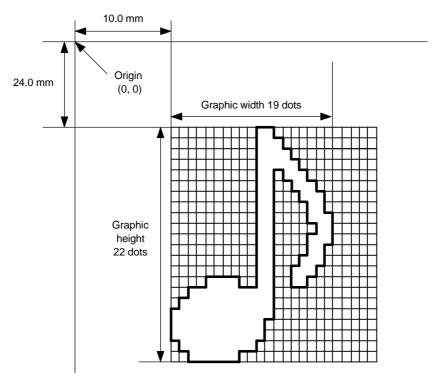

[ESC] SG; 0100, 0240, 0019, 0300, 3, <u>00 5C 80 80 40 30</u> Length L1 L2 L3 Data (1st line)

80 80 40 08 (2nd line)80 80 40 04 (3rd line)80 80 40 02 (4th line)80 80 40 09 (5th line)
80         80         60         02         40         80         80         80         20         20           (6th line)         (7th line)         (8th line)         (8th line)         (9th line)         (9th line)
80 80 20 80 80 80 20 80 80 20 80 80 80 20 20 80 80 80 20 20 80 80 40 01 (10th line) (11th line) (12th line) (13th line)
80         80         60         02         40         80<
80 80 80 80 80 (19th line) (20th line) (21st line) 80 80 CO 80 20 (22nd line) (21st line) (21st line) 80 80 CO 40 CO [LF] [NUL]

# 6.25 SAVE START COMMAND

25 SAVE ST	ART COMMAND	[ESC] XO, [ECS] XV
Function	Declares the start of saving PC interface of (Places the printer in the mode where PC card or the flash memory card.)	ommands. interface commands are written in the ATA
Format	For flash memory card: [ESC] XO; aa, (Sb, ) c [LF] [NUL]	
	For ATA card: [ESC] XV; dddddddd, b, c [LF] [NUL]	
Term	aa : Identification number to be used fo 01 to 99	r saving in the flash memory card or calling
	dddddddd : Identifier to be used for sa File name using from 1 to	ving in the ATA card or calling 8 characters
	Available characters: A to Z: A to Z (in b 0 to 9: Numerals fr Symbols: !, ", #, \$, %,	
	Sb: Drive in which the PC interface comm (Omissible in the command for the fla flash ROM on the CPU board is select	sh memory card ([ESC] XO). If omitted, the
	<ul> <li>b: Drive</li> <li>0: Flash ROM on the CPU board</li> <li>1: Slot 1 on the PCMCIA board (C</li> <li>2: Slot 2 on the PCMCIA board (C</li> </ul>	. ,
	<ul><li>c: Status response at save time</li><li>0: No status response made</li><li>1: Status response made</li></ul>	
Explanation		stored in the ATA card, directory "PCSAVE" pecified file name. PCS" is created under the
Notes		] XP) E] XQ, [ESC] XT) mand ([ESC] XD, [ESC] XA) WS)
	(2) No error check is made for the comm	nands at save time.
Refer to	• Save Terminate Command ([ESC] XP)	

• Memory Format Command ([ESC] J1, [ESC] JA)

Examples

[ESC] J1; B [LF] [NUL] [ESC] XO; 01, 0 [LF] [NUL] [ESC] D0508, 0760, 0468 [LF] [NUL] [ESC] T20C30 [LF] [NUL] [ESC] C [LF] [NUL] [ESC] PC001; 0200, 0125, 1, 1, A, 00, B [LF] [NUL] [ESC] PC002; 0650, 0550, 2, 2, G, 33, B, +000000001 [LF] [NUL] [ESC] XP [LF] [NUL]

## 6.26 SAVE TERMINATE COMMAND

# [ESC] XP

Function	Declares the termination of saving PC interface commands.
Format	[ESC] XP [LF] [NUL]
Note	If the storing operation is not continued after storing the PC interface command, the printer enters on-line mode (label issue operation) after about 10 seconds. In this case, the image buffer will be cleared automatically.
Refer to	Save Start Command ([ESC] XO, [ESC] XV)

# 6.27 SAVED DATA CALL COMMAND

Function	Calls PC interface commands saved in the flash memory card or the ATA card.
Format	For flash memory card: [ESC] XQ; aa, (Sb,) c, d [LF] [NUL] For ATA card: [ESC] XT; dddddddd, b, c, d [LF] [NUL]
Term	<ul> <li>aa: Identification number of the file to be called from the flash memory card</li> <li>01 to 99</li> <li>ddddddddd: Identifier for the file to be called from the ATA card</li> </ul>
	File name within 8 characters Sb: Drive from which the command is called (Omissible in the command for the flash memory card ([ESC] XQ). If omitted, the flash ROM on the CPU board is selected.) b: Drive 0: Flash ROM on the CPU board 1: Slot 1 on the PCMCIA board (Option) 2: Slot 2 on the PCMCIA board (Option)
	<ul> <li>c: Status response at save time</li> <li>0: No status response made</li> <li>1: Status response made</li> </ul>
	<ul> <li>d: Auto call at power on time</li> <li>L: Auto call</li> <li>M: No auto call</li> </ul>
Notes	(1) If the relevant save identifier is not found, an error will result.
	(2) However, if no save number subject to auto call is found with the option for auto call at power on time selected, the option for no auto call will be selected causing no error.
	(3) If a command error is found in the PC interface command in auto call at power on time by the Saved Data Call Command, a command error will result. After an error has occurred, the power must be turned off. The option for no auto call is selected when the power is turned on again.
	(4) The printer enters on-line mode (label issue operation) when the Save Data Call Command is sent after the Save Terminate command.
Refer to	<ul> <li>Save Start Command ([ESC] XO, [ESC] XV)</li> <li>Save Terminate Command ([ESC] XP)</li> </ul>
Examples	[ESC] XQ; 01, 0, L [LF] [NUL] [ESC] RC001; Sample [LF] [NUL] [ESC] RC002; 100 [LF] [NUL] [ESC] XS; I, 0002, 0002C3000 [LF] [NUL]

[ESC] XQ, [ESC] XT

### 6.28 HEAD BROKEN DOTS CHECK COMMAND

Function	Checks the thermal head for broken dots.
Format	[ESC] HD001 (, a) [LF] [NUL]All broken dots check
Term	<ul> <li>a: Check result status response (Omissible)</li> <li>A: Status response made</li> </ul>
	(If omitted, the check result status response is not made.)

 Explanation
 (1)
 The Head Broken Dots Check Command is subject to batch processing. If a Label Issue Command for 100 pieces is transmitted, followed by the Head Broken Dots Check Command, the head broken dots check will be executed after issuing 100 labels.

(2) The head broken dots check will be made on all the heater elements of the thermal head.

[ESC] HD

(3) If the check result is found to be normal when the check result status response is set so that it is not made, the next command is processed. If the check result is found to be abnormal, an error occurs. Whether or not the status is sent when an error occurs is determined according to the setting for the status response specified in the Issue Command.

If the check result is found normal when the check result status response is set to be made, a head broken dots check normal end status is sent, and then the next command is processed. If the check result is found to be abnormal, the head broken dots error status is sent, and then the printer stops.

Status for normal end

[SOH] [STX] "0020000" [EXT] [EOT] [CR] [LF]

Status for head broken dots error [SOH] [STX] "1720000" [EXT] [EOT] [CR] [LF]

(4) All broken dots check takes approx. 1 second.

Examples

[ESC] C [LF] [NUL] [ESC] RC001; Sample [LF] [NUL] [ESC] RC002; 001 [LF] [NUL] [ESC] XS; I, 0002, 0002C3000 [LF] [NUL] [ESC] HD001 [LF] [NUL]

### 6.29 MESSAGE DISPLAY COMMAND

[ESC] XJ



Explanation

Displays the message on the LCD.

[ESC] XJ; aaa ----- aaa [LF] [NUL]

aaa ----- aaa: Display data (16 digits)

When the printer receives the Message Display Command, it displays the message on the LCD then enters a pause state after processing the received data (after completing the label issue, if the Issue Command has been sent).

The pause state is cleared by the [RESTART] key and the LCD displays the original message. After the pause state is cleared, the printer resumes processing the received data following the Message Display Command.

Notes

- (1) 16 characters are displayed. When the display data is less than 16 characters, the blank data is processed as spaces. When the display data exceeds 16 characters, the exceeding data is discarded.
- (2) During a pause, a halt due to an error or a head open state, the Message Display Command is not processed even if the command is received. In this case, the command is processed after the above state are cleared.
- (3) The following data can be displayed.


If a code other than the following data is received, "?" is displayed or a command error results.

	2	3	4	5	6	7	А	В	С	D
0	SP	0	@	Р	М	р				
1	!	1	А	Q	а	q				
2	"	2	В	R	b	r				
3	#	3	С	S	С	s				
4	\$	4	D	Т	d	t				
5	%	5	Е	U	е	u				
6	&	6	F	V	f	v				
7	,	7	G	W	g	w				
8	(	8	Н	Х	h	х				
9	)	9	Ι	Υ	i	у				
Α	*	•	J	Ζ	j	z				
В	+	;	К	[	k	{				
С	,	<	L	١	I					
D	-	=	М	]	m	}				
E		>	Ν	^	n	$\rightarrow$				
F	/	?	0	_	0	$\leftarrow$				


\* The shaded parts are Japanese. They are omitted here.



- ① Load paper.
- ② Feed one sheet.
- ③ Issue 4 labels.

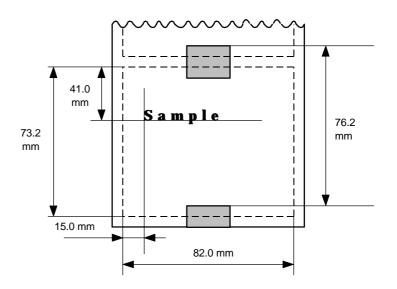

- ④ Message "Please set [Tag]" is displayed.
- S Change paper.
- 6 Press the [RESTART] key.
- $\ensuremath{\textcircled{}}$   $\ensuremath{\textcircled{}}$  Feed one label.
- ⑧ Issue 2 labels.

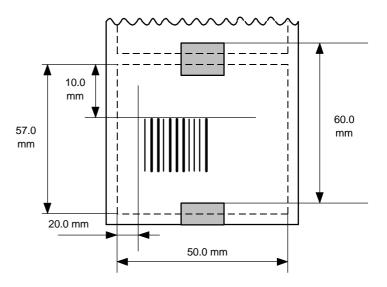

[ESC] D0762, 0820, 0732 [LF] [NUL]
[ESC] T11C30 [LF] [NUL]
[ESC] C [LF] [NUL]
[ESC] PC001; 0150, 0410, 1, 1, A, 00, B [LF] [NUL]
[ESC] PC001; 0150, 0410, 1, 1, A, 00, B [LF] [NUL]
[ESC] RC001; Sample [LF] [NUL]
[ESC] XS; I, 0004, 0011C3001 [LF] [NUL]
[ESC] XS; I, 0004, 0011C3001 [LF] [NUL]
[ESC] XJ; Please set [Tag] [LF] [NUL]
[ESC] D0600, 0500, 0570 [LF] [NUL]
[ESC] T11C30 [LF] [NUL]
[ESC] T11C30 [LF] [NUL]
[ESC] C [LF] [NUL]
[ESC] XB01; 0200, 0100, 3, 1, 03, 03, 08, 08, 03, 0, 0150 [LF] [NUL]
[ESC] RB01; 12345 [LF] [NUL]
[ESC] XS; I, 0002, 0011C3001 [LF] [NUL]

### 6.30 RESET COMMAND

## [ESC] WR

Function Returns the printer to its initial state. Format [ESC] WR [LF] [NUL] Explanation The printer is returned to the same state as when the power was turned on. When the printer receives this command during printing, it returns to its initial state after issuing the label being printed. The next command must not be sent while the printer is performing initial processing after this command is transmitted. Notes The Reset Command is effective in serial interface (RS-232C) only. In parallel (1) interface (Centronics), the reset request signal (INIT) should be used. (2) When the printer receives a command in system mode, only the Reset Command can be used and any other command cannot be used. (3) If a command error or communication error occurs when receiving the Reset Command, the error message is displayed in on-line mode. However, it is not displayed in system mode. After the code of the Writable Character Command ([ESC] XD) or Graphic (4) Command ([ESC] SG) is received, the Reset Command is not processed until the printer receives the type of data. Example [ESC] WR [LF] [NUL]

## 6.31 STATUS REQUEST COMMAND

[ESC] WS

Function	Sends the printer status to the host computer.							
Format	[ESC] WS [LF] [NUL]							
Explanation	This command makes the printer send its status regardless of the setting of "status response/no status response." The status to be transmitted is the current printer status, and indicates the latest status only. The remaining count indicates the remaining count of the batch currently being printed. No remaining count of the batch waiting to be printed is transmitted.							
Notes	(1) The Status Request Command is effective in serial interface (RS-232C) only. Since the status cannot be sent in parallel interface (Centronics), this command is not supported.							
	(2) After the code of the Writable Character Command ([ESC] XD) or Graphic Command ([ESC] SG) is received, the Status Request Command is not processed until the printer receives the type of data.							
	(3) A max. delay of 20 msec may occur before the printer sends the status after receiving the Status Request Command.							
	(4) The interval from when the Status Request Command is sent to when the next Status Request Command is sent should be 20 msec or more. If the interval is less than 20 msec, the printer may fail to receive the Status Request Command.							
Example	[ESC] WS [LF] [NUL]							

- 181 -

## 6.32 VERSION INFORMATION ACQUIRE COMMAND [ESC] WV

Function

Sends information such as the program version of the printer.

Format

Explanation

[ESC] WV [LF] [NUL]

(1) The format of the program version data (total 27 bytes of data) to be returned to the host is as follows.

		0411	
SOH		01H	
STX		02H	
	"0"	30H	
	"4"	34H	
	"A"	41H	
	"P"	50H	
Creation date	"R"	52H	— Creation date of program:
	"1"	31H	9 bytes of data indicated in order of
	"9"	39H	Day-Month-Year
	"9"	39H	
	"8"	38H	
	"B"	42H	
	"_"	2DH	
	"4"	34H	
Model	"8"	38H	Model:
	"0"	30H	7 bytes of ASCII code indicating model
	SP	20H	
	SP	20H	
	"V"	56H	
	"1"	31H	
Version	""	2EH	Program version:
	"0"	30H	5 bytes of data: Vx.xx
	"A"	41H	Revision
ETX		03H	Version
EOT		04H	
CR		0DH	
LF		0AH	
		•	

(2) This command is one of the types of commands that is processed as it is received. Processing takes place starting from the ones received first. Until the process of the command previously sent is completed, the next command is not processed. Therefore, if the printer is not in the idle state when this command is sent, the program version data may not be returned immediately.

Notes

 This command is effective for the serial interface (RS-232C). This command is not supported for a parallel interface (Centronics) when using a parallel interface.

## 6.33 ATA CARD INFORMATION ACQUIRE COMMAND [ESC] WI

Function

Sends information regarding the use of the ATA card to the host.

Format

[ESC] WI; a, b [LF] [NUL]

Term


- 1 : Slot 1 ATA card
- 2 : Slot 2 ATA card
- b : Information to be acquired
  - A: Free space
  - B: Writable character list
  - C: Stored PC command save file

Explanation

(1) The format of information to be returned to the host is as follows:


A: Free space

a : Drive

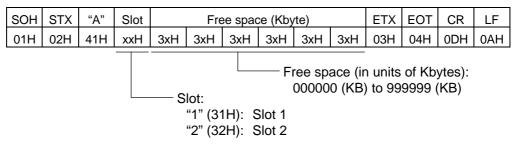

When the ATA card is not inserted into a specified slot, "00H, 00H, 00H, 00H, 00H, 00H" is returned for the free spaces.

B: Writable character list

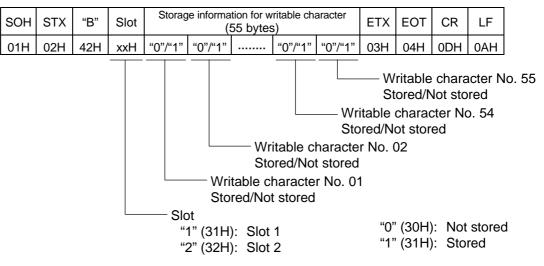

If only one writable character is stored, information of the writable character No. is set to "1" (Stored). The storage information of a specified character code can be acquired by using the ATA Card Stored Writable Character Information Acquire Command ([ESC] WG).

The storage information for the writable character has a total of 55 bytes. The writable character No. is assigned from 01 to 44, and from 51 to 55. Therefore, bytes to which Nos. 45 to 51 are assigned are sure to be set to "0" (30H). When the ATA card is not inserted in the specified slot, "00H" for the storage information for the writable character is returned.

C: Stored PC command save file

SO	I STX	"C"	Slot	Stored PC command save file name	ETX	EOT	CR	LF
01	02H	43H	ххН	File name 1 00H File name 2 00H File name n 00H	03H	04H	0DH	0AH

Slot:	
"1" (31H):	Slot 1
"2" (32H):	Slot 2

 File name (including expansion):
 "00H" should be placed between file names.

In the following cases, 1 byte of "00H" is returned as the stored PC command save file name.


- ① There is no file.
- ② The ATA card is not inserted in the specified slot.
- (2) This command is one of the types of commands that is processed as it is received. Processing takes place starting from the ones received first. Until the process of the command previously sent is completed, this command is not processed. Therefore, if the printer is not in the idle state when this command is sent, the program version data may not be returned immediately.

Note

 This command is effective for the serial interface (RS-232C). This command is not supported for a parallel interface (Centronics) when using a parallel interface.

### 6.34 ATA CARD WRITABLE CHARACTER INFORMATION ACQUIRE COMMAND

[ESC] WG

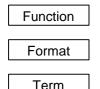

Sends the writable character information stored in the ATA card to the host.

[ESC] WG; a, bb, cc [LF] [NUL]

Term a : Drive

- 1: Slot 1 ATA card 2: Slot 2 ATA card
- bb : Writable character set

01 to 44, 51 to 55

cc : Writable character code

If there is a 1-byte writable character, "00H" should be attached to the upper digit of the data to make it 2 bytes.

Explanation

(1) The format of information to be returned to the host is as follows:

Character Writable SOH STX "D" Slot ETX EOT CR LF Storage code character set 02H 44H 3xH 3xH 3xH ххН ххH "0"/"1" 03H 04H 0DH 0AH 01H Storage of writable character "0": Not stored "1": Stored Character code (described in 2 bytes) If there is 1-byte writable character, "00H" is attached to the top of the data. Writable character set "01" (30H, 31H) to "44" (34H, 34H) "51" (35H, 31H) to "55" (35H, 35H) Slot "1" (31H): Slot 1 "2" (32H): Slot 2

When the ATA card is not inserted in a specified slot, "00H" is returned for all information from "Writable Character Set" to "Storage" (5 bytes).

A: Free space

## 6.35 IP ADDRESS SET COMMAND

#### Function Sets the IP address to be required for the network connection. [ESC] IP; a, bbb, ccc, ddd, eee [LF] [NUL] Format Term 1: Host IP address (Initial value: 192.168.10.10) a: 2: Printer IP address (Initial value: 192.168.10.20) 3: Gateway IP address (Initial value: 0.0.0.0) 4: Subnet mask (Initial value: 255.255.255.0) bbb: First 8 bits: 000 to 255 ccc: Second 8 bits: 000 to 255 ddd: Third 8 bits: 000 to 255 eee: Last 8 bits: 000 to 255 Explanation The IP address setting can also be made in the system mode. The most recent setting is used. Sets the printer IP address to "157.69.9.78". Example

[ESC] IP; 2, 157, 069, 009, 078 [LF] [NUL]

[ESC] IP


- 186 -

# 7. CONTROL CODE SELECTION

### (1) Automatic Selection

This machine automatically selects [ESC] (1BH). [LF] (0AH). [NUL] (00H) or  $\{(7BH)$ . | (7CH). $\}$  (7DH) as an interface command control code. After the power is turned on, the program checks the data from the host for [ESC] and  $\{$  and assumes the data whichever has been sent first to be a control code.

For example, if [ESC] is sent first after the power is turned on, [ESC]. [LF]. [NUL] becomes a control code, and if { is sent first, { . | . } becomes a control code. Control code selection is made for every command. If the first command is [ESC] ~ [LF] [NUL], followed by [ESC], the control code becomes [ESC]. [LF]. [NUL], and if it is followed by { , the control code for the next command becomes { . | . }. When { . | . } is a control code, the data of 00H to 1FH in { ~ | } is ignored. However, the data of 00H to 1FH becomes valid while processing the Graphic Command or Writable Character Command in hexadecimal mode. When { . | . } is a control code, { . | . } cannot be used in the data of the Data Command or Display Command.

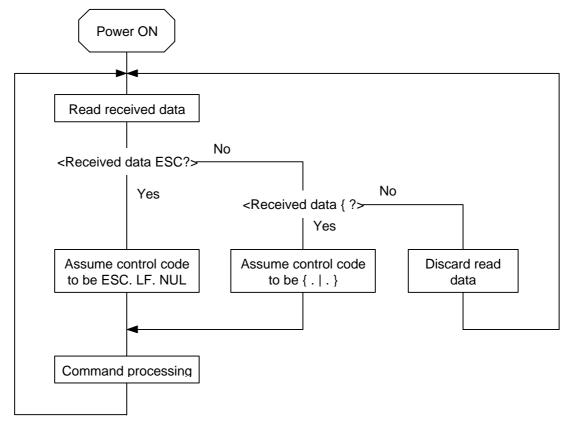

(2) Manual Selection (ESC. LF. NUL)

The control code of the command is [ESC] (1BH). [LF] (0AH). [NUL] (00H), and the control code selection is not performed.

(3) Manual Selection ({ . | . })

The control code of the command is {(7BH). | (7CH).} (7DH), and the control code selection is not performed. Data of 00H to 1FH is ignored and discarded in this mode. However, data of 00H to 1FH becomes valid while processing the Graphic Command or Writable Character Command in hexadecimal mode. { . | . } cannot be used in the data of the Data Command or Display Command.

(4) Manual Selection (Any set code)

The control code of the command is the code set in the system mode, and the control code selection is not performed. The code used in each command should not be set as a control code. In the Data Command or Display Command, the code set as the control code cannot be used.

## 8. ERROR PROCESSING

If the printer detects any of the following errors, it will display the error message (LCD, LED), makes status response (serial interface, parallel interface), and stops its operation.

## 8.1 COMMUNICATION ERRORS

(1) Command Errors

An error results if a command length error, command transmission sequence error, command format error or parameter designation error is found in analyzing the command. An error results if the Format Command of a field is not transmitted and its Data Command is transmitted. When attempting to call a PC Save Command of a save identifier which is not saved, an error results. An undefined command is not detected as an error, and data is discarded until [NUL] or [}] is received.

(2) Hard Errors

An error results if a framing error, overrun error or parity error is found during data reception when using the serial interface (RS-232C).

\* At the moment when a command error or hard error occurs, the printer shows the error message and makes status response before stopping. The Status Request Command and Reset Command only can be processed and other commands are not processed. When the printer is restored by the [RESTART] key, the printer enters the initial state which is obtained after the power is turned on.

## 8.2 ERRORS IN ISSUING OR FEEDING

- (1) Feed Jam
  - ① When the relation between the programmed label (or tag) pitch (A) and the label (or tag) pitch detected by the sensor (B) is not indicated by the following formula, an error will result: (A) × 50% ≤ (B) ≤ (A) × 150%
    - A paper jam has occurred during paper feed.
    - The paper is not placed properly.
    - The actual label does not match the type of the sensor.
    - The sensor position is not aligned with the black mark.
    - The actual label size does not meet the designated label length.
    - No label-to-label gap is detected due to preprint.
    - The sensor is not thoroughly adjusted.

(The sensor is not adjusted for the label to be used.)

If the stripped label does not cover the strip sensor when printing or feeding is completed in strip mode, an error will result.

- (2) Cutter Error
  - Rotary cutter

When the cutter does not move from the cutter home position 40 msec or more after the cutter solenoid is driven, an error will result.

The cutter moves from the home position, however, it does not return to the home position after 150 msec.

Swing cutter

When the cutter home position sensor does not detect 1.5 sec or more after the cutter motor is driven, an error will result.

- A paper jam has occurred at the cutter. (The cutter does not return to the home position.)
- The cutter does not move from the home position.
- The cutter cover is open.
- (3) Label End
  - ① When the transmissive sensor and reflective sensor detect the label end state in 3 mm continuously, an error will result.
  - If the transmissive sensor and reflective sensor detect the label end state when an issue, feed and ejection is attempted when the printer stops, an error will result.
- (4) Ribbon End
  - ① If the ribbon end sensor detects the ribbon end state in 5 mm continuously when the ribbon is designated, an error will result.
  - If the ribbon end sensor detects the ribbon end state when the ribbon designation has been selected, and an issue, feed and ejection is attempted when the printer stops, an error will result.
- (5) Head Open Error
  - ① If the head open sensor detects the open state in 5 mm continuously, an error will result.
  - If the head open sensor detects the open state when an issue, feed and ejection is attempted in the printer stop state, an error will result.
     However, the feeding by the [FEED] key on the printer and the issuing and feeding by the expansion I/O are not included.
- (6) Thermal Head Error
  - ① A broken dot error has occurred in the thermal head.
  - $\ensuremath{\textcircled{}^\circ}$  An error has occurred in the thermal head driver.
- (7) Thermal Head Temperature Abnormal
  - ① When the open-air temperature detection thermistor detects a high temperature, an error will result.
  - ② When the thermal head temperature detection thermistor detects a high temperature, an error will result.
  - ③ When the heat sink sensor detects a high temperature, an error will result.

- (8) Ribbon Error
  - ① When the ribbon rewind motor sensor and ribbon back tension motor sensor does not perform detection if twice the prescribed time has passed, an error will result.
    - An abnormal condition has occurred in the sensor for determining the torque for the ribbon motor.
    - A ribbon jam has occurred.
    - The ribbon has run out.
    - The ribbon is not installed.
- (9) Rewinder Overflow
  - ① If the rewinder overflow sensor detects the overflow state in 5 mm continuously when the strip function or the built-in rewinder is selected, an error will result.
  - If the overflow sensor detects an overflow state when an issue, feed or ejection is attempted with the printer being stopped after the strip function or the built-in rewinder is selected, an error will result.
  - \* At the moment an error occurs, the printer shows the error message, makes a status response, and then the printer stops. Only the Status Request Command and Reset Command can be processed. Restoration using the [RESTART] key is possible except in the case of an abnormal thermal head temperature error. (Issue is resumed starting with the label for which the error had occurred.)
- (10) Stack Overflow
  - ① If there is too much stacked paper, the printer will stop as if it were paused.
    - \* When the printer is restarted after the stack overflow, the printer enters the online mode without feeding. A feed by the [FEED] key is not performed again after the printer is restarted.
- (11) Stacker Error
  - $\odot\,$  If an issue is performed when the power of the stacker is not turned ON, an error will occur.
  - ② If the cable of the stacker is not connected when an issue is performed, an error will occur.
  - \* At the moment an error occurs, the printer shows the error message, makes a status response, and then stops. Only the Status Request Command and Reset Command can be processed. Any commands other than these are not processed. Restoration using the [RESTART] key is possible except in the case of an abnormal thermal head temperature error. (Issue is resumed starting with the label at which the error had occurred.)

## 8.3 ERRORS IN WRITABLE CHARACTER AND PC COMMAND ENTRY MODES

(1) Write Error

• An error has occurred in writing in the flash memory.

- (2) Format Error
  - An erase error has occurred in formatting the flash memory.
- (3) Memory Full
  - Storing is impossible because of the insufficient flash memory capacity.
  - \* At the moment when an error occurs, the printer shows the error message and makes status response before stopping. The Status Request Command and Reset Command only can be processed and other commands are not processed. Restoration using the [RESTART] key is impossible.

## 8.4 SYSTEM ERRORS

- (1) Momentary Power Interruption Error
  - A momentary power interruption has occurred.
- (2) Address error
  - A command has been fetched from an odd address.
  - Word data has been accessed from a place other than the boundary of the word data.
  - Long word data has been accessed from a place other than the boundary of the long word data.
- (3) General invalid command exception
  - An undefined command in a place other than the delay slot has been decoded.
- (4) Slot invalid exception
  - An undefined command in the delay slot has been decoded.
  - A command which rewrites the data in the delay slot has been decoded.
  - \* At the moment when an error occurs, the printer shows the error message and makes status response before stopping. (None of the commands and key operations will be processed.)
- (5) EEPROM Error
  - The EEPROM for back-up cannot be read/written properly.

## 8.5 RESET PROCESSING

When the [RESTART] key is pressed for more than 3 seconds during the error which can be cleared by the [RESTART] key and during a pause, the printer returns to the initial status which is obtained after the power is turned on.

## 9. STATUS RESPONSE

## 9.1 SERIAL INTERFACE

### 9.1.1 Functions

There are the following two kinds of status response functions.

(1) Status transmission function at the end of normal transmission and occurrence of an error (auto status transmission)

If the option for "status response" has been selected, the printer sends status to the host computer at the feeding and at the issuing normally (batch/cut mode: after the designated number of labels are printed, strip mode: after printing one label). In on-line mode, the head up/down status is sent to the host computer.

When each error occurs, the status is sent to the host computer.

The remaining count of the status response indicates the remaining count of the batch currently being printed. No remaining count of the batch waiting to be printed is transmitted.

(2) Status transmission function by status request (Status Request Command)

Upon request to send status by the Status Request Command, the printer sends the latest status indicating its current status to the host computer, regardless of the option for "status response/no status response." The remaining count indicates the remaining count of the batch currently being printed. No remaining count of the batch waiting to be printed is transmitted. This command is not stored in the receive buffer and executed immediately after reception.

• Strip status

The strip status (05H) returned by the Status Request Command depends on the system mode setting.

When the strip status of the system mode is set to "1":


If the Status Request Command is sent when a label is on the strip shaft (for example, while idling, after feeding a label, after printing all labels), the printer returns (00H).

When the strip status of the system mode is set to "2":

If the Status Request Command is sent when a label is on the strip shaft (for example, while idling, after feeding a label, after printing all labels), the printer returns (05H).

If the Status Request Command is sent while a label is being printed or issued, the strip status (05H) is returned for both settings.

#### 9.1.2 Status Format

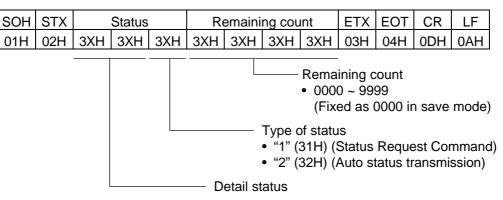

### 9.1.3 Detail Status

		Detail Status			
LCD Message	Printer Status	Auto Status Transmission	Status Request Command		
ON LINE	The head was closed with the head open.	00	00		
HEAD OPEN	The head was opened in on-line mode.	01	01		
ON LINE	In operation (Analyzing command, drawing, printing, feeding)	_	02		
PAUSE	In pause	_	04		
ON LINE	Waiting for stripping	_	05		
Display of error message	A command error was found in analyzing the command.	06	06		
COMMS ERROR	A parity error, overrun error or framing error occurred during communication by RS-232C	07	07		
PAPER JAM	A paper jam occurred during paper feed.	11	11		
CUTTER ERROR	An abnormal condition occurred at the cutter.	12	12		
NO PAPER	The label has run out.	13	13		
NO RIBBON	The ribbon has run out.	14	14		
HEAD OPEN	An attempt was made to feed or issue with the head open. (except the [FEED] key)	15	15		
HEAD ERROR	A broken dot error has occurred in the thermal head.	17	17		
EXCESS HEAD TEMP	The thermal head temperature has become excessively high.	18	18		
RIBBON ERROR	An abnormal condition occurred in the sensor for determining the torque for the ribbon motor.	21	21		
REWIND FULL	An overflow error has occurred in the rewinder.	22	22		
ON LINE	The feed has been terminated normally.	41	_		
SAVING ### &&&& SAVING %%%%%%%	In writable character or PC command save mode	_	55		
FLASH WRITE ERR.	An error has occurred in writing the flash memory.	50	50		
FORMAT ERROR	An erase error has occurred in formatting the flash memory. Writable	51	51		
FLASH CARD FULL	Saving failed because of the insufficient PC command, capacity of the flash memory.	54	54		
Display of error message (See Note 1.)	A command error has occurred in analyzing the command.	06	06		
COMMS ERROR	A parity error, overrun error or framing error has occurred during communication by RS-232C.	07	07		

		Detail	Status
LCD Message	Printer Status	Auto Status Transmission	Status Request Command
STACK OVER	There is too much stacked paper.	30	30
STACKER ERR	An attempt was made to issue when the	31	31
	stacker was not turned ON.		
POWER FAILURE	A momentary power interruption has occurred.	_	_
EEPROM ERROR	An EEPROM for back up cannot be	_	_
	read/written properly.		
SYSTEM ERROR	(a) A command has been fetched from an	_	_
	odd address.		
	(b) Word data has been accessed from a		
	place other than the boundary of the word		
	data.		
	(c) Long word data has been accessed from		
	a place other than the boundary of the		
	long word data.		
	(d) An undefined command in a place other		
	than the delay slot has been decoded.		
	(e) An undefined command in the delay slot		
	has been decoded.		
	(f) A command which rewrites the data in the		
	delay slot has been decoded.		

## 9.2 PARALLEL INTERFACE

LCD Messages	Printer Status	Output Signal					
		BUSY	PAUSE	FAULT	PE		
ON LINE	In on-line mode	L	Н	Н	L		
ON LINE	In on-line mode (communicating)	L, H	н	н	L		
HEAD OPEN	The head was opened in on-line mode.	H	L	L	L		
PAUSE	Paused by the [PAUSE] key	Н	L	L	L		
ON LINE	Data was set from the host with the receive buffer full.	Н	н	Н	L		
ON LINE	After data was set from the host with the receive buffer full, there is room in the receive buffer.	L	н	Н	L		
ON LINE	Initialize process in execution (After the power is turned on or INIT is received)	Н	L	L	L		
Display of error command	A command error has occurred in analyzing the command.	Н	L	L	L		
PAPER JAM	A paper jam occurred during paper feed.	Н	L	L	L		
CUTTER ERROR	An abnormal condition occurred at the cutter.	Н	L	L	L		
NO PAPER	The label has run out.	Н	L	L	Н		
NO RIBBON	The ribbon has run out.	Н	L	L	Н		
HEAD OPEN	An attempt was made to feed or issue with the head open. (except the [FEED] key)	Н	L	L	L		
HEAD ERROR	A broken dot error has occurred in the thermal head.	Н	L	L	L		
EXCESS HEAD TEMP	The thermal head temperature has become excessively high.	Н	L	L	L		
RIBBON ERROR	An abnormal condition occurred in the sensor for determining the torque for the ribbon motor.	Н	L	L	L		
REWIND FULL	An overflow error has occurred in the rewinder.	Н	L	L	L		
SAVING ### &&&& SAVING %%%%%%%	In writable character or PC command save mode	L	Н	Н	L		
FLASH WRITE ERR.	An error has occurred in writing in the flash memory.	Н	L	L	L		
FORMAT ERROR	An erase error has occurred in formatting the flash memory.	Н	L	L	L		
FLASH CARD FULL	Saving failed because of the insufficient capacity of the flash memory.	Н	L	L	L		
STACK OVER	There is too much stacked paper.	Н	L	L	L		
STACKER ERR	An attempt was made to issue when the stacker was not turned ON.	Н	L	L	L		
POWER FAILURE	A momentary power interruption has occurred.	Н	L	L	L		
EEPROM ERROR	An EEPROM for back-up cannot be read/written properly.	Н	L	L	L		

LCD Messages	Printer Status		Output	Signal	
		BUSY	PAUSE	FAULT	PE
SYSTEM ERROR	(a) A command has been fetched from an odd address.	Н	L	L	L
	(b) Word data has been accessed from a place other than the boundary of the word data.				
	(c) Long word data has been accessed from a place other than the boundary of the long word data.				
	(d) An undefined command in a place other than the delay slot has been decoded.				
	(e) An undefined command in the delay slot has been decoded.				
	(f) A command which rewrites the data in the delay slot has been decoded.				

# **10. LCD MESSAGES AND LED INDICATIONS**

No.	LCD Messages	LEC	) Indica	tion	Printer Status	Restoration by [RESTART] key	Acceptance of Status Request Reset
		POWER	ON LINE	ERROR		Yes/No	Command Yes/No
1	ON LINE	0	0		In on-line mode	-	Yes
	ON LINE	0	$\odot$	●	In on-line mode	-	Yes
					(Communicating)		
2	HEAD OPEN	0	•	•	The head was opened in on- line mode.	-	Yes
3	PAUSE ****	0	●	•	In pause	Yes	Yes
4	COMMUS ERROR	0	•	0	A parity error, overrun error or framing error has occurred during communication by RS-232C.	Yes	Yes
5	PAPER JAM ****	0	•	0	A paper jam occurred during paper feed.	Yes	Yes
6	CUTTER ERROR****	0	•	0	An abnormal condition occurred at the cutter.	Yes	Yes
7	NO PAPER ****	0	●	0	The label has run out.	Yes	Yes
8	NO RIBBON ****	0	●	0	The ribbon has run out.	Yes	Yes
9	HEAD OPEN ****	0	•	0	An attempt was made to feed or issue with the head open. (except the [FEED] key)	Yes	Yes
10	HEAD ERROR	0	•	0	A broken dot error has occurred in the thermal head.	Yes	Yes
11	EXCESS HEAD TEMP	0	•	0	The thermal head temperature has become excessively high.	No	Yes
12	RIBBON ERROR****	0	•	0	An abnormal condition occurred in the sensor for determining the torque for the ribbon motor.	Yes	Yes
13	REWIND FULL ****	0	•	0	An overflow error has occurred in the rewinder.	Yes	Yes
14	SAVING ### &&&& SAVING %%%%%%%	0	0	•	In writable character or PC command save mode	-	Yes
15	FLASH WRITE ERR.	0	•	0	An error has occurred in writing in the flash memory	No	Yes
16	FORMAT ERROR	0	•	0	An erase error has occurred in formatting the flash memory.	No	Yes

No.	LCD Messages	LEC	D Indica	tion	Printer Status	Restoration by [RESTART] key	Acceptance of Status Request Reset
		POWER	ON LINE	ERROR		Yes/No	Command Yes/No
17	FLASH CARD FULL	0	•	0	Saving failed because of the insufficient capacity of the flash memory.	No	Yes
18	Display of error command (See NOTE 1.)	0	•	0	A command error has occurred in analyzing the command.	Yes	Yes
19	STACK OVER ****	0	•	0	There is too much stacked paper.	Yes	Yes
20	STACKER ERR ****	0	•	0	An attempt was made to issue when the stacker was not turned ON.	Yes	Yes
21	POWER FAILURE	0	•	0	A momentary power interruption has occurred.	No	No
22	EEPROM ERROR	0	•	0	An EEPROM for back-up cannot be read/written properly.	No	No
23	SYSTEM ERROR	0		0	<ul> <li>(a) A command has been fetched from an odd address.</li> <li>(b) Word data has been accessed from a place other than the boundary of the word data.</li> <li>(c) Long word data has been accessed from a place other than the boundary of the long word data.</li> <li>(d) An undefined command in a place other than the delay slot has been decoded.</li> <li>(e) An undefined command in the delay slot has been decoded.</li> <li>(f) A command which rewrites the data in the delay slot has been decoded.</li> </ul>	No	No

NOTE 1: If a command error is found in the command received, 16 bytes of the command in error, starting from the command call, will be displayed. (However, [LF] and [NUL] will not be displayed.)

	[Example 1] [ESC] PC001; 0A00, 0300, 2, 2, A, 00, B [LF] [NUL]							
	Command error							
		LCD display PC001;0A00,0300,						
	[Example 2]	[ESC] T20 E30 [LF] [NUL]						
		LCD display T20E30						
	[Example 3]	[ESC] XR; 0200, 0300, 0450, 1200,1 [LF] [NUL]						
		Command error						
		LCD display xr;0200,0300,045						
NOTE 2:	When the erro and A0H ~ DI	or command is displayed, "? (3FH)" is displayed for codes other than 20H ~ 7FH FH.						
NOTE 3:		nking						
		emaining count دستات ~ 9999 (in pieces)						
		: Remaining memory capacity of ATA card: 0 to 9999999 (in K bytes)						
	###: Rema	hining memory capacity for PC saving of the flash memory card:						
		0 to 895 (in K bytes)						

&&&&: Remaining memory capacity for storing writable characters for the flash memory card 0 to 3147 (in K bytes)

# 11. LCD MESSAGES IN DIFFERENT LANGUAGES

No.	ENGLISH
1	ON LINE
2	HEAD OPEN
3	PAUSE ****
4	COMMS ERROR
5	PAPER JAM ****
6	CUTTER ERROR****
7	NO PAPER ****
8	NO RIBBON ****
9	HEAD OPEN ****
10	HEAD ERROR
11	EXCESS HEAD TEMP
12	RIBBON ERROR****
13	REWIND FULL ****
14	SAVING ### &&&&
	SAVING %%%%%%%
15	FLASH WRITE ERR.
16	FORMAT ERROR
17	FLASH CARD FULL
18	STACK OVER ****
19	STACKER ERR ****
20	POWER FAILURE
21	EEPROM ERROR
22	SYSTEM ERROR

No.	GERMAN
1	ON LINE
2	KOPF OFFEN
3	PAUSE ****
4	UEBERTRFEHLER
5	PAPIERSTAU ****
6	MESSERFEHL. ****
7	PAPIERENDE ****
8	FARBBENDE ****
9	KOPF OFFEN ****
10	KOPF DEFEKT
11	KOPF UEBERHITZT
12	FB-FEHLER ****
13	AUFWI.VOLL ****
14	SPMOD ### &&&&
	SPMOD %%%%%%%
15	FLASH FEHLER
16	FORMATFEHLER
17	FLASH ZU KLEIN
18	STACK OVER ****
19	STACKER ERR ****
20	POWER FAILURE
21	EEPROM ERROR
22	SYSTEM ERROR

r	
No.	FRENCH
1	PRETE
2	TETE OUVERTE
3	PAUSE ****
4	ERR. COMMUNICAT.
5	PB. PAPIER ****
6	PB. CUTTER ****
7	FIN PAPIER ****
8	FIN RUBAN ****
9	TETE OUVERTE****
10	ERREUR TETE
11	TETE TROP CHAUDE
12	ERREUR RUBAN****
13	ERR.REMB. ****
14	MEM LIB ### &&&&
	MEM LIB %%%%%%%
15	ERREUR MEM FLASH
16	ERREUR DE FORMAT
17	MEM INSUFFISANTE
18	STACK OVER ****
19	STACKER ERR ****
20	POWER FAILURE
21	EEPROM ERROR
22	SYSTEM ERROR

No.	DUTCH	1	No.	SPANISH
1	IN LIJN		1	ON LINE
2	KOP OPEN		2	CABEZAL ABIERTO
3	PAUZE ****		3	PAUSA ****
4	COMM. FOUT		4	ERROR COMUNICACI
5	PAPIER VAST ****		5	ATASCO PAPEL****
6	SNIJMES FOUT****		6	ERROR CORTAD****
7	PAPIER OP ****		7	SIN PAPEL ****
8	LINT OP ****		8	SIN CINTA ****
9	KOP OPEN ****		9	CABEZA ABIER****
10	PRINTKOP DEFECT		10	ERROR DE CABEZAL
11	TEMP.FOUT		11	TEMP.CABEZA ALTA
12	LINT FOUT ****		12	ERROR CINTA ****
13	OPROL VOL ****		13	REBOBI.LLENO****
14	MEM ### &&&&		14	SALVAR ### &&&&
	MEM %%%%%%%			SALVAR %%%%%%%
15	FLASH MEM FOUT		15	ERROR ESCRITURA
16	FORMAAT FOUT		16	ERROR DE FORMATO
17	GEHEUGEN VOL		17	MEMORIA INSUFICI
18	STACK OVER ****		18	STACK OVER ****
19	STACKER ERR ****		19	STACKER ERR ****
20	POWER FAILURE		20	POWER FAILURE
21	EEPROM ERROR		21	EEPROM ERROR
22	SYSTEM ERROR		22	SYSTEM ERROR

No.	JAPANESE
2	
3	
1 2 3 4 5 6 7 8 9	
5	
6	
7	
8	
9	
10	
11 12	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
20 21 22	

\* Japanese messages are omitted here.

No.	Italian
1	PRONTA
2	TESTA APERTA
3	PAUSA ****
4	ERR. COMUNICAZ.
5	CARTA INCEP.****
6	ERR. TAGL. ****
7	NO CARTA ****
8	NO NASTRO ****
9	TESTA APERTA****
10	ERROR TESTA
11	TEMP. TESTA ALTA
12	ERR. NASTRO ****
13	RIAVV.PIENO ****
14	SALVA ### &&&&
	SALVA %%%%%%%
15	ERR.SCRITT.CARD
16	ERR.FORMATTAZ.
17	MEM.CARD PIENA
18	STACK OVER ****
19	STACKER ERR ****
20	POWER FAILURE
21	EEPROM ERROR
22	SYSTEM ERROR

## **12. CHARACTER CODE TABLE**

The followings are the character code tables. However, the characters which can be printed are different according to the character type. For the character which can be printed, refer to the print sample described below.

## 12.1 TIMES ROMAN, HELVETICA, LETTER GOTHIC, PRESTIGE ELITE, COURIER

(Bit map font type: A, B, C, D, E, F, G, H, I, J, K, L, N, O, P, Q, R)

(1) PC-850

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Р	`	р	Ç	É	á	€		9	Ó	-
1			!	1	А	Q	а	q	Ü	æ	í			Ð	ß	±
2			"	2	В	R	b	r	é	Æ	ó			Ê	Ô	=
3			#	3	С	S	С	s	â	ô	ú			Ë	Ò	3⁄4
4			\$	4	D	Т	d	t	ä	ö	ñ			È	õ	¶
5			%	5	ш	U	e	u	à	ò	Ñ	Á		1	Õ	ŝ
6			&	6	F	V	f	v	å	û	a	Â	ã	Í	μ	·ŀ·
7			,	7	G	W	g	w	ç	ù	Q	À	Ã	Î	þ	د
8			(	8	Н	Х	h	х	ê	ÿ	j	©		Ï	Þ	٥
9			)	9	Ι	Υ	i	у	ë	Ö	R				Ú	
А			*	:	J	Ζ	j	z	è	Ü	7				Û	•
В			+	;	Κ	[	k	{	ï	Ø	1⁄2				Ù	1
С			,	<	L	١	Ι		î	£	1⁄4				ý	3
D			-	=	М	]	m	}	ì	Ø	i	¢		ł	Ý	2
Е				>	Ν	۸	n	~	Ä	×	«	¥		Ì	-	
F			/	?	0	_	0	×	Å	f	»		¤		,	

When Japanese message is selected in the system mode, code 5CH indicates "¥".

### (2) PC-8

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€			α	≡
1			!	1	А	Q	а	q	ü	æ	í				β	±
2			"	2	В	R	b	r	é	Æ	ó				Γ	$\geq$
3			#	3	С	S	С	s	â	ô	ú				π	$\leq$
4			\$	4	D	Т	d	t	ä	ö	ñ				Σ	ſ
5			%	5	Е	U	е	u	à	ò	Ñ				σ	J
6			&	6	F	V	f	v	å	û	а				μ	÷
7			-	7	G	W	g	w	Ç	ù	Q				τ	ж
8			(	8	Η	Х	h	х	ê	ÿ	j				Φ	0
9			)	9	Ι	Υ	i	у	ë	Ö					Θ	•
А			*	:	J	Ζ	j	z	è	Ü					Ω	•
В			+	,	Κ	[	k	{	ï	¢	1/2				δ	
С			,	۷	L	\	_		î	£	1⁄4				8	n
D			-	=	М	]	m	}	Ì	¥	i				Ø	2
Е				>	Ν	۸	n	~	Ä	Pt	«				ε	
F			/	?	0	_	0	XX	Å	ſ	»				$\cap$	

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The Euro code (B0H) can be changed in the parameter setting in the system mode.

#### (3) PC-852

_																
	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€			Ó	-
1			!	1	А	Q	а	q	ü		í			Ð	ß	
2			"	2	В	R	b	r	é		ó				Ô	
3			#	3	С	S	с	s	â	ô	ú			Ë		
4			\$	4	D	Т	d	t	ä	ö						
5			%	5	Е	U	е	u				Á				§
6			&	6	F	V	f	v				Â		Í		÷
7			,	7	G	W	g	w	ç					Î		د
8			(	8	Н	Х	h	х								٥
9			)	9	Ι	Υ	i	у	ë	Ö					Ú	
Α			*	:	J	Ζ	j	z		Ü	7					•
В			+	;	Κ	[	k	{								
С			,	<	L	١	Ι		î						ý	
D			_	=	М	]	m	}							Ý	
Е				>	Ν	۸	n	~	Ä	×	«					
F			/	?	0	_	0	×			»		¤			

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The Euro code (B0H) can be changed in the parameter setting in the system mode.

### (4) PC-857

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€		Ō	Ó	-
1			!	1	Α	Q	а	q	ü	æ	í			<u>a</u>	ß	±
2			"	2	В	R	b	r	é	Æ	ó			Ê	Ô	
3			#	3	С	S	с	s	â	ô	ú			Ë	Ò	3⁄4
4			\$	4	D	Т	d	t	ä	ö	ñ			È	õ	¶
5			%	5	Е	U	е	u	à	ò	Ñ	Á			Õ	§
6			&	6	F	V	f	v	å	û		Â	ã	Í	μ	÷
7				7	G	W	g	W	ç	ù		À	Ã	Î		د
8			(	8	Н	Х	h	х	ê		j	©			×	0
9			)	9	I	Υ	i	у	ë	Ö	R				Ú	
А			*	:	J	Ζ	j	z	è	Ü	Г				Û	•
В			+	;	К	[	k	{	ï	ø	1/2				Ù	1
С			,	<	L	١			î	£	1⁄4				ì	3
D			_	=	М	]	m	}		Ø	i	¢			ÿ	2
Е				>	Ν	۸	n	~	Ä		«	¥		Ì	-	
F			/	?	0	_	0	×	Å		»		¤		,	

When Japanese message is selected in the system mode, code 5CH indicates "¥".

## 12.2 PRESENTATION (Bit map font type: M)

### (1) PC-850, PC-857

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	Р				€				-
1			!	1	А	Q	А	Q								
2			=	2	В	R	В	R								
3			#	3	С	S	С	s								
4			\$	4	D	Т	D	Т								
5			%	5	Е	U	Е	U								
6			&	6	F	V	F	V								
7			'	7	G	W	G	W								
8			(	8	Н	Х	Н	х								
9			)	9	Ι	Y	I	Y								
Α			*	:	J	Ζ	J	Z								
В			+	;	Κ	[	К	{								
С			,	<	L	١	L									
D			-	=	М	]	М	}								
Е				>	Ν	۸	N	~				¥				
F			/	?	0	_	0	×								

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The Euro code (B0H) can be changed in the parameter setting in the system mode.

### (2) PC-8

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	Р				€				
1			!	1	А	Q	А	Q								
2			"	2	В	R	В	R								
3			#	3	С	S	С	S								
4			\$	4	D	Т	D	т								
5			%	5	Е	U	E	U								
6			&	6	F	V	F	V								
7			'	7	G	W	G	w								
8			(	8	Н	Х	н	х								
9			)	9	Ι	Υ	1	Y								
Α			*	:	J	Ζ	J	z								
В			+	;	Κ	[	к	{								
С			,	<	L	١	L									
D			_	=	М	]	М	}		¥						
Е				>	Ν	۸	N	~								
F			/	?	0	_	0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

(3) PC-852

(-)	1															
	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
0				0	@	Ρ	`	Р				€				-
1			!	1	А	Q	А	Q								
2			"	2	В	R	В	R								
3			#	3	С	S	с	s								
4			\$	4	D	Т	D	т								
5			%	5	Е	U	E	U								
6			&	6	F	V	F	v								
7			'	7	G	W	G	w								
8			(	8	Н	Х	Н	х								
9			)	9	Ι	Υ	Ι	Y								
Α			*	•	J	Ζ	J	z								
В			+	;	Κ	[	К	{								
С			,	<	L	١	L									
D			1	=	М	]	М	}								
Е				>	Ν	۸	N	~								
F			/	?	0	_	0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

## 12.3 OCR-A (Bit map font type: S)

## (1) PC-850, PC-857

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	Ч	р								-
1			!	1	А	Q	a	q								
2			11	2	В	R	b	r								
3			#	3	С	S	С	ន								
4			\$	4	D	Т	d	t								
5			0/0	5	Е	U	e	u								
6			&	6	F	V	f	v								
7			'	7	G	W	ສ	W								
8			(	8	Η	Х	h	x								
9			)	9	I	Y	i	У								
А			*	:	J	Z	j	Z								
В			+	;	K	[	k	{								
С			,	<	L	$\backslash$	1									
D			-	=	М	]	m	}								
Е			•	^	Ν	~	n	5				¥				
F			/	?	0	Ч	0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

### (2) PC-8

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	Ч	р								
1			!	1	А	Q	а	q								
2				2	В	R	b	r								
3			#	3	С	S	С	Ŋ								
4			\$	4	D	Т	d	t								
5			٥١٥	5	E	U	е	u								
6			Ъ	6	F	V	f	v								
7			-	7	U	W	g	W								
8			(	8	Η	Х	h	х								
9			)	9	I	Y	i	У								
Α			*	:	J	Ζ	j	Z								
В			+	;	К	[	k	{								
С			,	<	L	$\backslash$	1									
D			I	=	М	]	m	}		¥						
Е			•	>	Ν	^	n	ſ								
F			/	?	0	Ч	0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

(3) PC-852

	0	4	0	0	4	~	<u> </u>	7	0	0	٨	Б	0	Б	-	Г
	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
0				0	@	Ρ	Ч	р								-
1			!	1	А	Q	а	q								
2			п	2	В	R	b	r								
3			#	3	С	S	С	ន								
4			<del>ي</del> ې	4	D	Т	d	t								
5			٥١٥	5	Е	U	е	u								
6			&	6	F	V	f	v								
7			-	7	G	W	g	W								
8			(	8	Н	Х	h	x								
9			)	9	I	Y	i	У								
А			*	:	J	Z	j	Z								
В			+	;	K	[	k	{								
С			,	<	L	$\backslash$	1									
D			-	=	М	]	m	}								
Е			•	^	Ν	~	n	ſ								
F			/	?	0	Y	0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

## 12.4 OCR-B (Bit map font type: T)

### (1) PC-850, PC-857

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	0							-
1			!	1	A	Q	a	q	1							
2			"	2	В	R	b	r	2							
3			#	3	С	S	С	ន	3							
4			<del>י</del> ې	4	D	Т	d	t	4							
5			olo	5	Ε	U	e	u	5							
6			&	6	F	V	f	v	б							
7			-	7	G	W	ຽ	W	7							
8			(	8	Η	Х	h	х	8							
9			)	9	I	Y	i	У	9							
Α			*	••	J	Z	j.	Z								
В			+	;	K	[	k	{								
С			,	<b>v</b>	L	$\setminus$	1									
D			-	=	М	]	m	}								
Е			•	>	Ν	^	n	2				¥				
F			/	۰.	0		0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The size of the numerals of codes 80h ~ 89h are reduced to 80%.

(2) PC-8

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	0							
1			!	1	A	Q	a	q	1							
2			=	2	В	R	b	r	2							
3			#	3	С	S	С	Ŋ	3							
4			\$	4	D	Т	d	t	4							
5			olo	5	Е	U	е	u	5							
6			&	6	F	V	f	v	6							
7			'	7	G	W	g	W	7							
8			(	8	Н	Х	h	x	8							
9			)	9	I	Y	i	У	9							
Α			*	:	J	Ζ	j	Z								
В			+	;	K	[	k	{								
С			,	<	L	$\setminus$	1									
D			-	=	М	]	m	}		¥						
Е				>	Ν	^	n	~								
F			/	?	0	_	0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The size of the numerals of codes 80h ~ 89h are reduced to 80%.

### (3) PC-852

	0	4	0	2	4	F	6	7	0	0	٨	Р	0	D	Е	F
	0	1	2	3	4	5	6	7	8	9	А	В	С	D	E	Г
0				0	@	Р	`	р	0							-
1			!	1	А	Q	а	q	1							
2			"	2	В	R	b	r	2							
3			#	3	С	S	C	ß	3							
4			\$	4	D	Т	d	t	4							
5			0\0	5	Е	U	е	u	5							
6			&	6	F	V	f	v	6							
7			ı	7	G	W	g	W	7							
8			(	8	Η	Х	h	х	8							
9			)	9	I	Y	i	У	9							
Α			*	:	J	Ζ	j	Z								
В			+	;	K	[	k	{								
С			,	<	L	$\setminus$	1									
D			-	=	М	]	m	}								
Е				>	Ν	^	n	2								
F			/	?	0	_	0									

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The size of the numerals of codes 80h ~ 89h are reduced to 80%.

# 12.5 TEC OUTLINE FONT 1 (Outline font type: A, B)

## (1) PC-850

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€				-
1			!	1	А	Q	а	q	ü	æ	í	€			ß	±
2			"	2	В	R	b	r	é	Æ	ó					
3			#	3	С	S	с	s	â	ô	ú					
4			\$	4	D	Т	d	t	ä	ö	ñ				õ	
5			%	5	Е	U	е	u	à	ò	Ñ					§
6			&	6	F	V	f	v	å	û	a		ã		μ	÷
7			,	7	G	W	g	w	ç	ù	Q					
8			(	8	Н	Х	h	х	ê	ÿ	j					0
9			)	9	Ι	Υ	i	у	ë	Ö						
А			*	•••	J	Ζ	j	z	è	Ü	Г					•
В			+	,	Κ	[	k	{	ï	ø	1⁄2					
С			,	<	L	١	Ι		î	£	1⁄4					
D			_	=	М	]	m	}	ì	Ø	i	¢				2
Е				>	Ν	۸	n	~	Ä		«	¥				
F			/	?	0	_	0	$\triangle$	Å	f	»		¤			

The Euro code (B0H) can be changed in the parameter setting in the system mode.

### (2) PC-8

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	、	р	Ç	É	á	€			α	≡
1			!	1	Α	Q	а	q	ü	æ	í	€			β	±
2			=	2	В	R	b	r	é	Æ	ó				Γ	$\geq$
3			#	3	С	S	С	S	â	ô	ú				π	$\leq$
4			\$	4	D	Т	d	t	ä	ö	ñ				Σ	ſ
5			%	5	Е	U	е	u	à	ò	Ñ				σ	J
6			&	6	F	V	f	v	å	û	a				μ	÷
7			'	7	G	W	g	w	ç	ù	Q				τ	*
8			(	8	Н	Х	h	х	ê	ÿ	j				Φ	0
9			)	9	Ι	Υ	i	у	ë	Ö					Θ	•
А			*	:	J	Ζ	j	z	è	Ü	٦				Ω	•
В			+	,	Κ	[	k	{	ï	¢	1⁄2				δ	
С			,	۷	L	\	—		î	£	1⁄4				8	n
D			1	=	М	]	m	}	ì	¥	i				Ø	2
Е				>	Ν	۸	n	2	Ä	Pt	«				ε	
F			/	?	0	_	0	$\triangle$	Å	ſ	»				$\cap$	

### (3) PC-852

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	P	``	р	Ç	É	á	€				-
1			!	1	Α	Q	а	q	ü		í	€			ß	
2			"	2	В	R	b	r	é		ó					
3			#	3	С	S	С	s	â	ô	ú					
4			\$	4	D	Т	d	t	ä	ö						
5			%	5	Е	U	е	u								§
6			&	6	F	V	f	v								÷
7			,	7	G	W	g	w	ç							
8			(	8	Н	Х	h	х								0
9			)	9	Ι	Υ	i	у	ë	Ö						
А			*	:	J	Ζ	j	z		Ü	٦					•
В			+	;	Κ	[	k	{								
С			,	<	L	١	Ι		î							
D			-	=	М	]	m	}								
Е				>	Ν	۸	n	~	Ä		«					
F			/	?	0	_	0	$\triangle$			»		¤			

The Euro code (B0H) can be changed in the parameter setting in the system mode.

### (4) PC-857

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€		Q		-
1			!	1	А	Q	а	q	ü	æ	í	€		a	ß	±
2			=	2	В	R	b	r	é	Æ	ó					
3			#	3	С	S	С	S	â	ô	ú					
4			\$	4	D	Т	d	t	ä	ö	ñ				õ	
5			%	5	Е	U	е	u	à	ò	Ñ					§
6			&	6	F	V	f	v	å	û			ã		μ	÷
7			'	7	G	W	g	w	Ç	ù						
8			(	8	Н	Х	h	х	ê		j					0
9			)	9	Ι	Υ	i	у	ë	Ö						
А			*	:	J	Ζ	j	z	è	Ü	7					•
В			+	;	Κ	[	k	{	ï	ø	1/2					
С			,	۷	∟	\	—		î	£	1⁄4				ì	
D			-	Ш	М	]	m	}		Ø	i	¢			ÿ	2
Е				>	Ν	۸	n	2	Ä		«	¥				
F			/	?	0	_	0		Å		»		¤			

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	円											-
1				1												
2				2												
3				3												
4			\$	4												
5			%	5												
6				6												
7				7												
8				8												
9				9												
Α																
В																
С			,			¥										
D			١													
Е								2								
F			/													

## **12.6 PRICE FONT 1, 2, 3** (Outline font type: E, F, G)

## 12.7 TEC OUTLINE FONT 2, 3 (Outline font type: H, I)

(1) PC-850

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€		ð	Ó	-
1			!	1	А	Q	а	q	ü	æ	í			Ð	ß	±
2			"	2	В	R	b	r	é	Æ	ó			Ê	Ô	=
3			#	3	С	S	С	s	â	ô	ú			Ë	Ò	3⁄4
4			\$	4	D	Г	d	t	ä	ö	ñ			Έ	õ	¶
5			%	5	ш	J	e	u	à	ò	Ñ	Á		1	Õ	ŝ
6			~	6	F	V	f	>	å	û	a	Â	ã	ĺ	μ	·ŀ·
7			,	7	G	W	g	W	Ç	ù	Q	À	Ã	Î	þ	د
8			(	8	H	Х	h	х	ê	ÿ	j	©		ï	Þ	0
9			)	9	Ι	Υ	i	у	ë	Ö	R				Ú	•
А			*	•••	J	Ζ	j	z	è	Ü	Г				Û	٠
В			+	,	Κ	[	k	{	ï	ø	1⁄2				Ù	1
С			,	<	L	١	Ι		î	£	1⁄4				ý	3
D			-	=	М	]	m	}	ì	Ø	i	¢			Ý	2
Е				>	Ν	^	n	~	Ä	×	«	¥		Ì	-	
F			/	?	0	_	0		Å	f	»		¤		,	

When Japanese message is selected in the system mode, code 5CH indicates "¥".

(2) PC-8

	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€				
1				1	А	Q	а	q	ü	æ	í					ŧ
2			"	2	В	R	b	r	é	Æ	ó					
3			#	3	С	S	С	s	â	ô	ú					
4			\$	4	D	Т	d	t	ä	ö	ñ					
5			%	5	Е	U	е	u	à	ò	Ñ					
6			&	6	F	V	f	v	å	û	a				μ	÷
7			,	7	G	W	g	w	ç	ù	Q					
8			(	8	Н	Х	h	х	ê	ÿ	j					0
9			)	9	Ι	Υ	i	у	ë	Ö						
А			*	•••	J	Ζ	j	z	è	Ü	Г					٠
В			+	;	Κ	[	k	{	ï	¢	1⁄2					
С			,	<	L	١	Ι		î	£	1⁄4					
D			_	=	М	]	m	}	ì	¥	i					2
Е				>	Ν	^	n	~	Ä		«					
F			/	?	0	_	0		Å	f	»					

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The Euro code (B0H) can be changed in the parameter setting in the system mode.

#### (3) PC-852

	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€		đ	Ó	-
1			!	1	А	Q	а	q	ü	Ĺ	í			Ð	ß	"
2			"	2	В	R	b	r	é	Í	ó			Ď	Ô	"
3			#	3	С	S	С	s	â	ô	ú			Ë	Ń	>
4			\$	4	D	Г	d	t	ä	ö	Ą			ď	ń	)
5			%	5	Ш	U	e	u	ů	Ľ	ą	Á		Ň	ň	Ş
6			&	6	F	V	f	v	ć	ľ	Ž	Â	Å	Í	Š	·ŀ
7			,	7	G	W	g	W	ç	Ś	ž	Ě	å	Î	š	د
8			(	8	Н	Х	h	х	ł	ś	Ę	Ş		ě	Ŕ	٥
9			)	9	Ι	Υ	i	у	ë	Ö	ę				Ú	
Α			*	:	J	Ζ	j	Z	Ő	Ü	7				ŕ	•
В			+	;	Κ	[	k	{	ő	Ť	ź				Ű	ű
С			,	<	L	١	Ι		î	ť	Č				ý	Ř
D			-	=	М	]	m	}	Ź	Ł	Ş	ż		Ţ	Ý	ř
Е				>	Ν	^	n	~	Ä	×	«	ż		Ů	ţ	
F			/	?	0	_	0		Ć	č	»		¤			

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The Euro code (B0H) can be changed in the parameter setting in the system mode.

(4) PC-857

(.)	_															
	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0				0	@	Ρ	`	р	Ç	É	á	€		Ō	Ó	-
1			!	1	А	Q	а	q	ü	æ	í			a	ß	+I
2			"	2	В	R	b	r	é	Æ	ó			Ê	Ô	
3			#	3	С	S	с	S	â	ô	ú			Ë	Ò	3⁄4
4			\$	4	D	Т	d	t	ä	ö	ñ			È	õ	ſ
5			%	5	Е	U	е	u	à	ò	Ñ	Á			Õ	§
6			&	6	F	V	f	v	å	û	Ğ	Â	ã	Í	μ	÷
7			,	7	G	W	g	W	ç	ù	ğ	À	Ã	Î		د
8			(	8	Н	Х	h	х	ê	i	j	©		Ϊ	×	0
9			)	9	Ι	Υ	i	у	ë	Ö	R				Ú	
Α			*	•••	J	Ζ	j	Z	è	Ü	Г				Û	•
В			+	;	Κ	[	k	{	ï	ø	1⁄2				Ù	1
С			,	<	L	١	Ι		î	£	1⁄4				ì	3
D			_	=	М	]	m	}	1	Ø	i	¢		ł	ÿ	2
Е				>	Ν	^	n	~	Ä	Ş	«	¥		Ì	-	
F			/	?	0	_	0		Å	ş	»		¤		,	

When Japanese message is selected in the system mode, code 5CH indicates "¥".

The Euro code (B0H) can be changed in the parameter setting in the system mode.

# 12.8 TrueType FONT

(1) PC-850

	2	з	4	5	6	7	8	9	Α	в	С	D	Е	F
0		0	@	P	•	p	Ç	É	á		L	ð	Ó	-
1	!	1	A	Q	a	q	ü	æ	í	**	<b></b>	Ð	ß	±
2	н	2	B	R	b	r	é	Æ	ó	Ħ	-	Ê	Ô	=
з	#	3	С	S	с	s	â	ô	ú		-	Ë	Ò	3⁄4
4	\$	4	D	Т	d	t	ä	ö	ñ	-		È	õ	٩
5	%	5	Е	U	e	u	à	ò	Ñ	Á	+	1	Õ	ş
6	&	6	F	v	f	v	å	û	a	Â	ã	Í	μ	÷
7	•	7	G	w	g	w	ç	ù	0	À	Ã	Î	þ	
8	(	8	Н	x	h	x	ê	ÿ	i	©	L	Ï	Þ	0
9	)	9	I	Y	i	у	ë	Ö	®	ᆌ	Ĩ	_	Ú	
А	*	:	J	z	j	z	è	Ü	-		ᆜᆫ	Г	Û	•
в	+	;	K	I	k	{	ï	ø	1/2	키	٦F		Ù	1
С	,	<	L	١	1		î	£	1⁄4	Ŀ	ŀ		ý	3
D	-	=	М	]	m	}	ì	ø	;	¢	_		Ý	2
Е		>	N	^	n	~	Ä	×	«	¥	╬	Ì	-	-
F	/	?	0		0	$\triangle$	Å	f	»	٦	¤			

## (2) PC-8

	2	3	4	5	6	7	8	9	A	в	С	D	E	F
0		0	@	Р		p	Ç	É	á		L	ᆂ	α	=
1	!	1	A	Q	a	q	ü	æ	í	**		┯	ß	±
2	"	2	В	R	b	r	é	Æ	ó	Ħ	$\top$	π	Г	≥
з	#	3	С	s	c	s	â	ô	ú		⊢	ш	π	≤
4	\$	4	D	Т	d	t	ä	ö	ñ			F	Σ	ſ
5	%	5	E	U	e	u	à	ò	Ñ	=	+	F	σ	J
6	&	6	F	v	f	v	å	û	a	-11	⊨	г	μ	÷
7	·	7	G	w	g	w	ç	ù	0	п	⊩	#	τ	~
8	(	8	н	x	h	x	ê	ÿ	i	=	Ľ	+	ф	٥
9	)	9	I	Y	i	у	ë	Ö	-	ᅱ	F		θ	
Α	*	:	J	Z	j	z	è	Ü	-	11	┙┖	г	Ω	
в	+	;	К	[	k	{	ï	c	1⁄2	ור	7		δ	
С	,	<	L	١	1	1	î	£	1⁄4	ᅴ	⊩		∞	n
D	-	=	М	1	m	}	ì	¥	1	ш	_		$\phi$	2
Е		>	N	^	n	~	Ä	Pt	«	4	⊣⊦		ε	•
F	1	?	0	_	0	$\triangle$	Å	f	»	<b>_</b>	<u> </u>		$\cap$	

## (3) PC-852

r	,		r	1	1			T	,				r	
	2	3	4	5	6	7	8	9	Α	в	С	D	Е	F
0		0	@	Р	•	p	Ç	É	á		L	đ	Ó	-
1	!	1	A	Q	a	q	ü	Ĺ	í	**	1	Ð	ß	~
2	"	2	в	R	b	r	é	í	ó	Ħ	-	Ď	Ô	с.
з	#	3	С	s	с	s	â	ô	ú		⊢	Ë	Ń	~
4	\$	4	D	Т	d	t	ä	ö	Ą	-		ď	ń	-
5	%	5	E	U	e	u	ů	Ľ	ą	Á	+	Ň	ň	ş
6	&	6	F	v	f	v	ć	ľ	Ž	Â	Ă	Í	Š	÷
7	,	7	G	w	g	w	ç	Ś	ž	Ě	ă	Î	š	
8	(	8	н	x	h	x	ł	ś	Ę	Ş	Ŀ	ě	Ŕ	o
9	)	9	I	Y	i	у	ë	Ö	ę	=	ſĒ		Ú	
Α	*	:	J	z	j	z	Ő	Ü			╝└	Г	ŕ	•
в	+	;	к	ſ	k	{	ő	Ť	ź	F	ᆔ		Ű	ű
С	,	<	L	١	1	1	î	ť	Č	-1	۱F		ý	Ř
D	-	=	М	]	m	}	Ź	Ł	ş	Ż	_	Ţ	Ý	ř
Е		>	N	^	n	~	Ä	×	*	ż	⊣⊨	Ů	ţ	
F	1	?	0	_	0	$\bigtriangleup$	Ć	č	»	٦	¤			

#### (4) PC-857

	2	3	4	5	6	7	8	9	Α	в	С	D	Е	F
0		0	@	Р	•	p	Ç	É	á		L	0	Ó	-
1	!	1	Α	Q	a	q	ü	æ	í	**	⊥	a	ß	±
2	"	2	в	R	b	r	é	Æ	ó	Ħ	-	Ê	Ô	
з	#	3	С	s	с	s	â	ô	ú		⊢	Ë	Ò	3⁄4
4	\$	4	D	Т	d	t	ä	ö	ñ	-	_	È	õ	ſ
5	%	5	Е	U	e	u	à	ò	Ñ	Á	+		Õ	ş
6	&	6	F	v	f	v	å	û	Ğ	Â	ã	Í	μ	÷
7	•	7	G	w	g	w	ç	ù	ğ	À	Ã	Î		e e
8	(	8	н	x	h	x	ê	İ	i	©	Ľ	Ï	×	o
9	)	9	I	Y	i	у	ë	Ö	®	ᆌ	F		Ú	
А	*	:	J	Z	j	z	è	Ü	-		ᆚᄂ	Г	Û	
в	+	;	K	I	k	{	ï	ø	1/2	키	⊐⊏		Ù	1
С	,	<	L	١	1		î	£	1⁄4	<u>_</u> ]	۱۲		ì	3
D	-	=	М	]	m	}	1	ø	i	¢	_	1	ÿ	2
Е		>	N	^	n	~	Ä	Ş	«	¥	╡┝╴	Ì	-	
F	/	?	0	_	0	$\triangle$	Å	ş	»	٦	¤		,	

# 13. BAR CODE TABLE

(1) WPC (JAN, EAN, UPC) ITF, MSI, UCC/EAN128, Industrial 2 of 5

	2	3	4	5	6	7
0		0				
1		1				
2		2				
3		3				
4		4				
5		5				
6		6				
7		7				
8		8				
9		9				
Α						
В						
С						
D						
Е						
F						

## (3) CODE39 (Full ASCII)

## [Transfer code]

	2	3	4	5	6	7
0	SP	0	@	Р	``	р
1	!	1	А	Q	а	q
2	"	2	В	R	b	r
3	#	3	С	S	С	S
4	\$	4	D	Т	d	t
5	%	5	Е	U	е	u
6	&	6	F	V	f	V
7	'	7	G	W	g	W
8	(	8	Н	Х	h	х
9	)	9	Ι	Y	i	у
Α	*	:	J	Z	j	Z
В	+	,	К	[	k	{
С	,	<	L	\	Ι	
D	_	II	М	]	m	}
Е		^	Ν	^	n	~
F	/	?	0	_	0	$\triangle$

#### (2) CODE39 (Standard)

	2	3	4	5	6	7
0	SP	0		Р		
1		1	Α	Q		
2		2	В	R		
3		3	С	S		
4	\$	4	D	Т		
5	%	5	Е	U		
6		6	F	V		
7		7	G	W		
8		8	Н	Х		
9		9	Ι	Y		
Α	*		J	Ζ		
В	+		Κ			
С			L			
D	_		М			
Е	•		Ν			
F	/		0			

## [Drawing code]

	2	3	4	5	6	7
0	SP	0	%V	Р	%W	+P
1	/A	1	А	Q	+A	+Q
2	/B	2	В	R	+B	+R
3	/C	3	С	S	+C	+S
4	/D	4	D	Т	+D	+T
5	/E	5	Е	U	+E	+U
6	/F	6	F	V	+F	+V
7	/G	7	G	W	+G	+W
8	/H	8	Н	Х	+H	+X
9	/I	9	Ι	Υ	+1	+Y
Α	/J	/Z	J	Z	+J	+Z
В	/K	%F	К	%K	+K	%P
С	/L	%G	L	%L	+L	%Q
D	—	%H	М	%M	+M	%R
Е		%I	Ν	%N	+N	%S
F	/O	%J	0	%0	+0	%T

#### (4) NW-7

	2	3	4	5	6	7
0	SP	0				
1		1	А		а	
2		2	В		b	
3		3	С		С	
4	\$	4	D		d	t
5		5			е	
6		6				
7		7				
8		8				
9		9				
Α	*					
В	+					
С						
D	_					
Е	•				n	
F	/					

#### (5) CODE93

#### [Transfer code] 2 3 4 5 6 7 ` Ρ SP @ 0 0 р 1 ! 1 А Q а q " 2 2 В R b r 3 # 3 С S С s \$ Т D 4 4 d t 5 % 5 Е U е u F V 6 & 6 f ٧ 7 ' 7 G W g W 8 8 Н Х h х ( Υ 9 9 I i ) у Ζ J А \* : j z В Κ k { + ; [ С ١ L I < , D \_ = Μ ] m } ۸ Е Ν n ~ > • F / ? 0 $\triangle$ 0

#### [Drawing code]

		2	3	4	5	6	7
0		SP	0	%V	Р	%W	+P
1		/A	1	А	Q	+A	+Q
2		/B	2	В	R	+B	+R
3		/C	3	С	S	+C	+S
4		\$	4	D	Т	+D	+T
5		%	5	Ш	U	+E	+U
6		/F	6	F	V	+F	+V
7	-	/G	7	G	W	+G	+W
8		/H	8	Н	Х	+H	+X
9		/I	9	-	Y	+	+Y
A		/J	/Z	J	Ζ	+J	+Z
В		+	%F	К	%K	+K	%P
С		/L	%G	L	%L	+L	%Q
D	)	-	%Н	М	%M	+M	%R
E			%I	Ν	%N	+N	%S
F		/	%J	0	%O	+0	%T

#### (6) CODE128

## [Transfer code]

	_	_	2	3	4	5	6	7
0	NUL	DLE	SP	0	@	Ρ	`	р
1	SOH	DC1	!	1	А	Q	а	q
2	STX	DC2	-	2	В	R	b	r
3	ETX	DC3	#	3	С	S	С	S
4	EOT	DC4	\$	4	D	Т	d	t
5	ENQ	NAK	%	5	ш	U	е	u
6	ACK	SYN	8	6	F	V	f	v
7	BEL	ETB	1	7	G	W	g	w
8	BS	CAN	(	8	Н	Х	h	х
9	HT	EM	)	9	Ι	Y	i	у
Α	LF	SUB	*	• •	J	Ζ	j	z
В	VT	ESC	+	;	Κ	[	k	{
С	FF	FS	,	<	L	١	Ι	
D	CR	GS	-	=	М	]	m	}
Е	SO	RS	•	>	Ν	^	n	~
F	SI	US	/	?	0	_	0	$\triangle$



[Drawing code]

Value Code Table

① How to transmit control code data:

NUL (00H)	$\rightarrow$	>@ (3EH, 40H)
SOH (01H)	$\rightarrow$	>A (3EH, 41H)
STX (02H)	$\rightarrow$	>B (3EH, 42H)
to GS (1DH) RS (1EH) US (1FH)	$\rightarrow$ $\rightarrow$ $\rightarrow$	>] (3EH, 5DH) > ^ (3EH, 5EH) >_ (3EH, 5FH)

② How to transmit special codes:

Value		
30 (Character >)	$\rightarrow$	>0
95	$\rightarrow$	>1
96	$\rightarrow$	>2
97	$\rightarrow$	>3
98	$\rightarrow$	>4
99	$\rightarrow$	>5
100	$\rightarrow$	>6
101	$\rightarrow$	>7
102	$\rightarrow$	>8

## 3 Designation of start code:

START (CODE A)	$\rightarrow$	>7
START (CODE B)	$\rightarrow$	>6
START (CODE C)	$\rightarrow$	>5

#### Value Code Table

VALUE	CODE	CODE	CODE	VALUE	CODE	CODE	CODE	VALUE	CODE	CODE	CODE
	A	B	C		A	B	C		A	B	C
0	SP	SP	00	36	D	D	36	72	BS	h	72
1	!	!	01	37	Е	Е	37	73	HT	i	73
2	"	"	02	38	F	F	38	74	LF	j	74
3	#	#	03	39	G	G	39	75	VT	k	75
4	\$	\$	04	40	Н	Н	40	76	FF	I	76
5	%	%	05	41	I	Ι	41	77	CR	m	77
6	&	&	06	42	J	J	42	78	SO	n	78
7	'	'	07	43	K	К	43	79	SI	0	79
8	(	(	08	44	L	L	44	80	DLE	р	80
9	)	)	09	45	М	М	45	81	DC1	q	81
10	*	*	10	46	N	N	46	82	DC2	r	82
11	+	+	11	47	0	0	47	83	DC3	S	83
12	,	,	12	48	Р	Р	48	84	DC4	t	84
13	_	_	13	49	Q	Q	49	85	NAK	u	85
14			14	50	R	R	50	86	SYN	v	86
15	/	/	15	51	S	S	51	87	ETB	w	87
16	0	0	16	52	Т	Т	52	88	CAN	Х	88
17	1	1	17	53	U	U	53	89	EM	У	89
18	2	2	18	54	V	V	54	90	SUB	Z	90
19	3	3	19	55	W	W	55	91	ESC	{	91
20	4	4	20	56	X	Х	56	92	FS		92
21	5	5	21	57	Y	Y	57	93	GS	}	93
22	6	6	22	58	Z	Z	58	94	RS	~	94
23	7	7	23	59	[	[	59	95	US	DEL	95
24	8	8	24	60	\	١	60	96	FNC3	FNC3	96
25	9	9	25	61	]	]	61	97	FNC2	FNC2	97
26	:	:	26	62	^	^	62	98	SHIFT	SHIFT	98
27	;	;	27	63		—	63	99	CODE C	CODE C	99
28	<	<	28	64	NUL	`	64	100	CODE B		CODE B
29	=	=	29	65	SOH	а	65	101	FNC4	CODE A	CODE A
30	>	>	30	66	STX	b	66	102	FNC1	FNC1	FNC1
31	?	?	31	67	ETX	С	67				
32	@	@	32	68	EOT	d	68	103		RT COE	
33	Α	А	33	69	ENQ	е	69	104	START CODE B		
34	В	В	34	70	ACK	f	70	105	STA	RT COD	DEC
35	С	С	35	71	BEL	g	71				

#### (7) Data Matrix

The code to be used is designated using the format ID.

Format ID	Code	Details
1	Numerics	0 to 9 space
2	Letters	A to Z space
3	Alphanumerics, symbols	0 to 9 A to Z space . , - /
4	Alphanumerics	0 to 9 A to Z space
5	ASCII (7-bit)	00H to 7FH
6	ISO (8-bit)	00H to FFH (Kanji)

#### [Transfer Code]

$\square$	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0	NUL	DLE	SP	0	@	Р	•	р								
1	SOH	DC1	!	1	А	Q	а	q								
2	STX	DC2	"	2	В	R	b	r								
3	ETX	DC3	#	3	С	S	с	s								
4	EOT	DC4	\$	4	D	Т	d	t								
5	ENQ	NAK	%	5	Е	U	e	u								
6	ACK	SYN	&	6	F	V	f	v								
7	BEL	ETB	,	7	G	W	g	w								
8	BS	CAN	(	8	Н	Х	h	х								
9	HT	EM	)	9	Ι	Υ	i	у								
А	LF	SUB	*	:	J	Ζ	j	z								
В	VT	ESC	+	,	К	[	k	{								
С	FF	FS	,	<	L	١	Ι									
D	CR	GS	-	Π	М	]	m	}								
Е	SO	RS		٨	Ν	^	n	~								
F	SI	US	/	?	0		0	$\triangle$								

① How to send control code data

NUL	(00H)	$\rightarrow$	>@	(3EH, 40H)
SOH	(01H)	$\rightarrow$	>A	(3EH, 41H)
STX	(02H)	$\rightarrow$	>B	(3EH, 42H)
to				
GS	(1DH)	$\rightarrow$	>]	(3EH, 5DH)
RS	(1EH)	$\rightarrow$	>^	(3EH, 5EH)
US	(1FH)	$\rightarrow$	>_	(3EH, 5FH)
	· ,		-	

 $\ensuremath{@}$  How to send a special code

>	(3EH)	$\rightarrow$	>0	(3EH, 30H)
---	-------	---------------	----	------------

③ How to send a Kanji code

Shift JIS

JIS hexadecimal

#### (8) PDF417

The following modes are automatically selected according to the code used.

Mode	Code	Details
EXC mode	Alphanumerics, symbol	0 to 9 A to Z a to z space ! " # \$ % & ' ( ) * + , / : ; < = > ? @ [ \ ] ^ ` {   } ~ △ CR HT
Binary/ASCII Plus mode	Binary International Character Set	00H to FFH (Kanji)
Numeric Compaction mode	Numerics	0 to 9

[Transfer Code]

$\sum$	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0	NUL	DLE	SP	0	@	Р	`	р								
1	SOH	DC1	!	1	А	Q	а	q								
2	STX	DC2	"	2	В	R	b	r								
3	ETX	DC3	#	3	С	S	с	s								
4	EOT	DC4	\$	4	D	Т	d	t								
5	ENQ	NAK	%	5	Е	U	е	u								
6	ACK	SYN	&	6	F	V	f	v								
7	BEL	ETB	,	7	G	W	g	W								
8	BS	CAN	(	8	Н	Х	h	х								
9	HT	EM	)	9	Ι	Υ	i	у								
Α	LF	SUB	*	:	J	Ζ	j	z								
В	VT	ESC	+	;	К	[	k	{								
С	FF	FS	,	<	L	١										
D	CR	GS	-	=	М	]	m	}								
Е	SO	RS		>	Ν	^	n	~								
F	SI	US	/	?	0	_	0	$\bigtriangleup$								

 $\ensuremath{\mathbb O}$  How to send control code data

NUL	(00H)	$\rightarrow$	>@	(3EH, 40H)
SOH	(01H)	$\rightarrow$	>A	(3EH, 41H)
STX	(02H)	$\rightarrow$	>B	(3EH, 42H)
to				
GS	(1DH)	$\rightarrow$	>]	(3EH, 5DH)
RS	(1EH)	$\rightarrow$	>^	(3EH, 5EH)
US	(1FH)	$\rightarrow$	>_	(3EH, 5FH)

 $\ensuremath{\textcircled{}^\circ}$  How to send a special code

>	(3EH)	$\rightarrow$	>0	(3EH, 30H)
---	-------	---------------	----	------------

③ How to send a Kanji code

Shift JIS

JIS hexadecimal

#### (9) MicroPDF417

The following modes are automatically selected according to the code used.

Mode	Details
Upper case letters,	A to Z, space
space	
Binary International	00H to FFH (Kanji)
Character Set	
Numerics	0 to 9

[Transfer Code]

$\square$	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0	NUL	DLE	SP	0	@	Р	`	р								
1	SOH	DC1	!	1	А	Q	а	q								
2	STX	DC2	"	2	В	R	b	r								
3	ETX	DC3	#	3	С	S	с	s								
4	EOT	DC4	\$	4	D	Т	d	t								
5	ENQ	NAK	%	5	Е	U	е	u								
6	ACK	SYN	&	6	F	V	f	v								
7	BEL	ETB	,	7	G	W	g	w								
8	BS	CAN	(	8	Н	Х	h	х								
9	HT	EM	)	9	Ι	Υ	i	у								
А	LF	SUB	*	:	J	Ζ	j	z								
В	VT	ESC	+	;	К	[	k	{								
С	FF	FS	,	<	L	١	Ι									
D	CR	GS	-	I	М	]	m	}								
Е	SO	RS		^	Ν	^	n	۲								
F	SI	US	/	?	0	_	0	$\triangle$								

 $\ensuremath{\mathbb O}$  How to send control code data

NUL	(00H)	$\rightarrow$	>@	(3EH, 40H)
SOH	(01H)	$\rightarrow$	>A	(3EH, 41H)
STX	(02H)	$\rightarrow$	>B	(3EH, 42H)
to				
GS	(1DH)	$\rightarrow$	>]	(3EH, 5DH)
RS	(1EH)	$\rightarrow$	>^	(3EH, 5EH)
US	(1FH)	$\rightarrow$	>_	(3EH, 5FH)

② How to send a special code

>	(3EH)	$\rightarrow$	>0	(3EH, 30H)
---	-------	---------------	----	------------

③ How to send a Kanji code

Shift JIS

JIS hexadecimal

#### (10) QR code

When manual mode is selected in the Format Command

• Numeric mode, alphanumeric and symbol mode, Kanji mode

Mode selection Data to be printed
-----------------------------------

• Binary mode

Mode selection	No. of data strings (4 digits)	Data to be printed
----------------	-----------------------------------	--------------------

• Mixed mode

Data	"," (comma)	Data	"," (comma)	Data
------	-------------	------	-------------	------

The QR code can handle all codes including alphanumerics, symbols and Kanji. Since the data compression rate varies according to codes, the code to be used is designated when the mode is selected.

Mode	Code	Details
Ν	Numerals	0 to 9
А	Alphanumerics, symbols	A to Z 0 to 9 space
		\$ % * + / :
В	Binary (8-bit)	00H to FFH
К	Kanji	Shift JIS, JIS hexadecimal

If mixed mode is selected, up to 200 modes can be selected in a QR code.

When the automatic mode is selected in the Format Command for a QR code:

Data to be printed

[Transfer code for QR code]

$\square$	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0	NUL	DLE	SP	0	@	Ρ	ì	р								
1	SOH	DC1	!	1	А	Q	а	q								
2	STX	DC2	"	2	В	R	b	r								
3	ETX	DC3	#	3	С	S	с	s								
4	EOT	DC4	\$	4	D	Т	d	t								
5	ENQ	NAK	%	5	Е	U	е	u								
6	ACK	SYN	&	6	F	V	f	v								
7	BEL	ETB	,	7	G	W	g	w								
8	BS	CAN	(	8	Н	Х	h	х								
9	HT	EM	)	9	Ι	Y	i	у								
А	LF	SUB	*	:	J	Ζ	j	z								
В	VT	ESC	+	;	К	[	k	{								
С	FF	FS	,	<	L	\	Ι									
D	CR	GS	-	=	М	]	m	}								
Е	SO	RS	•	>	Ν	^	n	~								
F	SI	US	/	?	0	_	0	DEL								

\* The shaded parts are Japanese. They are omitted here.

 $\ensuremath{\textcircled{}}$  How to send control code data

② How to send a special code


> (3EH)  $\rightarrow$  >0 (3EH, 30H)

③ How to send a Kanji code


Shift JIS JIS hexadecimal (For details, refer to the section for the Bar Code Data Command.)

Examples of data designation for QR code

① Alphanumeric mode: ABC123

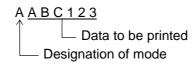

<sup>②</sup> Binary mode: 01H, 03H, 05H

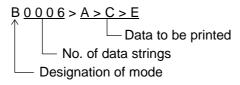

③ Mixed mode

Numeric mode	:	123456
Kanji mode	:	Kanji data
Binary mode	:	aアiイuウeエoオ
Alphanumeric and symbol mode	:	ABC

N <u>1 2 3 4 5 6</u> , K <u>Kanji data</u> , B <u>0 0 1 0 a ア i イ u ウ e エ o オ ,</u> A <u>A B C</u>						
$\uparrow$ Data to be $\uparrow$ Data to be $\uparrow$ No. of data Data to be printed $\uparrow$ Data to be	)					
printed printed strings printed						
Designation of mode						

④ Automatic mode

When the same data as  $\ensuremath{\mathfrak{I}}$  above is designated in automatic mode:

<u>123456 Kanji data a アi イu ウe エo オABC</u> Data to be printed

#### (11) Postal code

## Customer bar code

	2	3	4	5	6	
0		0		Р		
1		1	А	Q		
2		2	В	R		
2 3		3	С	S		
4		4	D	Т		
5		5	Е	U		
6		6	F	V		
7		7	G	W		
8		8	Н	Х		
9		9	Ι	Y Z		
Α			J	Ζ		
В			К			
С			L			
D E	_		М			
Е			Ν			
F			0			

#### RM4SCC

	2	3	4	5	6	
0		0		Р		
1		1	А	Q		
2		2	В	R		
2 3		3	С	S		
4		4	D	Т		
5		5	Ш	U		
6		6	F	V W		
7		7	G	W		
8	(	8	Н	Х		
9	)	9	Ι	Y Z		
9 A			J	Ζ		
B C D			К			
С			L			
D			М			
Е			Ν			
F			0			

## POSTNET

	2	3	4	5	6	7
0		0				
1		1				
2 3 4		2 3				
3		3				
4		4				
5		5				
6		6				
7 8		7				
8		8				
9		9				
Α						
В						
B C D						
D						
E F						
F						

## KIX CODE

	2	3	4	5	6	7
0		0		Р		р
1		1	А	Q	а	q
2		2	В	R	b	r
3		3	С	S	с	s
4		4	D	Т	d	t
5		5	Е	U	е	u
6		6	F	V	f	v
7		7	G	W	g	w
8		8	Н	Х	h	х
9		9	Ι	Υ	i	у
А			J	Ζ	j	z
В			К		k	
С			L		Ι	
D			М		m	
Ш			Ν		n	
F			0		0	

\* "(" or ")" can be designated only as a start/stop code.
These should not be entered in data.
If these are entered between data, no bar code is drawn.

#### (12) MaxiCode

	Character	Code	Set A	Code	Set B	Code Set C		Code Set D		Code Set E	
	llue		<b>.</b>		<b>.</b>						
Decimal	Binary	Character	Decimal	Character ،	Decimal	Character	Decimal	Character	Decimal	Character	Decimal
0	000000	CR	13		96 07	À	192	à	224	NUL	0
1	000001	A	65 65	a	97	Á	193	á	225	SOH	1
2	000010	B	66 67	b	98	Â Ã	194	â	226	STX	2
3	000011	C D	67 68	C	99 100	Ä	195	ã	227	ETX EOT	3
4	000100		68 60	d	100	Å	196	ä å	228		4
5 6	000101 000110	E F	69 70	e f	101 102	Æ	197 198	æ	229 230	ENQ ACK	5 6
7	000110	G	70 71		102		198		230	BEL	7
8	001000	H	72	g h	103	Ç È É	200	Ç è	231	BS	8
9	001000		73	i	104	É	200	é	232	HT	9
10	001001	J	74	j	105	Ê	202	ê	234	LF	10
11	001011	ĸ	75	k	107	Ê Ë	203	ë	235	VT	11
12	001100	L	76	1	108	ì	204	ì	236	FF	12
13	001101	М	77	m	109	Í	205	í	237	CR	13
14	001110	Ν	78	n	110	Î	206	î	238	SO	14
15	001111	0	79	0	111	Ï	207	ï	239	SI	15
16	010000	P	80	р	112	Ð	208	ð	240	DLE	16
17	010001	Q	81	q	113	Ñ	209	ñ	241	DC1	17
18	010010	R	82	r	114	Ò	210	ò	242	DC2	18
19	010011	S	83	s	115	Ó	211	ó	243	DC3	19
20	010100	Т	84	t	116	Ô	212	ô	244	DC4	20
21	010101	U	85	u	117	Õ	213	õ	245	NAK	21
22	010110	V	86	v	118	Ö	214	ö	246	SYN	22
23	010111	W	87	w	119	×	215	÷	247	ETB	23
24	011000	Х	88	х	120	Ø	216	ø	248	CAN	24
25	011001	Y	89	У	121	Ù	217	ù	249	EM	25
26	011010	Z	90	Z	122	Ú	218	ú	250	SUB	26
27	011011	[E0		ES [E		[E		[E0		[E	
28 29	011100 011101	FS GS	28 29	FS GS	28 29	FS GS	28 29	FS GS	28 29	[Pa	-
29 30	011101 011110	RS	29 30	RS	29 30	RS	29 30	RS	29 30	[Pa ESC	adj 27
30	011110	[N		[N			30  S]	[N		E3C [N	
32	100000	Space	32	(	3j 123	Û	219	û	251	FS	28
33	100000	[Pa		( [Pa		Ü	220	ü	252	GS	29
34	100010	"	34	)	125	Ý	221	ý	253	RS	30
35	100011	#	35	~	126	Þ	222	þ	254	US	31
36	100100	\$	36	DEL	127	ß	223	ÿ	255	{C159}	159
37	100101	%	37	;	59	ą	170	i	161	NBSP	160
38	100110	&	38	<	60	7	172	÷.	168	¢	162
39	100111	"	39	=	61	±	177	«	171	£	163
40	101000	(	40	>	62	2	178	-	175	¤	164
41	101001	)	41	?	63	3	179	٥	176	¥	165
42	101010	"	42	[	91		181	'	180		166
43	101011	+	43	١	92	1	185	•	183	§	167
44	101100	,	44	]	93	0	186		184	©	169
45	101101	-	45	^	94	1/4	188	»	187	SHY	173
46	101110	•	46	-	95	1/2	189	; (010)	191	®	174
47	101111	/	47	Space	32	<sup>3</sup> / <sub>4</sub>	190	{C138}	138	¶	182
48	110000	0	48	,	44	{C128}	128	{C139}	139	{C149}	149
49	110001	1	49 50	•	46	{C129}	129	{C140}	140	{C150}	150
50 51	110010	2	50 51		47 59	{C130}	130	{C141}	141 142	{C151}	151 152
51 52	110011 110100	3 4	51 52	: @	58 64	{C131}	131 132	{C142}	142 143	{C152}	152 153
52 53	110100	4 5	52 53	1	64 33	{C132} {C133}	132	{C143} {C144}	143	{C153} {C154}	153 154
53 54	110101	6	53 54		33 124	{C133} {C134}	133	{C144} {C145}	144	{C154} {C155}	154
55	110110	7	54 55	I [Pa		{C134} {C135}	134	{C145} {C146}	145	{C155} {C156}	155
56	111000	8	56	[2 Sh		{C136}	136	{C140} {C147}	147	{C150} {C157}	157
57	111000	9	57	[2 01		{C130} {C137}	137	{C148}	148	{C158}	158
58	111010	:	58	[Pa		[Late		[Latc		[Lato	
59	111011	[Shif		[Shit		Space	32	Space	32	Space	32
60	111100	[Shif	-	[Shit			In C]	[Shif		[Shi	
61	111101	[Shif		[Shit	-		ft D]	[Lock	-	[Shi	
62	111110	[Shif		[Shi	ft E]	_	ft E]	[Shif	tE]	[Lock	
63	111111	[Lato	hB]	[Lato	h A]	[Late	ch B]	[Latc	h B]	[Lato	

 $\ensuremath{\mathbb O}$  How to send control code data

	(01H) (02H)	$\rightarrow$ $\rightarrow$	>A >B	(3EH, 41H) (3EH, 42H)
to				
GS	(1DH)	$\rightarrow$	>]	(3EH, 5DH)
RS	(1EH)	$\rightarrow$	>^	(3EH, 5EH)
US	(1FH)	$\rightarrow$	>_	(3EH, 5FH)

 $\ensuremath{\textcircled{}^\circ}$  How to send a special code

>	(3EH)	$\rightarrow$	>0	(3EH, 30H)
---	-------	---------------	----	------------

 $\ensuremath{\mathfrak{I}}$  How to send a Kanji code

Shift JIS JIS hexadecimal (For details, refer to the section for the Bar Code Data Command.)

**NOTE:** NUL data in the table cannot be used, however, it can be designated. If it is designated, data following "NUL" data is not printed.

#### (13) CP code

#### [Transfer Code]

$\square$	0	1	2	3	4	5	6	7	8	9	А	В	С	D	Е	F
0	NUL	DLE	SP	0	@	Р	`	р								
1	SOH	DC1	!	1	А	Q	а	q								
2	STX	DC2	"	2	В	R	b	r								
3	ETX	DC3	#	3	С	S	с	s								
4	EOT	DC4	\$	4	D	Т	d	t								
5	ENQ	NAK	%	5	Е	U	е	u								
6	ACK	SYN	&	6	F	V	f	v								
7	BEL	ETB	,	7	G	W	g	w								
8	BS	CAN	(	8	Н	Х	h	х								
9	HT	EM	)	9	Ι	Υ	i	у								
Α	LF	SUB	*	:	J	Ζ	j	z								
В	VT	ESC	+	;	К	[	k	{								
С	FF	FS	,	<	L	١	Ι									
D	CR	GS	-	=	М	]	m	}								
Е	SO	RS		>	Ν	^	n	~								
F	SI	US	/	?	0	_	0	$\triangle$								

 $\ensuremath{\mathbb O}$  How to send control code data

NUL	(00H)	$\rightarrow$	>@	(3EH, 40H)
SOH	(01H)	$\rightarrow$	>A	(3EH, 41H)
STX	(02H)	$\rightarrow$	>B	(3EH, 42H)
to				
GS	(1DH)	$\rightarrow$	>]	(3EH, 5DH)
RS	(1EH)	$\rightarrow$	>^	(3EH, 5EH)
US	(1FH)	$\rightarrow$	>_	(3EH, 5FH)

 $\ensuremath{@}$  How to send a special code

>	(3EH)	$\rightarrow$	>0	(3EH, 30H)
---	-------	---------------	----	------------

③ How to send a Kanji code

Shift JIS

JIS hexadecimal

# 14. DRAWING OF BAR CODE DATA

Field to be incremented/decremented

- (The absence of a solid line invalidates incrementing/decrementing.)
- : Field subject to printing numerals under bars.

#### Type of Bar Code: JAN8, EAN8

(1) No affix

No. of Input Digits		
8 digits	Input Data	$ \begin{array}{ c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 \\ \hline & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$
	Drawing Data	$\begin{array}{ c c c c c c }\hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 \\ \hline \hline \end{array}$
Other than 8 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
8 digits	Input Data	$ \begin{array}{ c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 \\ \hline & & & & & & \\ \hline & & & & & & \\ \hline & & & &$
	Drawing Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 \\ \hline \end{array} $
Other than 8 digits		Not to be drawn

No. of Input Digits		
	Input Data	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
7 digits	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> C/D Affix a modulus 10 C/D.
Other than 7 digits		Not to be drawn

## Type of Bar Code: JAN13, EAN13

#### (1) No affix

No. of Input Digits		
13 digits	Input Data	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	
Other than 13 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
13 digits	Input Data	$\begin{array}{ c c c c c c c c }\hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} & D_{11} & D_{12} & D_{13} \\ \hline & & & & & & & & & & & & & & & & & &$
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 13 digits		Not to be drawn

## (3) Auto affix of modulus 10

No. of Input Digits		
	Input Data	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
12 digits	Drawing Data	D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         C/D
Other than 12 digits		Not to be drawn

## (4) Auto affix of modulus 10 + price C/D 4 digits

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
11 digits	Drawing Data	D2         D3         D4         D5         D6         D7         P/CD         D8         D9         D10         D11         C/D           Affix a modulus 10 C/D.           Affix price C/D 4 digits.
Other than 11 digits		Not to be drawn

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
11 digits	Drawing Data	D2         D3         D4         D5         D6         P/CD         D7         D8         D9         D10         D11         C/D           Affix a modulus 10 C/D.         Affix price C/D 5 digits.         Affix a modulus 10 C/D.         Affix price C/D 5 digits.         Affix a modulus 10 C/D.         Affix price C/D 5 digits.         Af
Other than 11 digits		Not to be drawn

## Type of Bar Code: UPC-A

## (1) No affix

No. of Input Digits		
12 digits	Input Data Drawing	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Data	
Other than 12 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
12 digits	Input Data	$ \begin{array}{ c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} & D_{11} & D_{12} \\ \hline To be checked as modulus 10 C/D - \end{array} $
0	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 12 digits		Not to be drawn

## (3) Auto affix of modulus 10

No. of Input Digits		
	Input Data	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
11 digits	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> C/D Affix a modulus 10 C/D.
Other than 11 digits		Not to be drawn

## (4) Auto affix of modulus 10 + price C/D 4 digits

No. of Input Digits		
10 digits	Input Data	$ \begin{array}{ c c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} \\ \hline \end{array} $
	Drawing Data	$\begin{array}{ c c c c c c c c }\hline \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & P/CD & D_7 & D_8 & D_9 & D_{10} & C/D \\\hline \hline & & & & & & & & & & & & & & & & & $
		Affix price C/D 4 digits.
Other than 10 digits		Not to be drawn

No. of Input Digits		
	Input Data	$\begin{bmatrix} D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} \end{bmatrix}$
10 digits	Drawing Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & P/CD & D_6 & D_7 & D_8 & D_9 & D_{10} & C/D \\ \hline & & & & & & & & & & & & & & & & & &$
Other than 10 digits		Not to be drawn

## Type of Bar Code: UPC-E

## (1) No affix

No. of Input Digits		
7 digits	Input Data	$D_1$ $D_2$ $D_3$ $D_4$ $D_5$ $D_6$ $D_7$ To be checked as modulus 10 C/D
	Drawing Data	$0  D_1  D_2  D_3  D_4  D_5  D_6  D_7$
Other than 7 digits		Not to be drawn

## (2) Modulus 10 check

No. of Input Digits		
7 digits	Input Data	$D_1$ $D_2$ $D_3$ $D_4$ $D_5$ $D_6$ $D_7$ To be checked as modulus 10 C/D
	Drawing Data	$0  D_1  D_2  D_3  D_4  D_5  D_6  D_7$
Other than 7 digits		Not to be drawn

No. of Input Digits		
6 digits	Input Data	$D_1$ $D_2$ $D_3$ $D_4$ $D_5$ $D_6$ Calculate and reflect modulus 10 in the bar code.
	Drawing Data	$0  \boxed{D_1  D_2  D_3  D_4  D_5  D_6} C/D$
Other than 6 digits		Not to be drawn

# Type of Bar Code: JAN8 +2 digits, EAN8 + 2 digits

#### (1) No affix

No. of Input Digits		
10 digits	Input Data	$ \begin{array}{ c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} \\ \hline & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$
	Drawing Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 \\ \hline \hline & & & & & \\ \hline & & & & & \\ \hline & & & &$
Other than 10 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
10 digits	Input Data Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 10 digits		Not to be drawn

No. of Input Digits		
9 digits	Input Data	$\begin{array}{ c c c c c c c c c }\hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\\hline \end{array}$
	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> C/D D <sub>8</sub> D <sub>9</sub> Affix a modulus 10 C/D.
Other than 9 digits		Not to be drawn

# Type of Bar Code: JAN8 +5 digits, EAN8 + 5 digits

#### (1) No affix

No. of Input Digits		
13 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 13 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
13 digits	Input Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} & D_{11} & D_{12} & D_{13} \\ \hline & & & & & & & & & & & & & & & & & &$
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 13 digits		Not to be drawn

No. of Input Digits		
12 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> C/D D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub>
Other than 12 digits		Not to be drawn

#### Type of Bar Code: JAN13 +2 digits, EAN13 + 2 digits

#### (1) No affix

No. of Input Digits		
15 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 15 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
15 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 15 digits		Not to be drawn

## (3) Auto affix of modulus 10

No. of Input Digits		
14 digits	Input Data Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub> D <sub>13</sub> D <sub>14</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub> C/D D <sub>13</sub> D <sub>14</sub> Affix a modulus 10 C/D.
Other than 14 digits		Not to be drawn

## (4) Auto affix of modulus 10 + price C/D 4 digits

No. of Input Digits		
	Input Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub> D <sub>13</sub>
13 digits	Drawing Data	D2         D3         D4         D5         D6         D7         P/CD         D8         D9         D10         D11         C/D         D12         D13           Affix a modulus 10 C/D.           Affix price C/D 4 digits.
Other than 13 digits		Not to be drawn

( )		
No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
13 digits	Drawing Data	D2         D3         D4         D5         D6         P/CD         D7         D8         D9         D10         D11         C/D         D12         D13           Affix a modulus 10 C/D.
Other than 13 digits		Not to be drawn

#### Type of Bar Code: JAN13 +5 digits, EAN13 + 5 digits

#### (1) No affix

No. of Input Digits		
18 digits	Input Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13         D14         D15         D16         D17         D18           To be checked as modulus 10 C/D
	Drawing Data	D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13           D14         D5         D6         D7         D8         D9         D10         D11         D12         D13
Other than 18 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
18 digits	Input Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13         D14         D15         D16         D17         D18           To be checked as modulus 10 C/D
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 18 digits		Not to be drawn

## (3) Auto affix of modulus 10

No. of Input Digits		
17 digits	Input Data Drawing Data	D1       D2       D3       D4       D5       D6       D7       D8       D9       D10       D11       D12       D13       D14       D15       D16       D17         D2       D3       D4       D5       D6       D7       D8       D9       D10       D11       D12       C/D       D13       D14       D15       D16       D17         D2       D3       D4       D5       D6       D7       D8       D9       D10       D11       D12       C/D       D13       D14       D15       D16       D17         Affix a modulus 10 C/D.
Other than 17 digits		Not to be drawn

## (4) Auto affix of modulus 10 + price C/D 4 digits

No. of Input Digits		
	Input Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub> D <sub>13</sub> D <sub>14</sub> D <sub>15</sub> D <sub>16</sub>
16 digits	Drawing Data	D2         D3         D4         D5         D6         D7         P/CD         D8         D9         D10         D11         C/D         D12         D13         D14         D15         D16           Affix a modulus 10 C/D.
		Affix price C/D 4 digits.
Other than 16 digits		Not to be drawn

No. of Input Digits		
16 digits	Input Data Drawing Data	D1       D2       D3       D4       D5       D6       D7       D8       D9       D10       D11       D12       D13       D14       D15       D16         D2       D3       D4       D5       D6       P/CD       D7       D8       D9       D10       D11       C/D       D12       D13       D14       D15       D16         D2       D3       D4       D5       D6       P/CD       D7       D8       D9       D10       D11       C/D       D12       D13       D14       D15       D16         Affix price C/D 5 digits.
Other than 16 digits		Not to be drawn

## Type of Bar Code: UPC-A + 2 digits

## (1) No affix

No. of Input Digits		
14 digits	Input Data	
		To be checked as modulus 10 C/D
	Drawing Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12
Other than 14 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
14 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 14 digits		Not to be drawn

## (3) Auto affix of modulus 10

No. of Input Digits		
13 digits	Input Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13
	Drawing Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} & D_{11} & C/D \\ \hline $
Other than 13 digits		Not to be drawn

## (4) Auto affix of modulus 10 + price C/D 4 digits

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
12 digits	Drawing Data	D1         D2         D3         D4         D5         D6         P/CD         D7         D8         D9         D10         C/D         D11         D12           Affix a modulus 10 C/D.
Other than 12 digits		Not to be drawn

No. of Input Digits		
	Input Data	
12 digits	Drawing Data	$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$
Other than 12 digits		Not to be drawn

## Type of Bar Code: UPC-A + 5 digits

## (1) No affix

No. of Input Digits		
	Input	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13         D14         D15         D16         D17
17 digits	Data	To be checked as modulus 10 C/D
	Drawing Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12           D13         D4         D5         D6         D7         D8         D9         D10         D11         D12
Other than 17 digits		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
	Input Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13         D14         D15         D16         D17
17 digits		To be checked as modulus 10 C/D-
	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Other than 17 digits		Not to be drawn

## (3) Auto affix of modulus 10

No. of Input Digits		
16 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> C/D 
Other than 16 digits		Not to be drawn

## (4) Auto affix of modulus 10 + price C/D 4 digits

No. of Input Digits		
	Input Data	$ \begin{tabular}{ c c c c c c c c c c c c c c c c c c c$
15 digits	Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
		Affix price C/D 4 digits.
Other than 15 digits		Not to be drawn

No. of Input Digits		
15 digits	Input Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13         D14         D15
	Drawing Data	D1         D2         D3         D4         D5         P/CD         D6         D7         D8         D9         D10         C/D         D11         D12         D13         D14         D15           Affix a modulus 10 C/D.           Affix price C/D 5 digits.
Other than 15 digits		Not to be drawn

## Type of Bar Code: UPC-E + 2 digits

## (1) No affix

No. of Input Digits		
9 digits	Input Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline & & & & & & \\ \hline & & & & & & \\ \hline & & & &$
	Drawing Data	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$
Other than 9 digits		Not to be drawn

## (2) Modulus 10 check

No. of Input Digits		
9 digits	Input Data	$ \begin{array}{ c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$
	Drawing Data	$0  \boxed{D_1  D_2  D_3  D_4  D_5  D_6  D_7}  \boxed{D_8  D_9}$
Other than 9 digits		Not to be drawn

No. of Input Digits		
8 digits	Input Data	
	Drawing Data	$0  \boxed{D_1  D_2  D_3  D_4  D_5  D_6  C/D}  \boxed{D_7  D_8}$
Other than 8 digits		Not to be drawn

## Type of Bar Code: UPC-E + 5 digits

## (1) No affix

No. of Input Digits		
12 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$
Other than 12 digits		Not to be drawn

## (2) Modulus 10 check

No. of Input Digits		
12 digits	Input Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} & D_{11} & D_{12} \\ \hline & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$
	Drawing Data	$0  \boxed{D_1  D_2  D_3  D_4  D_5  D_6  D_7}  \boxed{D_8  D_9  D_{10}  D_{11}  D_{12}}$
Other than 12 digits		Not to be drawn

No. of Input Digits		
11 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	$0  \boxed{D_1  D_2  D_3  D_4  D_5  D_6  C/D}  \boxed{D_7  D_8  D_9  D_{10}  D_{11}}$
Other than 11 digits		Not to be drawn

## Type of Bar Code: MSI

#### (1) No affix

( )		
No. of Input Digits		
Max. 15 digits	Input Data Drawing Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline & & & & & & & & \\ \hline & & & & & & & \\ \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline \end{array} $ Not recognized as a check digit.
16 digits or more		Not to be drawn

#### (2) IBM modulus 10 check

No. of Input Digits		
Min. 2 digits Max. 15 digits (including C/D)	Input Data	$ \begin{array}{ c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} \\ \hline & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$
	Drawing Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 & D_{10} \\ \hline \end{array} $
1 digit 16 digits or more		Not to be drawn

#### (3) Auto affix of IBM modulus 10

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline \end{array} $
Max. 14 digits	Drawing Data	
15 digits or more		Not to be drawn

#### (4) IBM modulus 10 + Auto affix of IBM modulus 10

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline \end{array} $
Max. 13 digits	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>6</sub> D <sub>9</sub> C/D <sub>1</sub> C/D <sub>2</sub> Affix IBM modulus 10. Affix IBM modulus 10.
14 digits or more		Not to be drawn

#### (5) IBM modulus 11 + Auto affix of IBM modulus 10

No. of Input Digits		
Max. 13 digits	Input Data Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
14 digits or more		Not to be drawn

## Type of Bar Code: Interleaved 2 of 5

#### (1) No affix

No. of Input Digits		
Max. 126 digits	Input Data	$D_1$ $D_2$ $D_3$ $D_4$ $D_5$ $D_6$ $D_7$ $D_8$ $D_9$ Not recognized as a check digit.
	Drawing Data	0 D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub>
127 digits or more		Not to be drawn

#### (2) Modulus 10 check

No. of Input Digits		
Min. 2 digits Max. 126 digits (including C/D)	Input Data	$ \begin{array}{ c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline & & & & & & \\ \hline & & & & & \\ \hline & & & &$
	Drawing Data	$\begin{array}{ c c c c c c c c }\hline 0 & D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline \end{array}$
1 digit 127 digits or more		Not to be drawn

## (3) Auto affix of modulus 10

No. of Input Digits		
Max. 125 digits	Input Data	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>6</sub> D <sub>9</sub> C/D Affix a modulus 10 C/D.
126 digits or more		Not to be drawn

## (4) Auto affix of DBP modulus 10

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline \end{array} $
Max. 125 digits	Drawing Data	
126 digits or more		Not to be drawn

## Type of Bar Code: Industrial 2 of 5

#### (1) No affix

No. of Input Digits		
Max. 126 digits	Input Data	$ \begin{array}{ c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline & & & & & & & \\ \hline & & & & & & \\ \hline & & & &$
	Drawing Data	0 D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub>
127 digits or more		Not to be drawn

#### (2) Modulus check character check

No. of Input Digits		
Min. 2 digits Max. 126 digits (including C/D)	Input Data	$ \begin{array}{ c c c c c c } \hline D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \\ \hline & & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$
	Drawing Data	$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$
1 digit 127 digits or more		Not to be drawn

#### (3) Auto affix of modulus check character

No. of Input Digits		
Max. 125 digits	Input Data	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>6</sub> D <sub>9</sub> C/D Affix a modulus check character.
126 digits or more		Not to be drawn

# Type of Bar Code: CODE39 (Standard)

## (1) No affix

No. of Input Digits		
Max. 123 digits	Input Data	St       D1       D2       D3       D4       D5       D6       D7       D8       D9       Sp         Start code       Start code       Stop code       Not recognized as a check digit.
	Drawing Data	St         D1         D2         D3         D4         D5         D6         D7         D8         D9         Sp
124 digits or more		Not to be drawn

## (2) Modulus 43 check

No. of Input Digits		
Min. 2 digits Max. 123 digits (including C/D)	Input Data Drawing Data	St       D1       D2       D3       D4       D5       D6       D7       D8       D9       Sp         Start code       Start code       Stop code       To be checked as modulus 43 C/D         St       D1       D2       D3       D4       D5       D6       D7       D8       D9       Sp         St       D1       D2       D3       D4       D5       D6       D7       D8       D9       Sp
	Data	
1 digit 124 digits or more		Not to be drawn

No. of Input Digits		
Max. 122 digits	Input Data	St         D1         D2         D3         D4         D5         D6         D7         D8         D9         Sp           Start code         Storp code
Wax. 122 digits	Drawing Data	St       D1       D2       D3       D4       D5       D6       D7       D8       D9       C/D       Sp         Affix a modulus 43 C/D.
123 digits or more		Not to be drawn

## Type of Bar Code: CODE39 (Full ASCII)

#### (1) No affix

No. of Input Digits		
Max. 60 digits	Input Data	$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	St         D1         D2         D3         D4         D5         D6         D7         D8         D9         Sp
61 digits or more		Not to be drawn

## (2) Modulus 43 check

No. of Input Digits		
Min. 2 digits Max. 60 digits (including C/D)	Input Data Drawing Data	$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$
1 digit 61 digits or more		Not to be drawn

## (3) Auto affix of modulus 43

No. of Input Digits		
	Input Data	St $D_1$ $D_2$ $D_3$ $D_4$ $D_5$ $D_6$ $D_7$ $D_8$ $D_9$ Sp         Start code       Stop code
Max. 60 digits	Drawing Data	St       D1       D2       D3       D4       D5       D6       D7       D8       D9       C/D       Sp         Affix a modulus 43 C/D.
61 digits or more		Not to be drawn

**NOTE:** Numerals under bars are not characters corresponding to the bars but the characters of the codes received are drawn.

#### Type of Bar Code: NW7

- (1) No affix
  - C/D check Auto affix

No. of Input Digits		
Max. 123 digits	Input Data	St         D1         D2         D3         D4         D5         D6         D7         D8         D9         Sp           Start code
	Drawing Data	St     D1     D2     D3     D4     D5     D6     D7     D8     D9     Sp
124 digits or more		Not to be drawn

Type of Bar Code: No auto selection of CODE128 (Character ">" to be also counted as a digit)

- (1) No affix
  - PSEUDO103 check Auto affix of PSEUDO103

No. of Input Digits		
Min. 3 digits Max. 125 digits (including start code)	Input Data Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
2 digits or less 126 digits or more		Not to be drawn

**NOTE:** The following characters are not drawn as numerals under bars. NUL (00H) to US (1FH), FNC1, FNC2, FNC3, SHIFT, CODE A, CODE B, CODE C

Type of Bar Code: Auto selection of CODE 128

- (1) No affix
  - C/D check

Auto affix of C/D

No. of Input Digits		
Max. 60 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
Max. 00 digits	Drawing	St         D1         D2         D3         D4         AD         D5         D6         D7         AD         D8         D9         D10         D11         C/D         Sp
	Data	Start code Selection code Affix
		PSEUDO103 C/D.
61 digits or more		Not to be drawn

**NOTE:** The following characters are not drawn as numerals under bars. NUL (00H) to US (1FH), FNC1, FNC2, FNC3, SHIFT, CODE A, CODE B, CODE C

## Type of Bar Code: CODE93

(1) No affixC/D checkAuto affix of C/D

No. of Input Digits		
Max. 60 digits	Input Data Drawing Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
		Start code Affix a modulus 47 "K" C/D.
61 digits or more		Not to be drawn

**NOTE:** Numerals under bars are not characters corresponding to the bars but the characters of the codes received are drawn.

Type of Bar Code: UCC/EAN128

(1) No affix

C/D check Auto affix of C/D

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
19 digits	Drawing Data	St       FNC1       D1       D2       D3       D4       D5       D6        D14       D15       D16       D17       D18       D19       C/D1       C/D2       Sp         Start code         Affix a modulus 10 C/D.         Stop code
Other than 19 digits		Not to be drawn

## Type of Bar Code: POSTNET

(1) Auto affix of dedicated C/D

No. of Input Digits		
	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
5 digits	Drawing Data	St $D_1$ $D_2$ $D_3$ $D_4$ $D_5$ C/D       Sp         Start code       Stop code         Dedicated check digit
	Input Data	$\begin{bmatrix} D_1 & D_2 & D_3 & D_4 & D_5 & D_6 & D_7 & D_8 & D_9 \end{bmatrix}$
9 digits	Drawing Data	St       D1       D2       D3       D4       D5       D6       D7       D8       D9       C/D       Sp         L       Start code        Stop code        Dedicated check digit
	Input Data	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
11 digits	Drawing Data	St       D1       D2       D3       D4       D5       C/D       Sp       Fr       D6       D7       D8       D9       D10       D11       C/D       Fr         L       Start code        Frame        Frame
Other than 5, 9, and 11 digits		Not to be drawn

## Type of Bar Code: RM4SCC

## (1) Auto affix of dedicated C/D

No. of Input Digits		
	Input Data	(St) D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub> (Sp)
12 digits	Drawing Data	St       D1       D2       D3       D4       D5       D6       D7       D8       D9       D10       D11       D12       C/D       Sp         Start code
13 digits or more		Not to be drawn

## Type of Bar Code: KIX CODE

## (1) No affix

No. of Input Digits		
18 digits	Input Data	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Drawing Data	D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13         D14         D16         D17         D18
19 digits or more		Not to be drawn

#### Type of Bar Code: Customer bar code

(1) Auto affix of dedicated C/D

No. of Input Digits			
20 digits	Input Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub> D <sub>13</sub> D <sub>14</sub> D <sub>15</sub> D <sub>16</sub> D <sub>17</sub> D <sub>18</sub> D <sub>19</sub> D <sub>20</sub>	
	Drawing Data	St         D1         D2         D3         D4         D5         D6         D7         D8         D9         D10         D11         D12         D13         D14         D15         D16         D19         D20         C/D         Sp           Start code         Dedicated check digit           Stop code         Stop code	
21 digits or more		Data of up to 20 digits is drawn. Data of 21 digits or more is discarded.	

## Type of Bar Code: Highest priority customer bar code

(1) Auto affix of dedicated C/D

No. of Input Digits		
	Input Data	D <sub>1</sub> D <sub>2</sub> D <sub>3</sub> D <sub>4</sub> D <sub>5</sub> D <sub>6</sub> D <sub>7</sub> D <sub>8</sub> D <sub>9</sub> D <sub>10</sub> D <sub>11</sub> D <sub>12</sub> D <sub>13</sub> D <sub>14</sub> D <sub>15</sub> D <sub>16</sub> D <sub>17</sub> D <sub>18</sub> D <sub>19</sub>
19 digits	Drawing Data	St       D1       D2       D3       D4       D5       D6       D7       D8       D9       D10       D11       D12       D13       D14       D15       D16       D19       CC7       C/D       Sp         Start code       CC7       CC7       C/D       Sp         Dedicated check digit       Stop code
20 digits or more		Data of up to 19 digits is drawn. Data of 20 digits or more is discarded.

# 15. AUTOMATIC ADDING OF START/STOP CODE

Type of Bar Code	Designation of Start/Stop Code	Input Data	Dra	wing Data
		12345ABC	Standard	*12345ABC*
			Full ASCII	*12345ABC*
	F	*12345ABC	Standard	*12345ABC*
			Full ASCII	*12345ABC*
	F	12345ABC*	Standard	*12345ABC*
			Full ASCII	*12345ABC*
	F	*12345ABC*	Standard	*12345ABC*
	Omit		Full ASCII	*12345ABC*
	(No designation)	12345*ABC	Standard	*12345*ABC*
			Full ASCII	*12345/JABC*
	F	**12345ABC	Standard	**12345ABC*
			Full ASCII	*/J12345ABC*
	F	*12345ABC**	Standard	*12345ABC**
			Full ASCII	*12345ABC/J*
	F	*12345*ABC*	Standard	*12345*ABC*
			Full ASCII	*12345/JABC*
		12345ABC	Standard	*12345ABC
			Full ASCII	*12345ABC
		*12345ABC	Standard	**12345ABC
			Full ASCII	*/J12345ABC
		12345ABC*	Standard	*12345ABC*
			Full ASCII	*12345ABC*
	Add start code	*12345ABC*	Standard	**12345ABC*
CODE 39			Full ASCII	*/J12345ABC*
		12345*ABC	Standard	*12345*ABC
			Full ASCII	*12345/JABC
		**12345ABC	Standard	***12345ABC
			Full ASCII	*/J/J12345ABC
		*12345ABC**	Standard	**12345ABC**
			Full ASCII	*/J12345ABC/J*
		*12345*ABC*	Standard	**12345*ABC*
			Full ASCII	*/J12345/JABC*
		12345ABC	Standard	12345ABC*
			Full ASCII	12345ABC*
	F	*12345ABC	Standard	*12345ABC*
			Full ASCII	*12345ABC*
	F	12345ABC*	Standard	12345ABC**
	Add stop code		Full ASCII	12345ABC/J*
		*12345ABC*	Standard	*12345ABC**
			Full ASCII	*12345ABC/J*
		12345*ABC	Standard	12345*ABC*
			Full ASCII	12345/JABC*
		**12345ABC	Standard	**12345ABC*
			Full ASCII	*/J12345ABC*
		*12345ABC**	Standard	*12345ABC***
			Full ASCII	*12345ABC/J/J*
		*12345*ABC*	Standard	*12345*ABC**
			Full ASCII	*12345/JABC/J*

Type of Bar Code	Designation of Start/Stop Code	Input Data	Dra	wing Data
		12345ABC	Standard	12345ABC
			Full ASCII	12345ABC
		*12345ABC	Standard	*12345ABC
			Full ASCII	*12345ABC
	Start/stop code not added	12345ABC*	Standard	12345ABC*
			Full ASCII	12345ABC*
		*12345ABC*	Standard	*12345ABC*
CODE 39			Full ASCII	*12345ABC*
		12345*ABC	Standard	12345*ABC
			Full ASCII	12345/JABC
		**12345ABC	Standard	**12345ABC
			Full ASCII	*/J12345ABC
		*12345ABC**	Standard	*12345ABC**
			Full ASCII	*12345ABC/J*
		*12345*ABC*	Standard	*12345*ABC*
			Full ASCII	*12345/JABC*

Type of Bar Code	Designation of Start/Stop Code	Input Data	Drawing Data
		12345678	a12345678a
		a12345678	a12345678
		12345678c	12345678c
	Omit	b12345678d	b12345678d
	(No designation)	12345a678	a12345a678a
		ab12345678	ab12345678
		a12345678bc	a12345678bc
		d12345b678c	d12345b678c
		12345678	a12345678
		a12345678	aa12345678
		12345678c	a12345678c
	Add start code	b12345678d	ab12345678d
		12345a678	a12345a678
		ab12345678	aab12345678
		a12345678bc	aa12345678bc
		d12345b678c	ad12345b678c
NW7		12345678	12345678a
		a12345678	a12345678a
		12345678c	12345678ca
		b12345678d	b12345678da
	Add stop code	12345a678	12345a678a
		ab12345678	ab12345678a
		a12345678bc	a12345678bca
		d12345b678c	d12345b678ca
		12345678	12345678
		a12345678	a12345678
		12345678c	12345678c
	Start/stop code	b12345678d	b12345678d
	not added	12345a678	12345a678
		ab12345678	ab12345678
		a12345678bc	a12345678bc
		d12345b678c	d12345b678c